



POWER⁺

MODULAR UPS SYSTEM

FREESTYLE VERSION

User Guide



Release 1.6
October 2008



Har Hotzvim Industrial Park,
14 Hartom St., PO Box 45029, Jerusalem 91450, Israel
Tel: +972-2-588-8222 Fax: +972-2-582-8875
Email: info@gamatronic.co.il Website: www.gamatronic.com

Gamatronic Electronic Industries Ltd.

Har Hotzvim Industrial Park
14 Hartom St.
PO Box 45029
Jerusalem 91450
Israel
Tel: +972-2-588-8222
Fax: +972-2-582-8875
Email: info@gamatronic.co.il
Website: www.gamatronic.com

The equipment described in this document is not intended for use in connection with any application requiring fail-safe performance, such as the operation of nuclear power facilities, air traffic control or navigation systems, weapons control systems, life support systems, or any other system whose failure could lead to injury, death, environmental damage or mass destruction.

© Copyright 2008 by Gamatronic Electronic Industries Ltd. All rights reserved worldwide.

The information contained in this document is proprietary and is subject to all relevant copyright, patent and other laws protecting intellectual property, as well as any specific agreement protecting Gamatronic Electronic Industries Ltd. rights in the aforesaid information. Neither this document nor the information contained herein may be published, reproduced or disclosed to third parties, in whole or in part, without the express, prior, written permission of Gamatronic Electronic Industries Ltd. In addition, any use of this document or the information contained herein for any purposes other than those for which it was disclosed is strictly forbidden.

Gamatronic Electronic Industries Ltd. reserves the right, without prior notice or liability, to make changes in equipment design or specifications.

Information supplied by Gamatronic Electronic Industries Ltd. is believed to be accurate and reliable. However, no responsibility is assumed by Gamatronic Electronic Industries Ltd. for the use thereof nor for the rights of third parties which may be affected in any way by the use thereof.

Any representation(s) in this document concerning performance of Gamatronic Electronic Industries Ltd. product(s) are for informational purposes only and are not warranties of future performance, either express or implied. Gamatronic Electronic Industries Ltd. standard limited warranty, stated in its sales contract or order confirmation form, is the only warranty offered by Gamatronic Electronic Industries Ltd. in relation thereto.

This document may contain flaws, omissions or typesetting errors; no warranty is granted nor liability assumed in relation thereto unless specifically undertaken in Gamatronic Electronic Industries Ltd. sales contract or order confirmation. Information contained herein is periodically updated and changes will be incorporated into subsequent editions. If you have encountered an error, please notify Gamatronic Electronic Industries Ltd. All specifications are subject to change without prior notice.



TABLE OF CONTENTS

SAFETY CONSIDERATIONS	VIII
Do's	viii
Don'ts	ix
1. INTRODUCTION	1
1.1 <i>POWER+</i> has many unique features:.....	1
1.2 Ac and dc fuses	4
1.3 Ac input/output main terminals	6
1.4 System controller	6
1.5 UPS module (10 kVA / 8 kW)	6
1.6 Static Switch (ST/SW) module	6
1.7 Battery	7
2. OPERATING MODES	10
2.1 Normal operation	10
2.2 Battery operation	10
2.3 Bypass operation	10
3. USER INTERFACE.....	11
3.1 Control Panel	11
3.2 UPS module panel.....	11
3.3 Static Switch panel	12
3.4 <i>POWER+</i> control screen	13
3.5 <i>POWER+</i> operation modes	16
4. INSTALLING THE FREESTYLE IN A CABINET	19
5. SYSTEM INSTALLATION	26
5.1 Cabling.....	26
5.2 Over-Voltage Protection	33
5.3 Fuses	35
5.4 Inspections to be performed prior to installation	37
5.5 Installation Procedure.....	38
5.6 First-time Startup	39
5.7 Checks to be performed following initial startup.....	41
6. <i>POWER+</i> ROUTINE START-UP	42
6.1 Start-up after shutdown	42
6.2 <i>POWER+</i> shutdown (switching to bypass).....	44
6.3 <i>POWER+</i> total shutdown (no ac output)	44
7. <i>POWER+</i> CONTROL PANEL	45
7.1 Quick-reference summary of Power+ menu functions	46
9. <i>POWER+</i> MENU FUNCTIONS IN DETAIL	53
9.1 Main Menu	53
9.2 System controller setup verification.....	73
10. SNMP AGENT (OPTIONAL)	75
11. WIRELESS CONTROL (OPTIONAL).....	76
11.1 WING configurations.....	77
12. THE <i>POWER+</i> BUILT-IN WEB INTERFACE	79
12.1 Preliminaries to use of the Web interface	79
12.2 Main Screen.....	80
12.3 The Main Menu and its options.....	81
13. <i>POWER+</i> FREESTYLE SPECIFICATIONS	102

LIST OF FIGURES

FIGURE 1: PHOTO OF AC AND DC FUSES AND TERMINALS (50 kVA MODEL)	4
FIGURE 2: DIAGRAM OF AC AND DC FUSES AND TERMINALS (50 kVA MODEL)	4
FIGURE 3: PHOTO OF AC AND DC FUSES AND TERMINALS (100 kVA MODEL)	5
FIGURE 4: DIAGRAM OF AC AND DC FUSES AND TERMINALS (100 kVA MODEL)	5
FIGURE 5: INSTALLING THE FREESTYLE IN A RACK (A)	19
FIGURE 6: INSTALLING THE FREESTYLE IN A RACK (B)	20
FIGURE 7: INSTALLING THE FREESTYLE IN A RACK (C)	21
FIGURE 8: INSTALLING THE FREESTYLE IN A RACK (D)	22
FIGURE 9: INSTALLING THE FREESTYLE IN A RACK (E)	22
FIGURE 10: INSTALLING THE FREESTYLE IN A RACK (F)	23
FIGURE 11: INSTALLING THE FREESTYLE IN A RACK (G)	24
FIGURE 12: INSTALLING THE FREESTYLE IN A RACK (H)	25
FIGURE 13: CONNECTION DIAGRAM FOR 3-3 CONFIGURATION	27
FIGURE 14: CONNECTION DIAGRAM FOR 3-2 CONFIGURATION	29
FIGURE 15: CONNECTION DIAGRAM FOR 2-2 CONFIGURATION	31
FIGURE 16: AC INPUT FUSE ASSIGNMENTS (50 kVA MODEL)	35
FIGURE 17: AC INPUT FUSES (100 kVA MODEL)	35
FIGURE 18: DC DISTRIBUTION FUSE ASSIGNMENT (50 kVA MODEL)	36
FIGURE 19: DC DISTRIBUTION FUSE ASSIGNMENT (100 kVA MODEL)	36
FIGURE 20: START-UP SCREEN 1	39
FIGURE 21: START-UP SCREEN 2	39
FIGURE 22: START-UP SCREEN 3	39
FIGURE 23: START-UP SCREEN 4	40
FIGURE 24: DEFAULT SCREEN, WITH NO LOAD, FOR 3-PHASE OUTPUT	40
FIGURE 25: DEFAULT SCREEN, WITH NO LOAD, FOR 2-PHASE OUTPUT	40
FIGURE 26: NORMAL DISPLAY, SYSTEM UNDER LOAD (3-PHASE OUTPUT)	40
FIGURE 27: NORMAL DISPLAY, SYSTEM UNDER LOAD (2-PHASE OUTPUT)	41
FIGURE 28: CONTROL PANEL	45
FIGURE 16: MAIN MENU	53
FIGURE 17: SYSTEM DC VOLTAGES	54
FIGURE 18: POWER FACTOR 0	54
FIGURE 19: POWER FACTOR 0.5	54
FIGURE 20: POWER FACTOR 1	54
FIGURE 21: OVERALL PHASE VOLTAGES/CURRENTS	55
FIGURE 22: ELAPSED TIME	55
FIGURE 23: JUMPER SETTINGS WITHOUT REMOTE PANEL	55
FIGURE 24: JUMPER SETTINGS WITH REMOTE PANEL	55
FIGURE 25: CONTROLLER – INTERNAL VOLTAGES	55
FIGURE 26: BATTERY TEMPERATURE	55
FIGURE 27: FUSE STATUS	56
FIGURE 28: COMMUNICATION WITH INVERTER – TRANSMIT	56
FIGURE 29: COMMUNICATION WITH INVERTER – RECEIVE	56
FIGURE 30: INSTRUCTIONS	57
FIGURE 31: MODULE PHASE VOLTAGES/CURRENTS FOR MODULE 1 OF 4	57
FIGURE 32: BATTERY VOLTAGES FOR MODULE 1 OF 4	57
FIGURE 33: RESULT SCREEN FROM SELF-TEST	58
FIGURE 34: HISTORY LOGS	58
FIGURE 35: HISTORY LOG SCROLL	58

FIGURE 36: BATTERY STATUS	61
FIGURE 37: BATTERY EQUALIZING	61
FIGURE 38: TIME LEFT	61
FIGURE 39: LAST TEST	61
FIGURE 40: BATTERY CURRENT	61
FIGURE 41: BATTERY CAPACITY	62
FIGURE 42: BATTERY CURRENT LIMIT	62
FIGURE 43: ALARMS 01-12.....	62
FIGURE 44: ALARMS 13-24.....	62
FIGURE 45: ALARMS 25-32.....	62
FIGURE 46: LEVEL 1 PASSWORD ACCESS	63
FIGURE 47: SETUP MENU.....	63
FIGURE 48: SETTING AC VOLTAGE ALARM THRESHOLDS	63
FIGURE 49: SETTING AC VOLTAGE LEVELS	63
FIGURE 50: AC VOLTAGE ALARM SETUP	63
FIGURE 51: AC VOLTAGE HYSTERESIS	63
FIGURE 52: BATTERY PARAMETERS FOR ALARM.....	64
FIGURE 53: BATTERY FLOATING CHARGE SETUP FOR ALARM.....	64
FIGURE 54: ALARM BATTERY TEMPERATURE MENU.....	64
FIGURE 55: ALARM BATTERY MAXIMUM TEMPERATURE SETTING.....	64
FIGURE 56: ALARM BATTERY MINIMUM TEMPERATURE SETTING.....	64
FIGURE 57: ALARM INTEGRATION FACTOR SETTING	64
FIGURE 58: LINE CONFIGURATION MENU	65
FIGURE 59: SETTING NUMBER OF PHASES	65
FIGURE 60: SETTING THE SINE WAVE FREQUENCY.....	65
FIGURE 61: SETTING THE MODULE VOLTAGE	65
FIGURE 62: SETTING CONFIRMATION	65
FIGURE 63: OUTPUT FINE-TUNING ADJUSTMENT – SELECT PHASE	65
FIGURE 64: OUTPUT FINE-TUNING – SELECT MODULE.....	65
FIGURE 65: OUTPUT FINE-TUNING – SELECT VALUE.....	66
FIGURE 66: OUTPUT FINE-TUNING – SET FREQUENCY LIMITS.....	66
FIGURE 67: BATTERY SETTINGS MENU.....	66
FIGURE 68: BATTERY TEST VOLTAGE SETUP	66
FIGURE 69: BATTERY TEST VOLTAGE ALARM SETUP	67
FIGURE 70: CURRENT LIMIT SETUP MENU	67
FIGURE 71: BATTERY CURRENT LIMIT SETUP.....	67
FIGURE 72: CHARGE CURRENT LIMIT SETUP.....	67
FIGURE 73: TEMPERATURE COMPENSATION MENU (DISABLED).....	67
FIGURE 74: TEMPERATURE COMPENSATION MENU (ENABLED)	67
FIGURE 75: BATTERY TEST – SETTING FLOATING MODE VOLTAGES.....	67
FIGURE 76: BATTERY TEST – SET MIN. COMPENSATION VOLTAGE	68
FIGURE 77: BATTERY TEST – SET MAX. COMPENSATION VOLTAGE	68
FIGURE 78: BATTERY TEST – SETTINGS	68
FIGURE 79: BATTERY TESTING	68
FIGURE 80: BATTERY TEST – SETTING TEST PERIOD.....	68
FIGURE 81: BATTERY TEST – SETTING MAXIMUM TIME	68
FIGURE 82: SETUP – SETTING EQUALIZING/FLOATING PARAMETERS	68
FIGURE 83: SETUP – SETTING FLOATING VOLTAGE	69
FIGURE 84: BATTERY MENU, ENABLE/DISABLE OPTIONS.....	69
FIGURE 85: SETUP - SETTING REAL TIME	69
FIGURE 86: SETUP - CONFIGURING THE SITE NUMBER.....	69




FIGURE 87: SETUP - CHANGING THE PASSWORD	69
FIGURE 88: SETUP - SERVICE MENU	69
FIGURE 89: SERVICE – SELECTING THE UPS	70
FIGURE 90: SERVICE – SETTING ALARM CONTACTS	70
FIGURE 91: SERVICE – CONFIGURATION MENU	70
FIGURE 92: SERVICE – SETTING REDUNDANCY.....	70
FIGURE 93: SERVICE – SC2012 CONTROLLER RESET MENU.....	70
FIGURE 94: SERVICE – SC2012 NETWORK SETUP MENU.....	70
FIGURE 95: SERVICE – SETTING IP ADDRESS.....	71
FIGURE 96: SERVICE – CONFIGURING SNMP	71
FIGURE 97: STATIC SWITCH VOLTAGE AND FREQUENCY	71
FIGURE 98: STATIC SWITCH STATUS	71
FIGURE 99: DRY CONTACTS/ALARMS ASSOCIATION.....	72
FIGURE 100: DRY CONTACTS/ALARMS ASSOCIATION – EXAMPLE	72
FIGURE 101: CALIBRATION	72
FIGURE 102: COMMUNICATIONS	72
<i>FIGURE 103: WING GENERAL BLOCK DIAGRAM</i>	<i>76</i>
<i>FIGURE 104: WING OPTIONAL CONFIGURATIONS.....</i>	<i>78</i>
FIGURE 105: POWER+ CONTROLLER REAR PANEL.....	79
FIGURE 106: MAIN SCREEN OF THE POWER+ WEB INTERFACE.....	80
FIGURE 107: ANALYSIS OF SYSTEM INPUT AND OUTPUT VOLTAGES AND POWER	82
FIGURE 108: MODULES MEASUREMENTS AND STATUS DISPLAY	83
FIGURE 109: STATIC SWITCH DATA AND STATUS DISPLAY	84
FIGURE 110: LISTING THE LOG ENTRIES	85
FIGURE 111: THE "CONTROL" MAIN MENU OPTION SCREEN.....	87
FIGURE 112: "SEND SMS" SCREEN.....	88
FIGURE 113: CONFIGURATION MENU	91
FIGURE 114: SETTING THE POWER+ INTERNAL DATE AND TIME	92
FIGURE 115: CHANGING USERNAME AND PASSWORD OF THE WEB INTERFACE	93
FIGURE 116: DEFINE SNMP PERMISSIONS.....	94
FIGURE 117: DEFINE COMPUTERS FOR AUTO-SHUTDOWN.....	95
FIGURE 118: DEFINING SNMP TRAP TARGETS	97
FIGURE 119: DEFINING EMAIL NOTIFICATION TARGETS.....	98
FIGURE 120: CONFIGURING NETWORK COMMUNICATION PARAMETERS.....	99
FIGURE 121: DEFINING SMS NOTIFICATION TARGETS	100
FIGURE 122: SET TEMPERATURE ALARM THRESHOLD.....	101

LIST OF TABLES

<i>TABLE 1: REQUIRED OVER-CURRENT PROTECTION.....</i>	<i>33</i>
TABLE 2: MAIN MENU OPTIONS	53
TABLE 3: LOG MESSAGES.....	59
TABLE 4: MAIN SCREEN FEATURES	80
TABLE 5: MAIN MENU OPTIONS	81
TABLE 6: DATA ITEMS ON THE EVENT LOG SCREEN.....	85
TABLE 7: ALARM MESSAGE TEXT IN WEB INTERFACE LOG DISPLAY	86
TABLE 8: COMMANDS AVAILABLE ON THE "POWER+ CONTROL" SCREEN.....	87
TABLE 9: FIELDS IN THE EMAIL NOTIFICATIONS SCREEN	98
TABLE 10: FIELDS IN THE SMS NOTIFICATION TARGET DEFINITION SCREEN.....	100
TABLE 11: SPECIFICATIONS	102

STANDARDS AND CONVENTIONS

This manual contains diagrams which include images of the LCD display screen of the UPS. Unless otherwise indicated, the readings shown in the screen images are representational only, and are not intended to match the readings on a specific system in a particular environment.

RECYCLING INFORMATION Consult your local recycling or hazardous waste center for information on proper disposal of a used battery or UPS.	
WARNING	
	Do not dispose of batteries in a fire. Batteries may explode. Consult with your local recycling / hazardous waste center for disposal requirements.
CAUTION	
	Do not discard the UPS or its batteries in the trash. This product contains sealed lead-acid batteries. For proper disposal, contact your local recycling / hazardous waste center.
CAUTION	
	Do not discard waste electrical or electronic equipment (WEEE) in the trash. For proper disposal, contact your local recycling / hazardous waste center.

SAFETY CONSIDERATIONS

The **POWER+** UPS system is designed for industrial applications and harsh environments. Nevertheless the **POWER+** UPS system is a sophisticated power system and should be handled with appropriate care, following these guidelines.

Do's

- Read this manual carefully before starting installation and operation of the UPS.
- Review the safety precautions described below to avoid injury to users or damaging equipment.
- All power connections must be completed by a licensed electrician who is experienced in wiring this type of equipment, and who is knowledgeable about all federal, state, and local electrical codes and regulations. **Improper wiring may cause damage to the equipment or injury to personnel.**
- Pay attention to the warning signs, labels and marks on the unit. A warning sign signals the presence of a possibly serious, life-threatening condition.
- Keep the surroundings clean, uncluttered and free from excess moisture.
- Allow only qualified technicians to service the UPS. There are no user-serviceable components. **Do not try to repair it yourself!**
- Use the UPS only for its intended purpose.



CAUTION - WARNING - RISK OF LETHAL ELECTRIC SHOCK:

The battery drawer contains a series of 12-Volt batteries that provide high voltage and energy in the UPS body even when the UPS is not connected to the ac input. Appropriate precautions should be taken during installation, inspection and servicing.



CAUTION - WARNING - RISK OF LETHAL ELECTRIC SHOCK:

The UPS receives power from more than one source. Disconnection of all of the ac sources and the dc source is required to de-energize this unit before servicing.



ATTENTION - AVERTISSEMENT - RISQUE DE DÉCHARGE ÉLECTRIQUE MORTELLE :

Le tiroir de batterie contient une série de batteries 12-Volt qui fournissent la haute tension et l'énergie dans le corps D'UPS même lorsque L'UPS n'est pas relié à l'entrée à A.C. Des précautions appropriées devraient être prises pendant l'installation, l'inspection et l'entretien.



ATTENTION - AVERTISSEMENT - RISQUE DE DÉCHARGE ÉLECTRIQUE MORTELLE :

L'UPS reçoit la puissance de plus d'une source. Le débranchage de toutes les sources à A.C. et source de D.C est exigé pour désactiver cette unité avant l'entretien.

Don'ts

- Do not open the cover of the UPS or the battery cabinets under any circumstances. All UPS panels and doors should be closed.
- Do not insert any objects through the ventilation holes.
- Do not put objects on the UPS.
- Do not move the UPS while it is operating.
- Do not use the UPS outdoors.
- Do not turn the UPS upside down during transportation.
- Do not connect or disconnect the cable to the battery cabinet before the battery circuit breaker is turned OFF.
- Do not turn ON the battery circuit breaker when the battery cabinet is disconnected from the UPS.
- Do not install next to any gas or electrical heaters. A restricted location is recommended in order to prevent access by unauthorized personnel.



WARNING: RISK OF SEVERE DAMAGE TO THE UPS!!!



THIS SYSTEM USES THE NEUTRAL LINE FOR OPERATION. THEREFORE, IT IS STRICTLY FORBIDDEN TO CONNECT THIS SYSTEM TO THE AC POWER SOURCE WITHOUT A NEUTRAL (NULL) CONDUCTOR!!



FAILURE TO USE A NEUTRAL CONDUCTOR MAY CAUSE PERMANENT DAMAGE TO THE SYSTEM.



**AVERTISSEMENT : RISQUE DE
DOMMAGES GRAVES À L'UPS !!!**



CE SYSTÈME EMPLOIE LA LIGNE NEUTRE POUR L'OPÉRATION. PAR CONSÉQUENT, ON INTERDIT STRICTEMENT DE RELIER CE SYSTÈME A LA SOURCE (AC) DE COURANT ALTERNATIF SANS CONDUCTEUR (NUL) NEUTRE !!



L'ÉCHEC À L'UTILISATION D'Un CONDUCTEUR NEUTRE PEUT ENDOMMAGER EN PERMANENCE LE SYSTÈME.



CAUTION - GROUND CONNECTION ESSENTIAL BEFORE CONNECTING SUPPLY

Connect the UPS to ground before connecting it to the ac supply.



ATTENTION - la PRISE DE TERRE AU SOL ESSENTIELLE AVANT DE RELIER L'APPROVISIONNEMENT

mettre L'UPS à la terre avant de le relier à l'alimentation à A.C.



CAUTION - WARNING - RISK OF ELECTRIC SHOCK! DO NOT REMOVE COVER!

Do not remove the UPS cover. There are no user serviceable parts inside. Refer servicing to qualified service personnel.



**ATTENTION - AVERTISSEMENT - RISQUE DE DÉCHARGE ÉLECTRIQUE !
N'ENLEVEZ PAS LA COUVERTURE !**

N'enlevez pas la couverture D'UPS. Il n'y a aucune pièce utile d'utilisateur à l'intérieur. Référez-vous l'entretien au personnel de service qualifié.

1. INTRODUCTION

Thank you for purchasing a **POWER+** UPS system. **POWER+** is the most sophisticated UPS on the market today.

In general, an Uninterruptible Power Supply (UPS) provides backup power for use when the utility AC electric power mains fail or drop to an unacceptable voltage level.

POWER+ is a whole lot more.

POWER+ is designed to protect your data and equipment and minimize downtime and other adverse effects normally incurred by power irregularities and failures.

POWER+ continually eliminates surges, spikes and sags that are inherent in commercial utility power. Over time, these irregularities shorten the life of equipment and components. The efficiency of **POWER+** thus helps to extend the life of your equipment, even through normal use when the input power system is constant and continuous.

POWER+ requires very little attention or intervention during normal operation; however, you should read and understand the procedures described in this manual to ensure trouble-free operation.

POWER+ is a parallel redundant UPS and is flexible in structure, allowing it to be easily extended by adding modules as required. The UPS modules are designed for hot swapping, making many different configurations possible.


The **POWER+ FREESTYLE** model fits into a standard 19" wide enclosure. The **FREESTYLE** is available in two versions: a 10 to 50 kVA configuration and a 60 to 100 kVA configuration.

1.1 POWER+ has many unique features:

- **POWER+** is reliable thanks to its N+ 1 parallel redundancy.
- **POWER+** is both flexible and modular; it may include from one to ten modules.
- **POWER+** is a true on-line battery design according to IEC62040-3.
- **POWER+** is a "green" power solution thanks to THD of 5 % at the input, and provides "clean" power to your loads.
- **POWER+** employs active current sharing at the input / output.
- **POWER+** has an overall efficiency of up to 96 % and backup efficiency of 98%.
- **POWER+** is light and small, a 10 kVA module weighs only 9 Kg.




10 to 50 kVA configuration in 19" rack

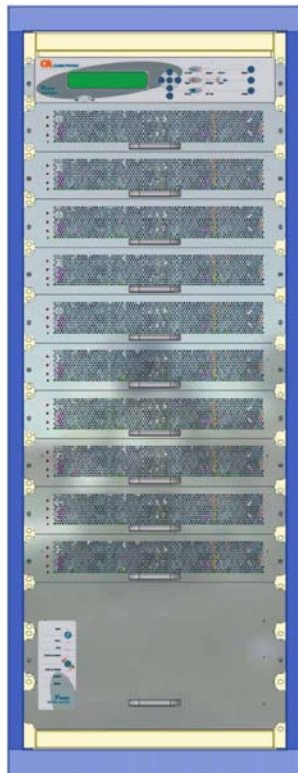

*60 to 100 kVA configuration in a 19" rack –
small enough to fit in a 4-passenger elevator*

The **POWER+** is comprised of the following sub-assemblies.

- System Controller
- 1-10 UPS modules x 10 kVA
- Static Switch Module

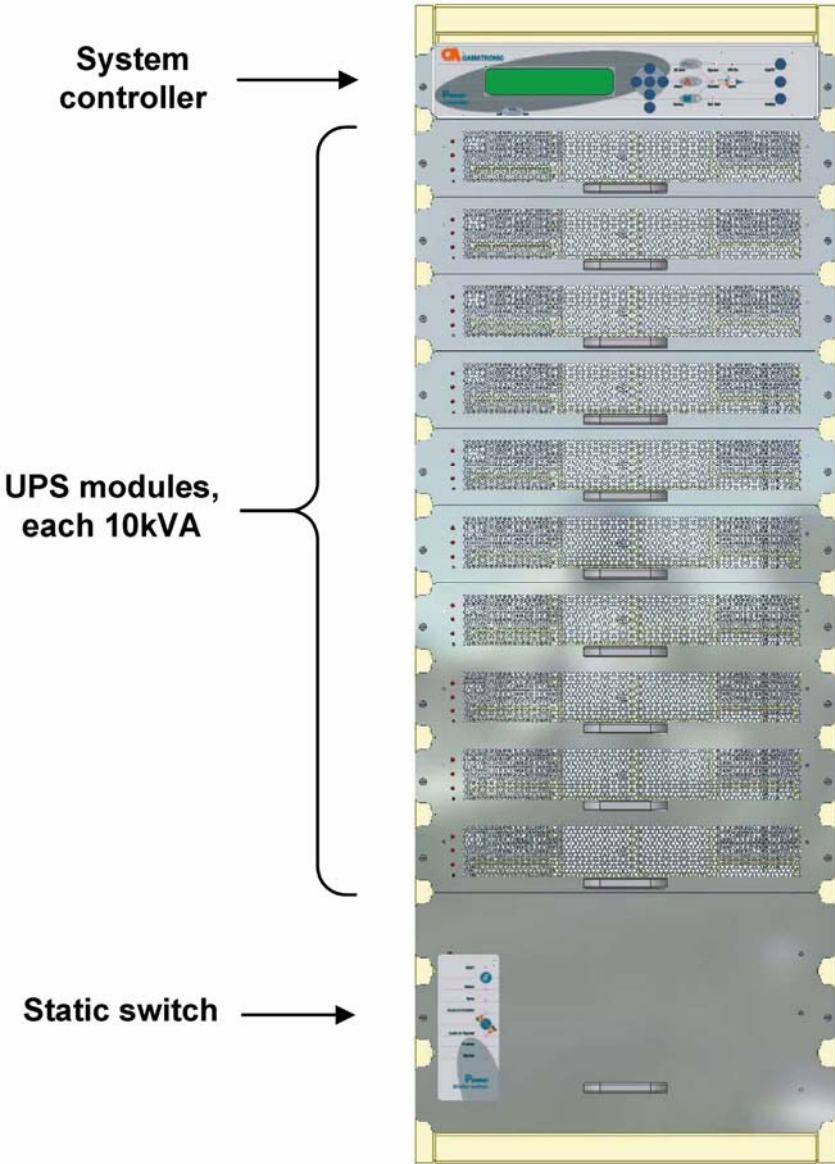

POWER+ System - full complement

1.2 Ac and dc fuses

Ac and dc fuses are located on the rear panel of the UPS, above the terminals.



Figure 1: Photo of ac and dc fuses and terminals (50 kVA model)

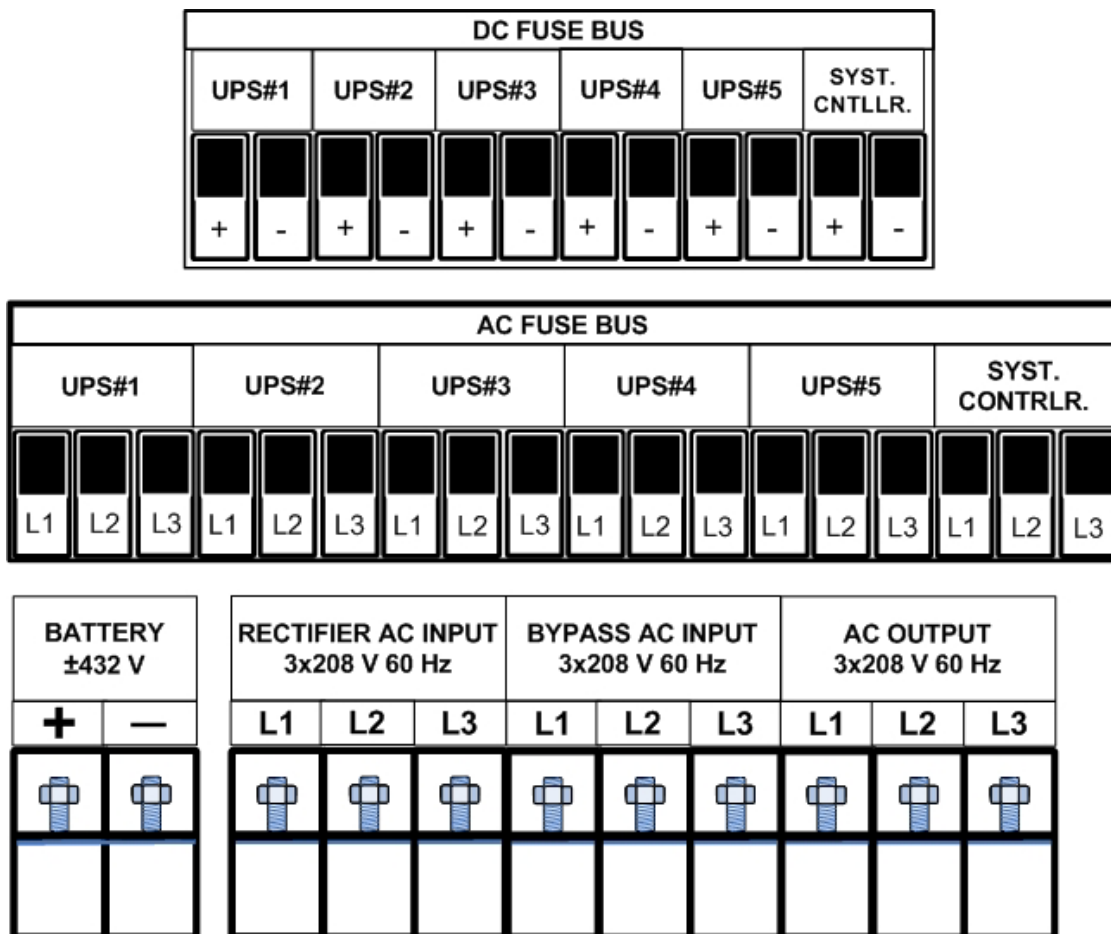


Figure 2: Diagram of ac and dc fuses and terminals (50 kVA model)



Figure 3: Photo of ac and dc fuses and terminals (100 kVA model)

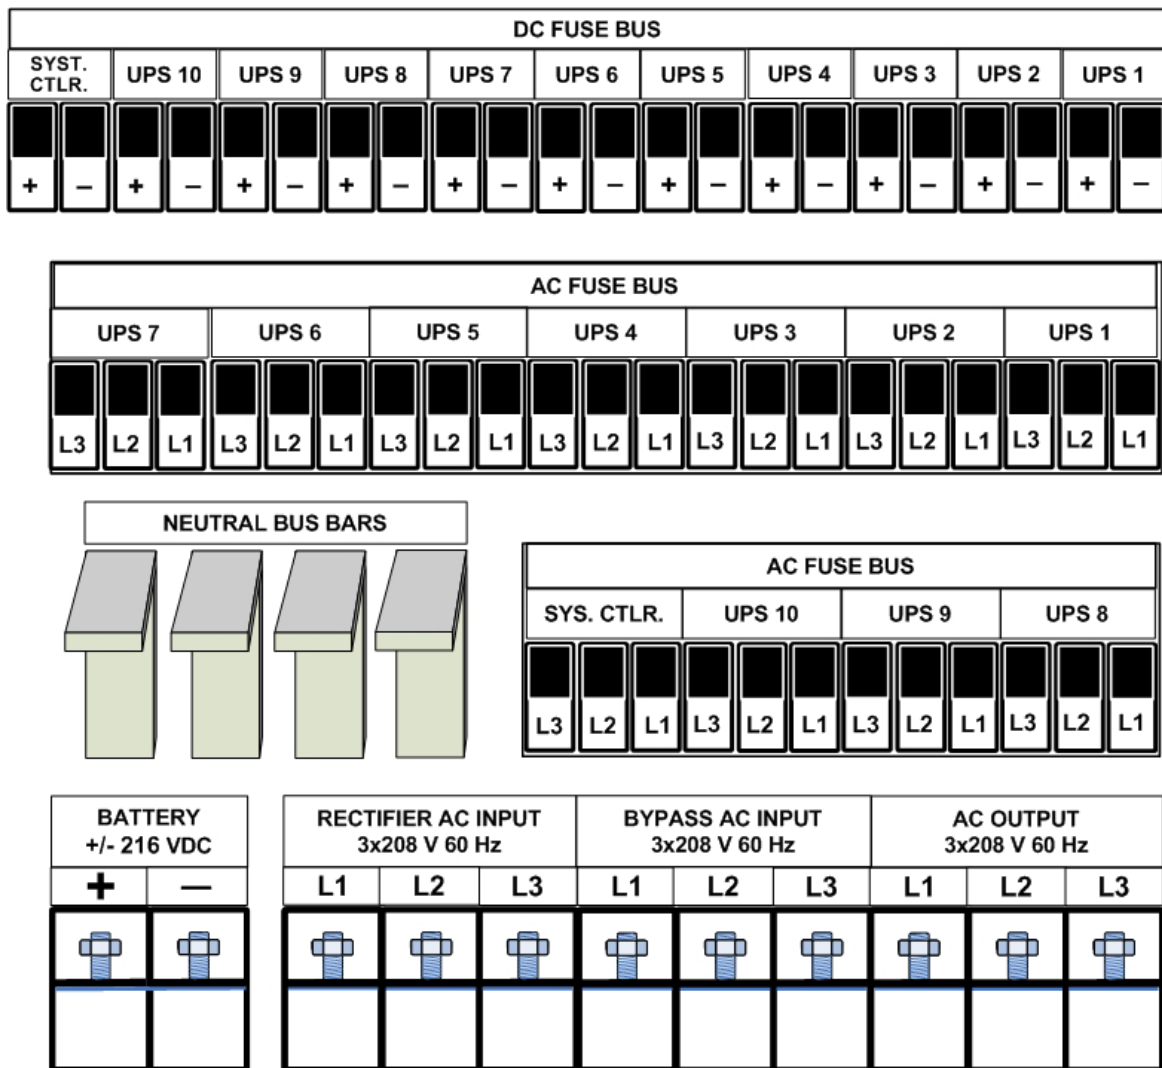


Figure 4: Diagram of ac and dc fuses and terminals (100 kVA model)

1.3 Ac input/output main terminals

The main input and output terminals are located at the lower rear of the unit. The terminals are used to connect the AC input and bypass inputs, the battery, and the AC output. See Figure 2 (50 kVA) and Figure 4 (100 kVA) above.

1.4 System controller

The **POWER+** system controller has three purposes:

- to allow the user to manage and control the UPS as well as monitor the parameters of all sections of the **POWER+** via the control panel
- to collect and summarize data from all sections of the UPS
- communication with external computers for data transfer and operation

The **POWER+** can work without the system controller but with reduced functionality.

1.5 UPS module (10 kVA / 8 kW)

The UPS module is the core of the **POWER+**, which consists of from one to ten identical modules in parallel depending on capacity requirements.

Each module includes a 3-phase charger with PFC¹ and a 3-phase PWM inverter connected to batteries by a classic DC link. Each module is plug-in and weighs a mere 9kg.

1.6 Static Switch (ST/SW) module

The centralized hybrid Static Switch enables an automatic transfer of the load from the output of the inverters to an alternate source whenever the inverter can no longer supply power to the load. The static switch can transfer high currents at high speed.

¹ PFC is a feature included that reduces the amount of generated reactive power. Reactive power operates at right angles to true power and energizes the magnetic field. Reactive power has no real value for an electronic device, but electric companies charge for both true and reactive power resulting in unnecessary charges.

In power factor correction, the power factor (represented as "k") is the ratio of true power (kWatts) divided by reactive power (kVA). The power factor value is between 0.0 and 1.00. If the power factor is above 0.8, the device is using power efficiently. A standard power supply has a power factor of 0.70-0.75, and a power supply with PFC has a power factor of 0.95-0.99.

1.7 Battery

The **POWER+** battery bank is used as a backup in the event that the utility AC input fails.

For systems from 10 kVA through 40 kVA, the batteries may be housed internally; however, for systems from 50 kVA through 100 kVA, or for sites where a longer backup duration is required, the batteries are housed in an external cabinet next to the **POWER+** cabinet.

Batteries are charged by the rectifier which supplies both the inverter and the battery charger.

Free air circulation around the batteries is extremely important for proper battery safety. If the Power+ is installed in a cabinet, the cabinet must have sufficient ventilation openings to permit free air circulation around the batteries.

This means that solid glass or acrylic-type door panels are not suitable for a cabinet housing the Power+, not for the front cabinet door nor for the rear door.

Please refer to the battery manufacturer's installation manual for battery installation and maintenance instructions.

When replacing batteries, replace with the same number and type!

BATTERY MANUFACTURER	PART NUMBER
DiaMec Battery Co. Ltd.	DMC12-7, rated V-2 min.
NOTE: EQUIVALENT TYPE BATTERIES MAY BE USED. PLEASE CONSULT GAMATRONIC.	



CAUTION - RISK OF ELECTRIC SHOCK!

Servicing of batteries should be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.



CAUTION - WARNING - RISK OF ELECTRIC SHOCK!

Do not touch uninsulated battery terminals.



CAUTION

Do not dispose of battery or batteries in a fire. The battery may explode. For proper disposal, contact your local recycling / hazardous waste center.



CAUTION

Do not open or mutilate the battery or batteries. Released electrolyte is harmful to the skin and eyes, and is toxic.



CAUTION

Batteries are heavy. Move them with care. Dropping a battery can result in injury and may damage the battery.

CAUTION: A BATTERY CAN PRESENT A RISK OF ELECTRICAL SHOCK AND HIGH SHORT-CIRCUIT CURRENT. THE FOLLOWING PRECAUTIONS SHOULD BE OBSERVED WHEN WORKING ON BATTERIES.

1. Remove watches, rings, and other exposed metal objects from the body.
2. Use tools with insulated handles.
3. Wear rubber gloves and boots.
4. Do not lay tools or metal parts on top of the batteries.
5. Disconnect the charging source before connecting or disconnecting battery terminals.

Veillez se référer au manuel de l'installation du fabricant de batterie pour des instructions d'installation et d'entretien de batterie. En remplaçant des batteries, remplacez avec le même nombre et type !

FABRICANT DE BATTERIE	NUMÉRO DE LA PIÈCE
DiaMec Battery Co. Ltd.	DMC12-7, V-2 évalué minute.
NOTE : LE TYPE ÉQUIVALENT BATTERIES PEUT ÊTRE EMPLOYÉ. VEUILLEZ CONSULTER GAMATRONIC.	



ATTENTION - RISQUE DE DÉCHARGE ÉLECTRIQUE ! L'entretien des batteries devrait être assuré ou dirigé par le personnel bien informé des batteries et des précautions exigées. Personnel non autorisé de subsistance loin des batteries.



ATTENTION - AVERTISSEMENT - RISQUE DE DÉCHARGE ÉLECTRIQUE !

Ne touchez pas les bornes non isolées de batterie.



ATTENTION

Ne vous débarrassez pas de la batterie ou des batteries dans un feu. La batterie peut éclater. Pour la disposition appropriée, entrez en contact avec votre centre de recyclage de gens du pays/perte dangereuse.



ATTENTION

N'ouvrez pas ou ne mutilez pas la batterie ou les batteries. L'électrolyte libéré est nocif à la peau et aux yeux, et est toxique.



ATTENTION

Les batteries sont lourdes. Déplacez-les avec soin. La chute d'une batterie peut avoir comme conséquence les dommages et peut endommager la batterie.

ATTENTION : UNE BATTERIE PEUT PRÉSENTER UN RISQUE DE CHOC ÉLECTRIQUE ET DE COURANT ÉLEVÉ DE SHORT-CIRCUIT. ON DEVRAIT OBSERVER LES PRÉCAUTIONS SUIVANTES EN TRAVAILLANT AVEC LES BATTERIES.

1. Enlevez les montres, les anneaux, et d'autres objets exposés en métal du corps.
2. Utilisez les outils avec les poignées isolées.
3. Portez les gants et les initialisations en caoutchouc.
4. N'étendez pas les outils ou les pièces en métal sur les batteries.
5. Débranchez la source de remplissage avant de relier ou débrancher des bornes de batterie.

2. OPERATING MODES

The **POWER+** UPS functions to supply AC electrical power to your load.

While using the **POWER+**, three modes of operation are possible:

- Normal operation
- Battery operation
- Bypass operation

2.1 Normal operation

The UPS is almost always in normal operation mode. The load receives its power from the inverters that supply stabilized voltage, protected from spikes and irregularities in the AC input. The AC input system feeds the charger which supplies DC power to the inverter, while concurrently charging the batteries.

2.2 Battery operation

During battery operation, the load continues to receive power from the inverters, but the DC input to the inverter is taken from the batteries, instead of from the rectifier.

The batteries are galvanically connected by DC link to the inverter and the charger. The DC inherently remains constant when the AC input supply drops out, without any switching devices.

The duration of the battery operation is determined by the load demand and the battery capacity.

2.3 Bypass operation

During bypass operation, the load receives power directly from the AC input via the static switch.

Whenever the inverters cannot provide power to the load, either due to an overload or a short-circuit in the load, transfer to the AC input is automatic. As soon as the problem is corrected, the load is transferred back to the inverter.


3. USER INTERFACE

This section describes the buttons and indicators used to operate the **POWER+**.

3.1 Control Panel


The **POWER+** Control Panel, located on the front of the controller, provides the user with an interface to the **POWER+** system. It includes an LCD display, a keypad, buttons and indicators for monitoring and controlling the UPS configuration and functions. The control panel is aimed both at the end-user as well as the service engineer. All of the **POWER+** parameters can be viewed on the control panel.

Use of the **POWER+** Control Panel is described in detail in Chapter 7 beginning on page 45.

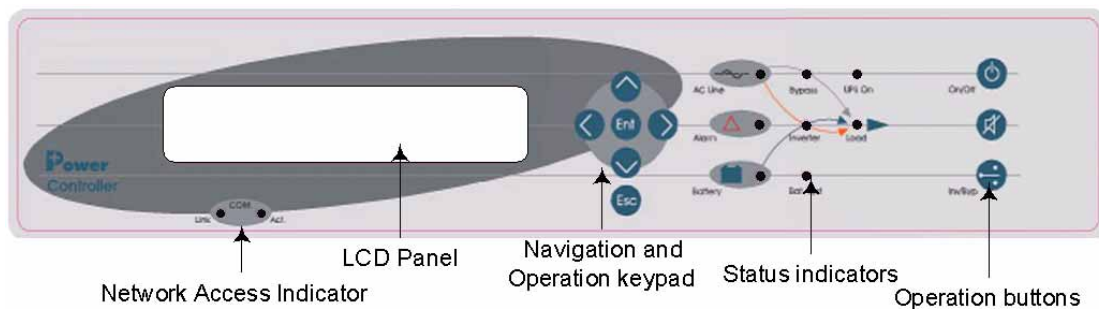


3.2 UPS module panel

The UPS module panel, located on the front of each UPS module, provides the user with the status of that module

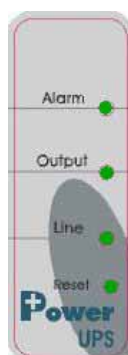

3.3 Static Switch panel

The static switch panel, located on the front of static switch module, provides the user with the status of the static switch module. All the functions and indications are available on the **POWER+** Control Panel.

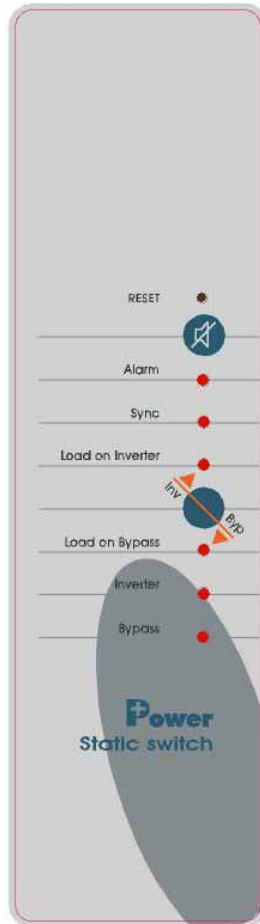


3.4 POWER+ control screen

The **POWER+** control screen is illustrated below. It is part of the control panel described on page 11.

How to read and understand the **POWER+** control screen is described in detail in Chapter control screen is described in Chapter 8 beginning on page 37.

The control screen provides menus and displays all aspects of the **POWER+** systems input, output and static switch as well as operational details.


The figure below shows the **POWER+** 3-phase display.

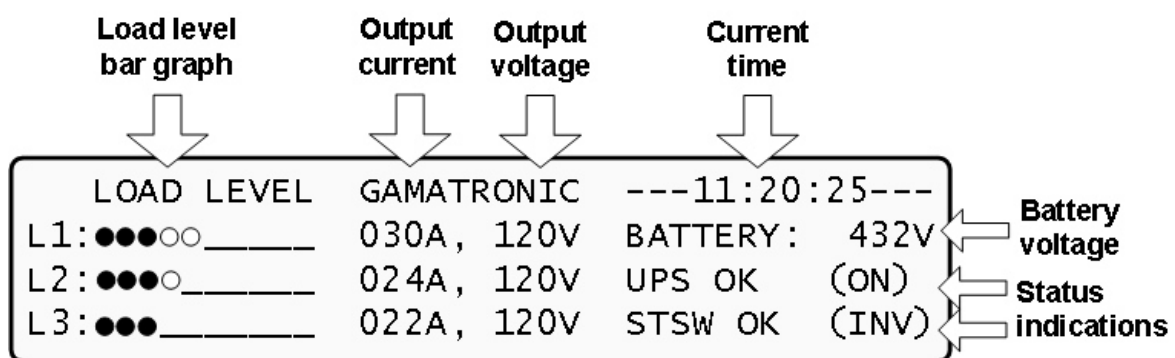

This is how the control screen appears while the UPS is running normally.

3.4.1 Navigation and operation keypad


The navigation and operation keypad works in conjunction with the control screen. It allows you to navigate through the available menus using the ◀ ▶ ▲ ▼ direction arrow buttons and the Enter **Ent** and Escape **Esc** buttons to select or quit, respectively.

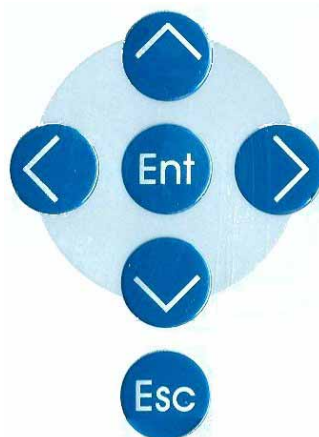

3.4.2 Status indicators

The status indicators show precisely what is running and how the UPS is providing power to the load.

The diagram below shows the power source and destination routes in use for each of the 3 automated operation modes.

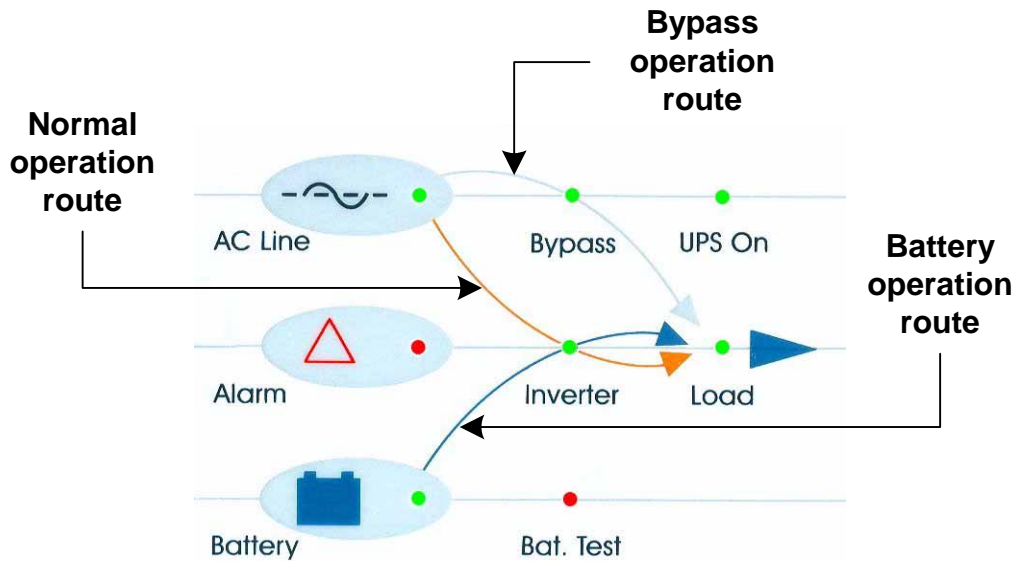




AC Line	Green – Shows that the AC input is present and within range
Alarm	Red – Flashes to indicate general alarm condition
Battery	Green – Shows that the battery is in discharge mode
Bypass	Green – Shows that the load is supplied from the AC input
Inverter	Green - Shows that the inverter is supplying power to the load
Bat. Test	Blinking Red – Shows that a battery test is in progress Steady Red – Battery test failure
UPS On	Green – Indicates that the UPS is running
Load	Green – Indicates that AC voltage is available at the output

3.4.3 Operation buttons

The operation buttons illustrated below are “soft” switches.

- On/Off resets the entire UPS
- Alarm silence shuts the alarm sounder
- Inv/Byp allows the maintenance engineer to manually change the operation mode

 On/Off	UPS ON/OFF switch
	Alarm silence
 Inv/Byp	Inverter/Bypass manual switch over

3.4.4 Network access indicator

The network access indicator shows whether the network connection is available and whether it is active.




Link	Red – Indicates the presence of a network connection link
Act	Green – Indicates that the network is active

3.5 POWER+ operation modes

3.5.1 Normal operation

LOAD LEVEL	GAMATRONIC	---11:20:25---
L1: ●●●○○_____	030A, 120V	BATTERY: 432V
L2: ●●●○_____	024A, 120V	UPS OK (ON)
L3: ●●●_____	022A, 120V	STSW OK (INV)

During normal operation, the UPS draws power from the AC line, feeds DC to the inverter which provides AC to the load.

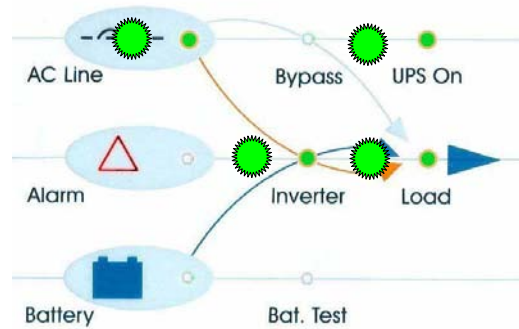

3.5.2 Battery operation

AC failed for the past 5 minutes




LOAD LEVEL	no ac 005m	---11:20:25---
L1: ●●●○○_____	030A, 120V	BATTERY: 432V
L2: ●●○○_____	022A, 120V	UPS OK (ON)
L3: ●●●○○○_____	034A, 120V	STSW OK (INV)

Status indications


During Battery Operation, the battery supplies DC to the inverter which then provides AC to the load.

The red alarm flashes to indicate the abnormal status.

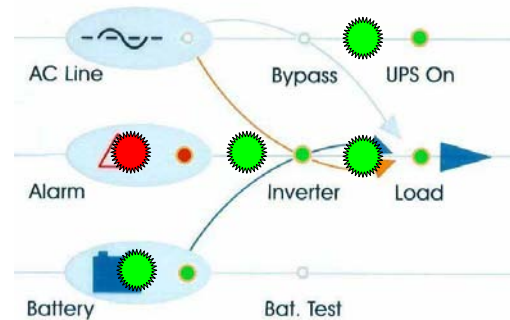


3.5.3 Bypass operation (automatic)

LOAD LEVEL	GAMATRONIC	---	11:20:25---
L1: ●●●○○_____	030A, 120V	BATTERY:	432V
L2: ●●○○_____	024A, 120V	UPS OK	(OFF)
L3: ●●○_____	022A, 120V	STSW	warning



Status indications

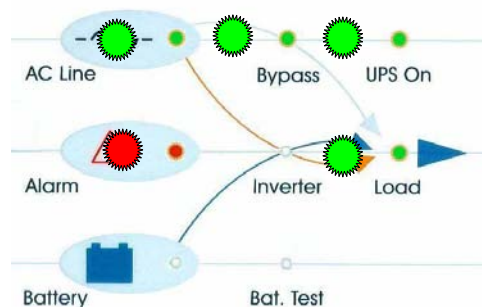During Bypass operation, the AC feeds the load via the bypass static switch. The red alarm flashes to indicate the abnormal status.




3.5.4 Bypass operation (manual)

LOAD LEVEL	GAMATRONIC	---	12:01:11---
L1: ●●●○○_____	030A, 120V	BATTERY:	432V
L2: ●●●○○_____	029A, 120V	UPS OK	(ON)
L3: ●●○○_____	022A, 120V	STSW	OK (BYP)


Status indications

If the Power+ is manually switched to bypass operation by pressing the Inv/Byp button, the load is transferred to the mains AC input line. Transfer back to normal operation must be performed manually. The red alarm indicator will be lit but will not flash.

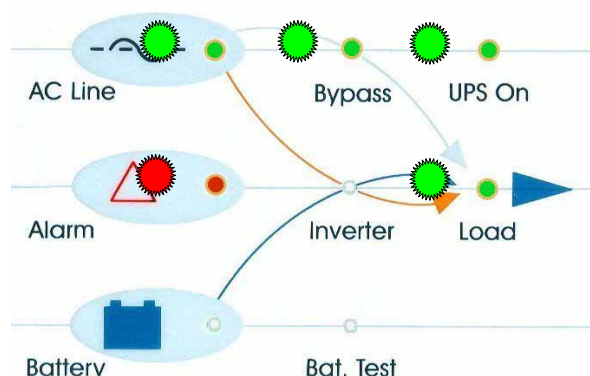

3.5.5 Emergency Power Off - EPO (manual)

An external Emergency Power Off (EPO) switch may be used to cut power to the load in emergency situations. Once switched OFF by the EPO, the **POWER+** must be restarted manually.

The EPO switch must be an N.O.-type.

4. INSTALLING THE FREESTYLE IN A CABINET

The Power+ Freestyle model must be installed in a 19-inch cabinet. This chapter explains how to do so.

To install the Power+ Freestyle UPS in a 19-inch cabinet:

1. Remove the Power+ controller and the UPS modules from the Power+ chassis. This is accomplished by unscrewing the two screws – one on each side – that hold each module in place. (See Figure 5 and Figure 6 below.)
2. Remove the cage nuts that were used to hold each module in place, two for each module, one on each side of the Power+ chassis.
3. Remove the screws and the cage nuts that hold the Static Switch module in place, but DO NOT remove the Static Switch module itself.

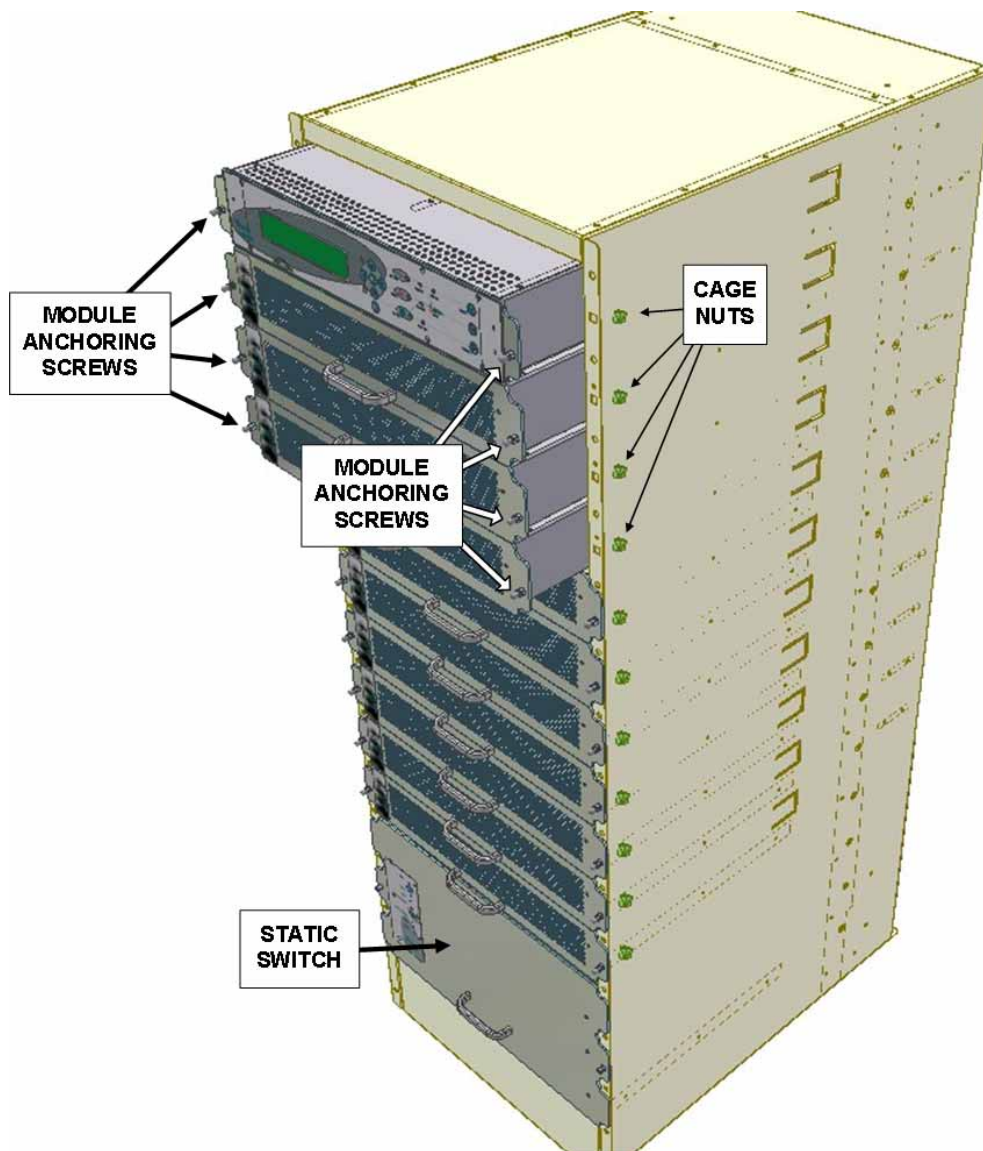


Figure 5: Installing the Freestyle in a rack (a)

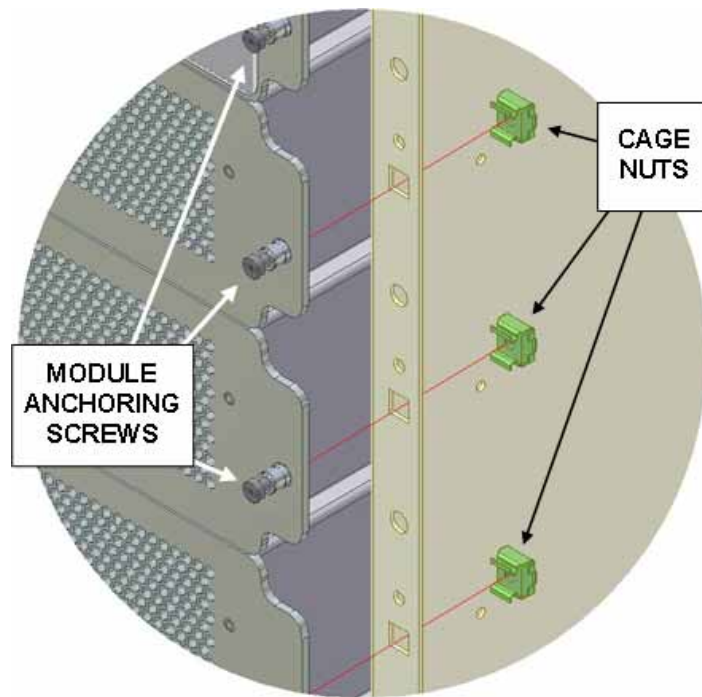


Figure 6: Installing the Freestyle in a rack (b)

6. Install cage nuts on the right and left mounting flange of the 19-inch cabinet. Cage nuts must be installed for the controller and for each UPS unit, and cage nuts must be installed for the purpose of anchoring the PowerPlus chassis to the 19-inch cabinet. Generally speaking, the cage nuts should be installed in alternating fashion – one for anchoring the chassis, one for anchoring the UPS module, one for the chassis, one for the module, and so on. See Figure 7, Figure 8, and Figure 9.

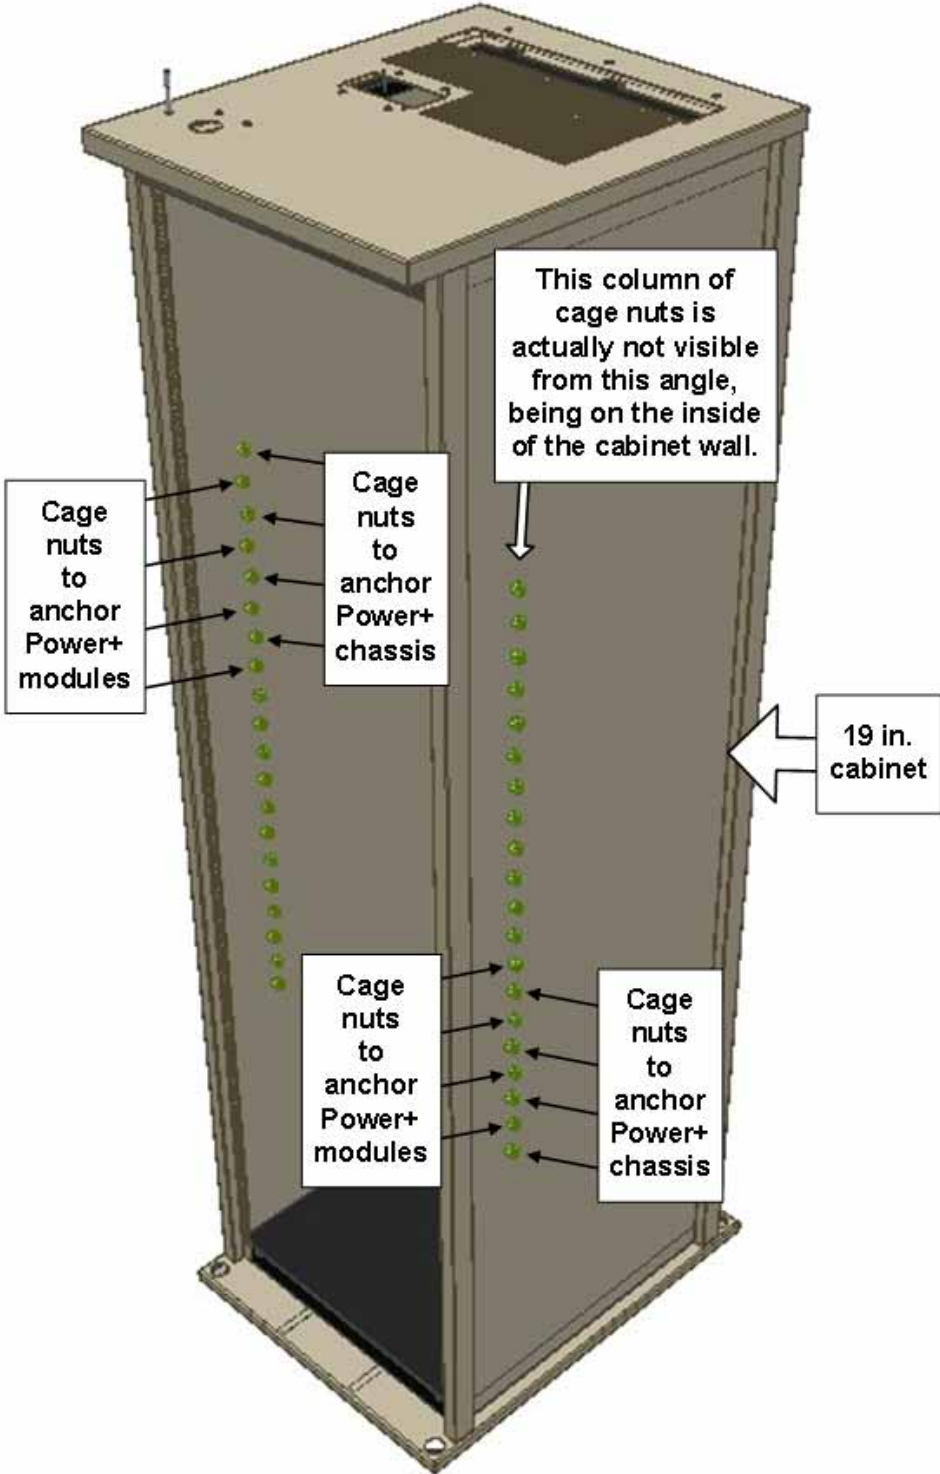


Figure 7: Installing the Freestyle in a rack (c)

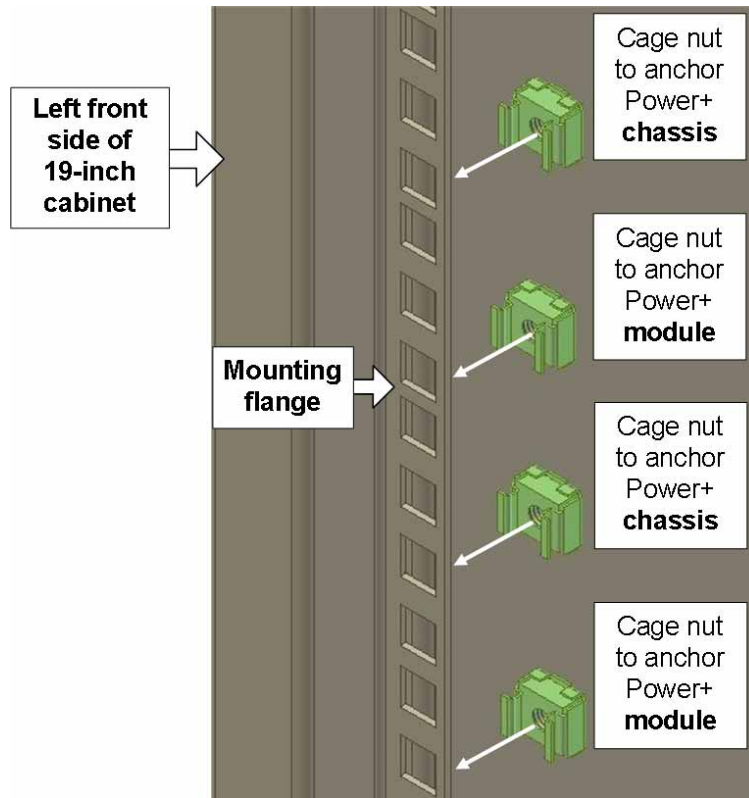


Figure 8: Installing the Freestyle in a rack (d)

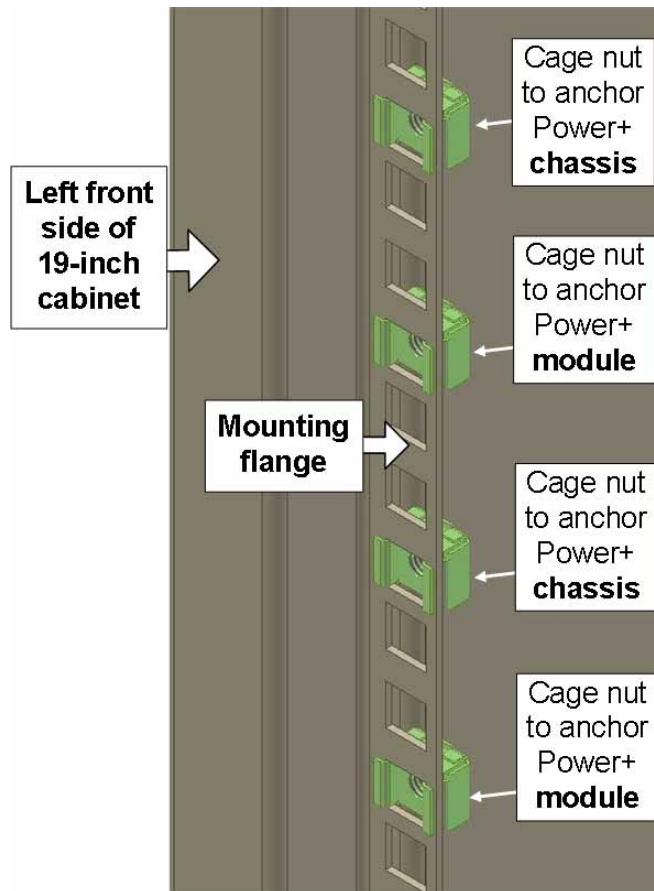


Figure 9: Installing the Freestyle in a rack (e)

7. Lift the Power+ chassis into the 19-inch cabinet. This is a two-person job, because the chassis is heavy and awkward to move.
8. Secure the Power+ chassis to the 19-inch cabinet by inserting M6 screws through the Power+ chassis and the mounting flange of the 19-inch cabinet, into the cage nuts. See Figure 10 below. (Remember that you also have to leave cage nuts in the 19-inch cabinet free for the power module screws.)

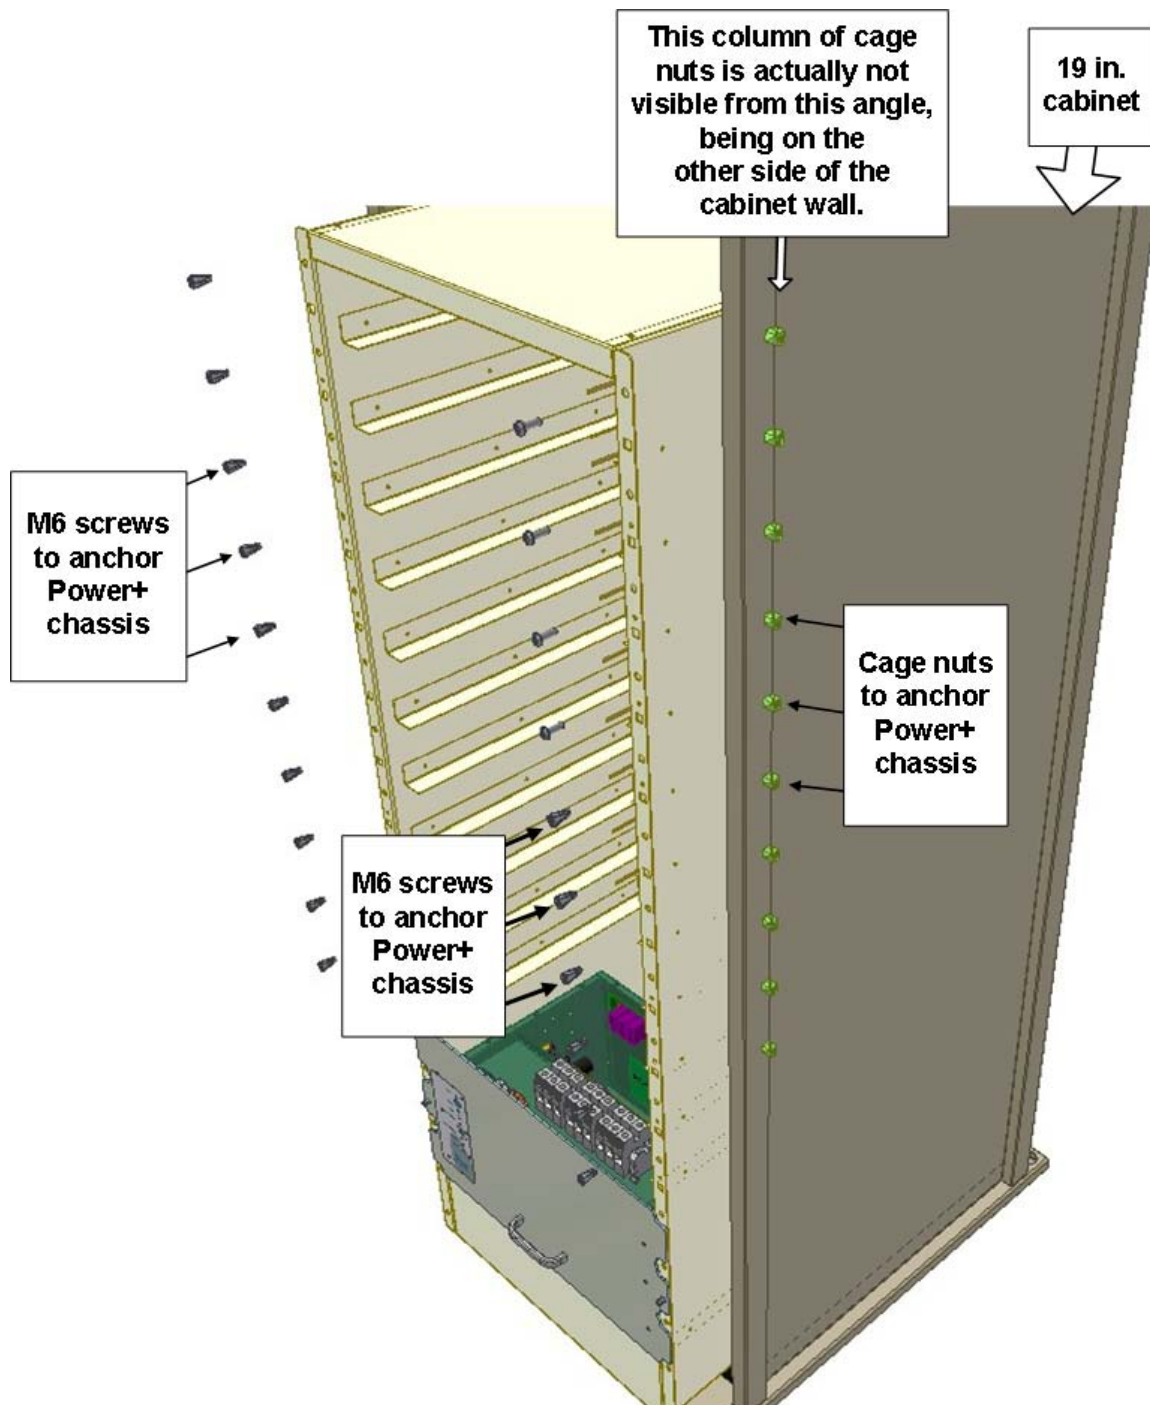


Figure 10: Installing the Freestyle in a rack (f)

- Slide the controller module and the power modules into place in the Power+ chassis and secure them in place by screwing their screws through the Power+ chassis and the 19-inch cabinet into the cage nuts. (See Figure 11 and Figure 12 below.)

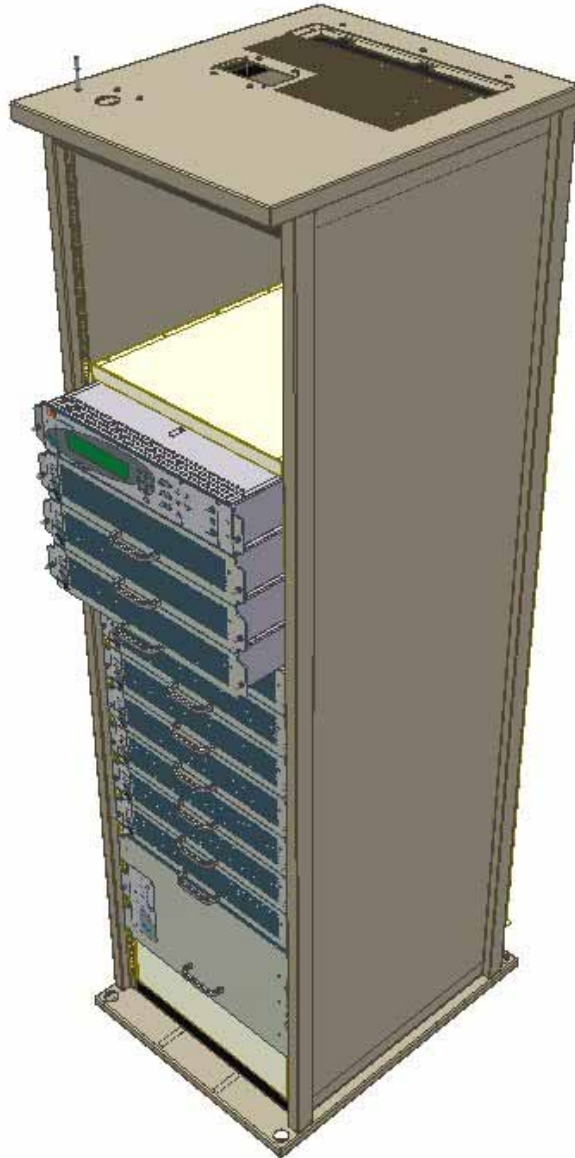


Figure 11: Installing the Freestyle in a rack (g)

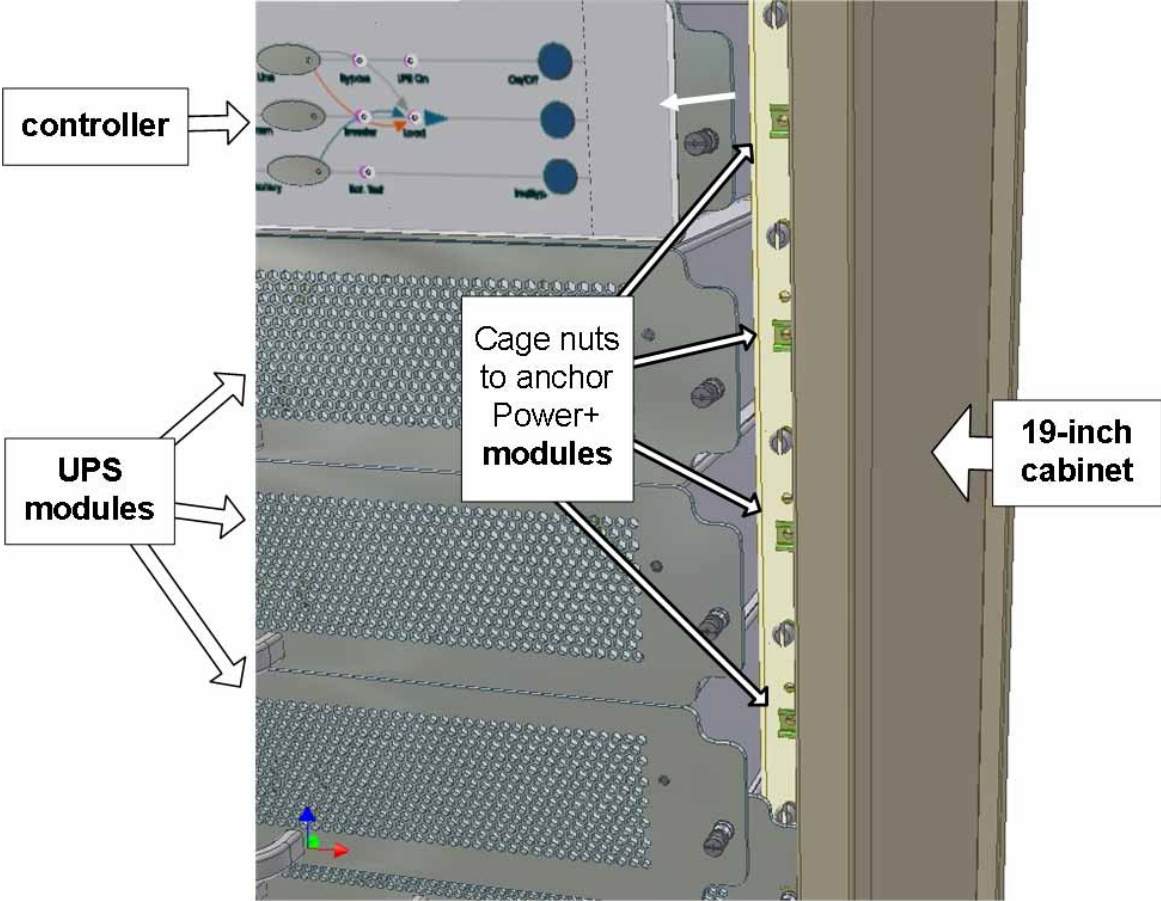


Figure 12: Installing the Freestyle in a rack (h)

This completes the process of installing the Power+ Freestyle model into a 19-inch cabinet.

5. SYSTEM INSTALLATION

5.1 Cabling



WARNING! RISK OF ELECTRICAL SHOCK OR INJURY! INSTALLATION MAY BE PERFORMED BY QUALIFIED TECHNICIAN ONLY!

USE REQUIRED WIRING SIZE ACCORDING TO THE NATIONAL ELECTRIC CODE, NSI/NFPA 70.

FOR 10 TO 50 KVA SYSTEMS: 0 AWG MAXIMUM 600 V, 380 A, 75 °C COPPER WIRE.

FOR 60 TO 100 KVA SYSTEMS: 500 KCMILS MAXIMUM, 600 V, 380 A, 75 °C COPPER WIRE.



AVERTISSEMENT ! RISQUE DE CHOC ÉLECTRIQUE OU DE DOMMAGES ! L'INSTALLATION PEUT ÊTRE EFFECTUÉE PAR LE TECHNICIEN QUALIFIÉ SEULEMENT !

EMPLOYEZ REQUIS EN CÂBLANT LA TAILLE SELON LE CODE ÉLECTRIQUE NATIONAL, NSI/NFPA 70.

POUR DES SYSTÈMES DE 10 À 50 KVA : 0 MAXIMUM 600 V, 380 A, D'A.W.G. FIL 75 °C DE CUIVRE.

POUR 60 À 100 SYSTÈMES DE KVA : 500 KCMILS MAXIMUM, 600 V, 380 A, FIL 75 °C DE CUIVRE

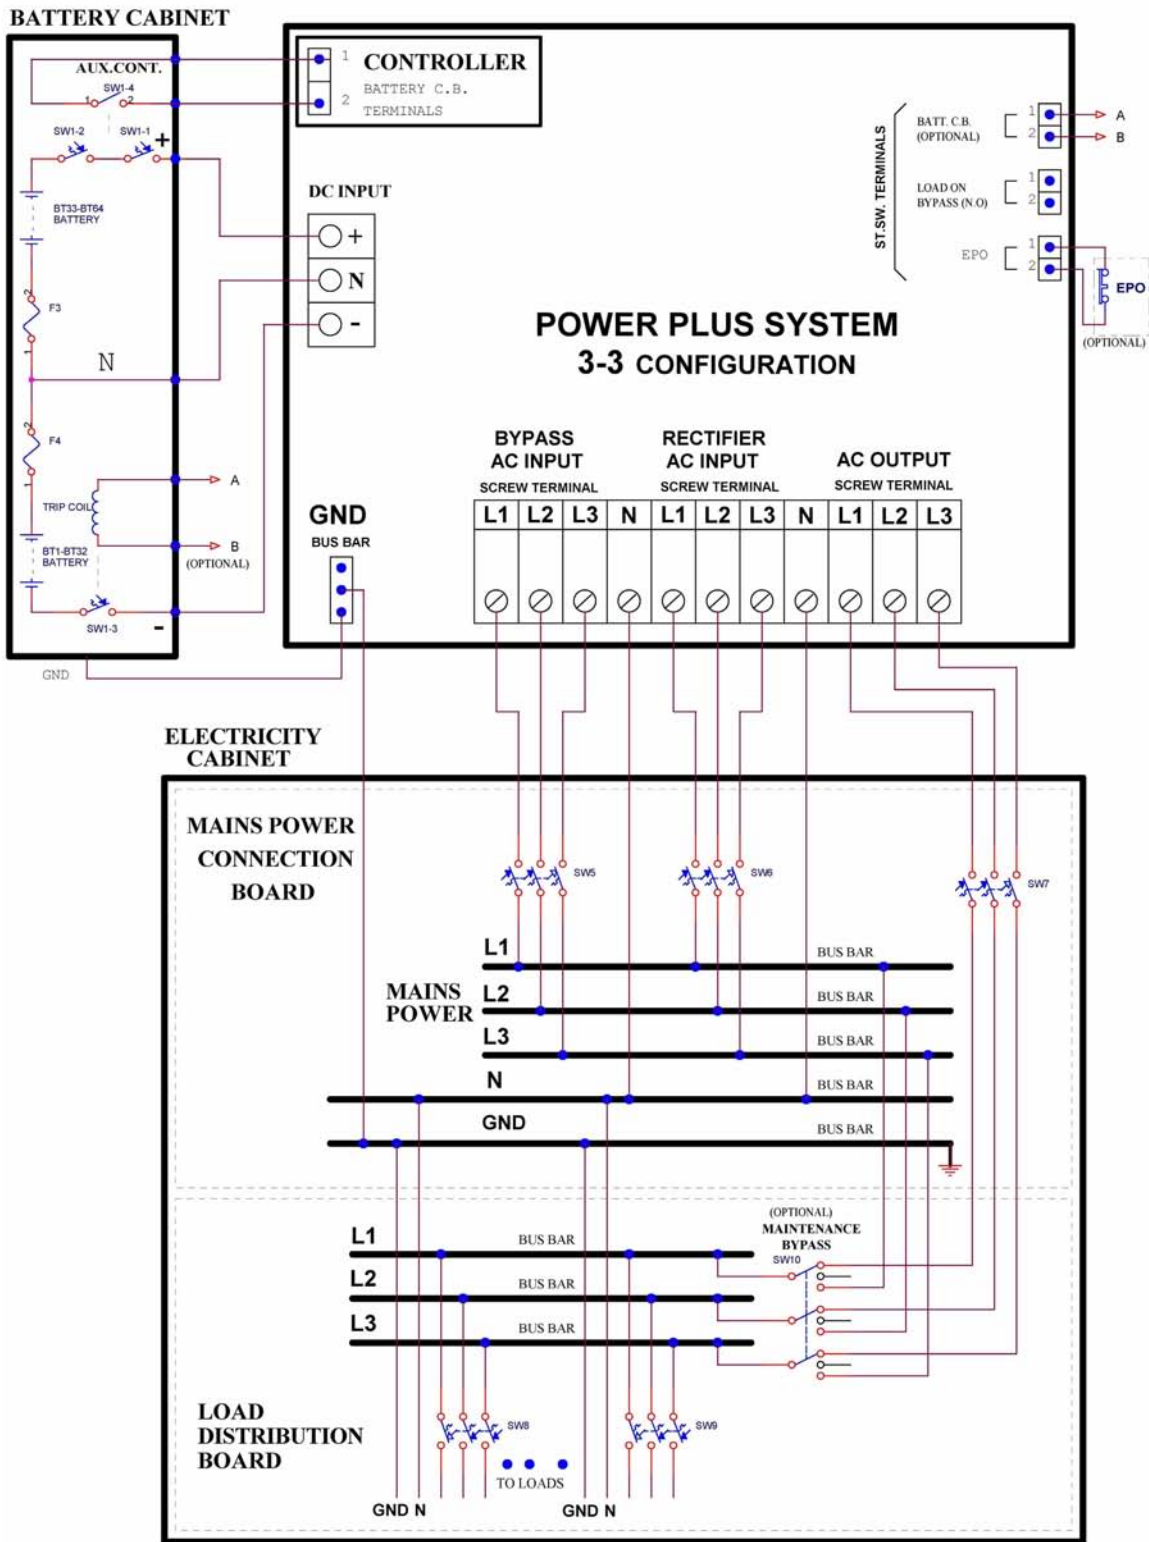


Figure 13: Connection diagram for 3-3 configuration

This page left blank deliberately.

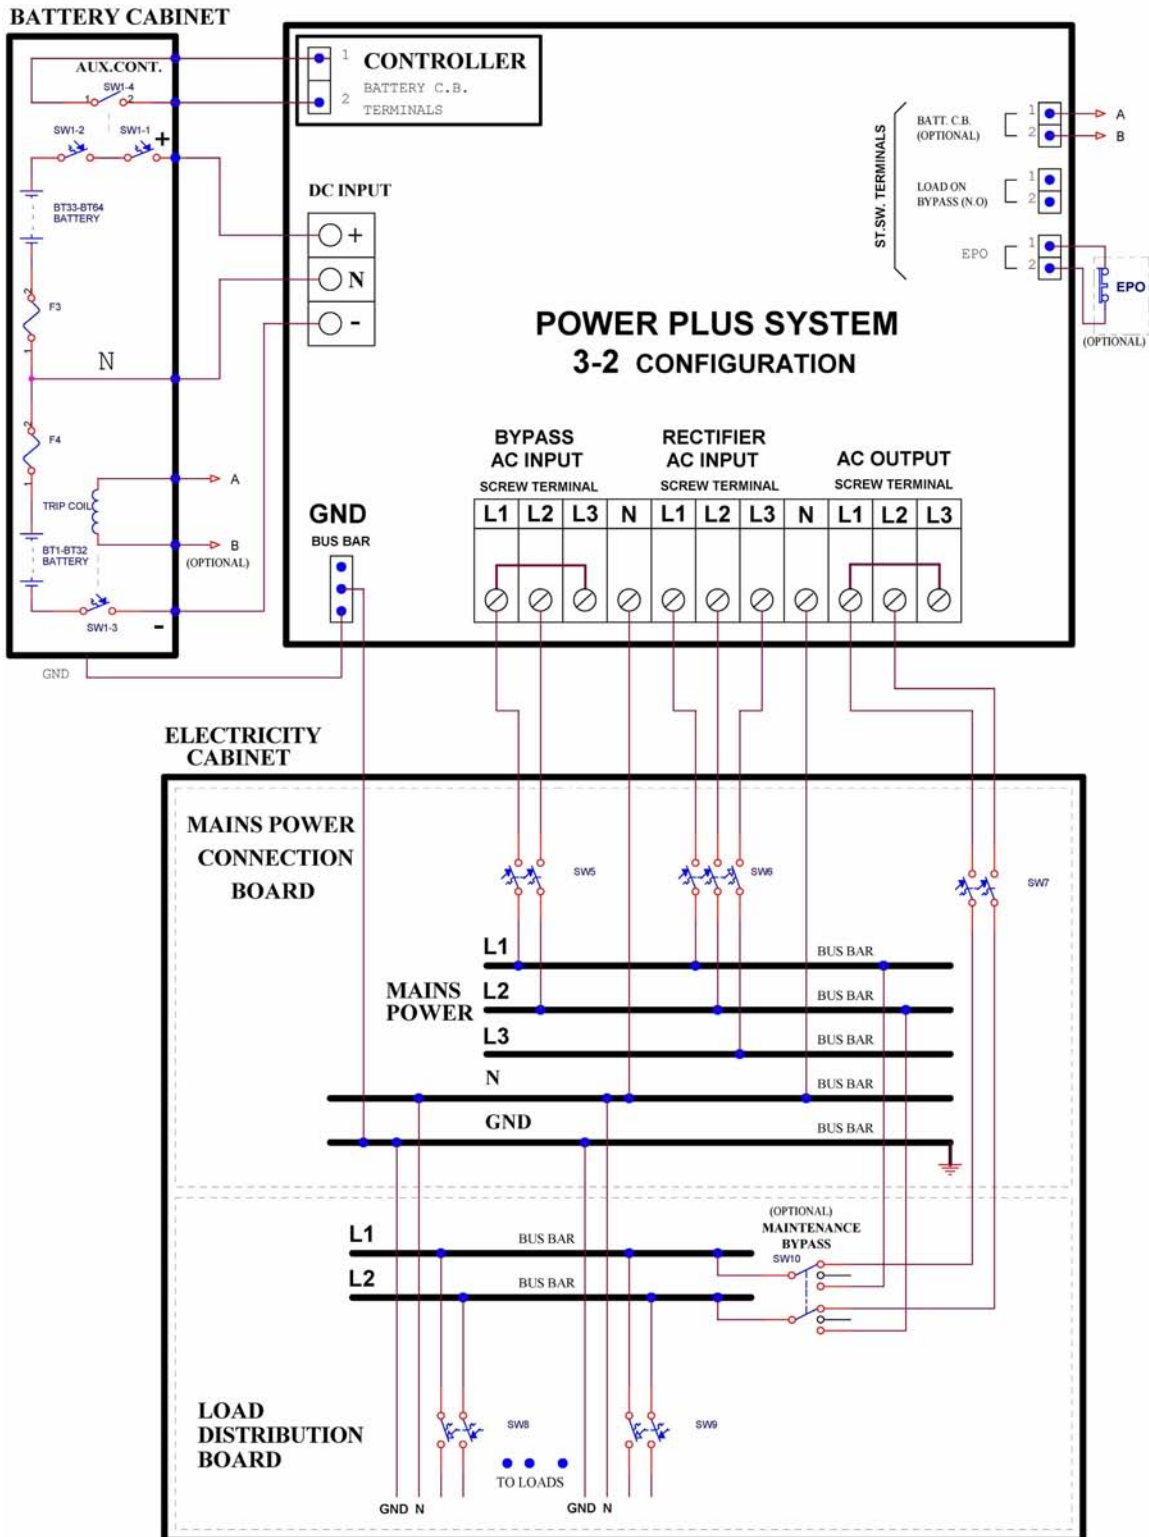


Figure 14: Connection diagram for 3-2 configuration

This page left blank deliberately.

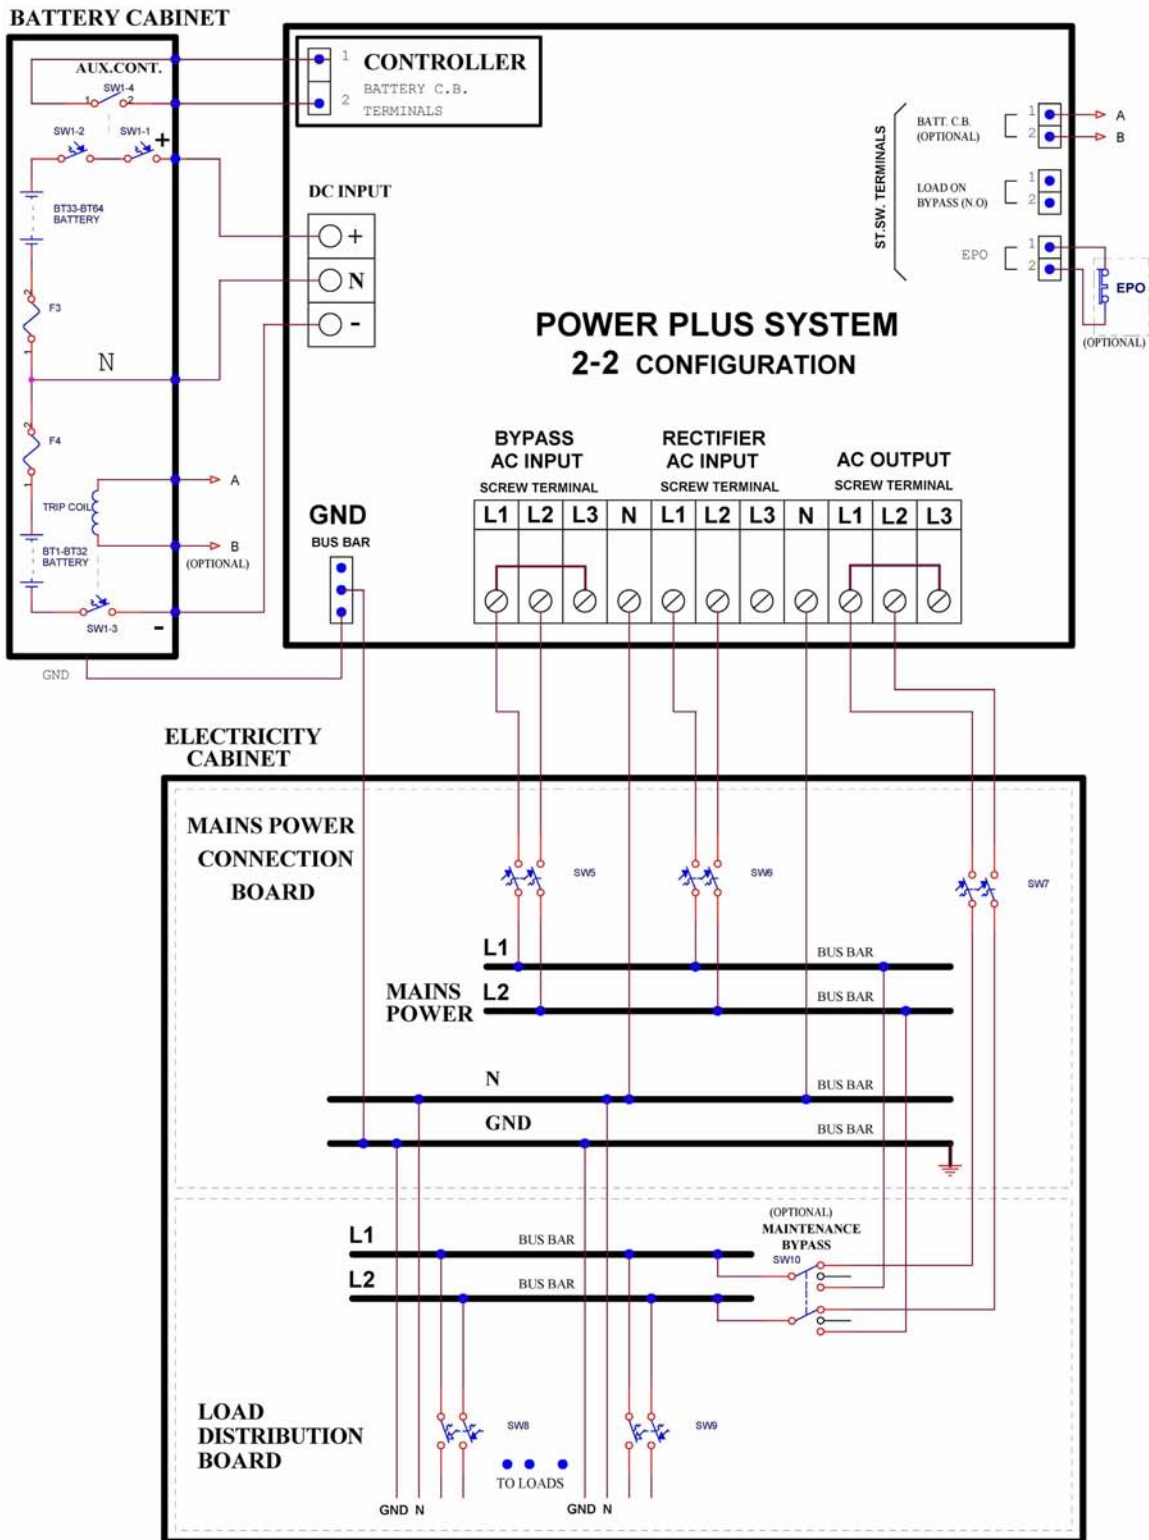




Figure 15: Connection diagram for 2-2 configuration

This page left blank deliberately.

5.2 Over-Voltage Protection



CAUTION!
To reduce the risk of fire, connect the UPS only to a circuit provided with maximum branch circuit over-current protection as indicated in Table 1, in accordance with the National Electric Code, NSI/NFPA 70.



ATTENTION !
Pour réduire le risque du feu, reliez L'UPS seulement à un circuit équipé de protection maximum de surintensité de circuit de branche comme indiqué au tableau 1, selon le code électrique national, au NSI/NFPA 70.


Ensure that the lines into and out of the UPS have protective circuit breakers installed in accordance with the ratings listed in *Table 1* for your Power+ model.


Table 1: Required over-current protection

<i>POWER+</i> Model	Line	Maximum over-current protection
10 kVA	Ac input	35 A
	Ac input bypass	
	Load	
	Battery dc input	30 A
20 kVA	Ac input	70 A
	Ac input bypass	
	Load	
	Battery dc input	60 A
30 kVA	Ac input	110 A
	Ac input bypass	
	Load	
	Battery dc input	90 A
40 kVA	Ac input	150 A
	Ac input bypass	
	Load	
	Battery dc input	125 A
50 kVA	Ac input	175 A

<i>POWER+</i> Model	Line	Maximum over-current protection
	Ac input bypass	150 A
	Load	
	Battery dc input	
60 kVA	Ac input	225 A
	Ac input bypass	
	Load	
	Battery dc input	200 A
70 kVA	Ac input	250 A
	Ac input bypass	
	Load	
	Battery dc input	225 A
80 kVA	Ac input	280 A
	Ac input bypass	
	Load	
	Battery dc input	250 A
90 kVA	Ac input	350 A
	Ac input bypass	
	Load	
	Battery dc input	300 A
100 kVA	Ac input	350 A
	Ac input bypass	
	Load	
	Battery dc input	300 A

5.3 Fuses

	<p><u>WARNING!</u> To reduce the risk of fire, replacement fuses must be of the same type and rating as the original.</p>
---	--

	<p><u>AVERTISSEMENT !</u> Pour réduire le risque du feu, les fusibles de rechange doivent être du mêmes type et estimation que l'original.</p>
---	---

AC INPUT FUSES

Verify that the appropriate ac fuses are present.

In the ac distribution module, the input for each UPS module is protected by a 32A fuse for each phase, so that each module, including the controller, has 3 fuses (one each for the L1, L2, and L3 phases). Ten modules plus the controller would require 33 fuses, as illustrated in Figure 17. In the 50 kVA model, the ac fuse receptacles are numbered from left to right, i.e. the 3 fuses on the far left protect UPS module 1. In the 100 kVA model the fuse receptacles are numbered from right to left.

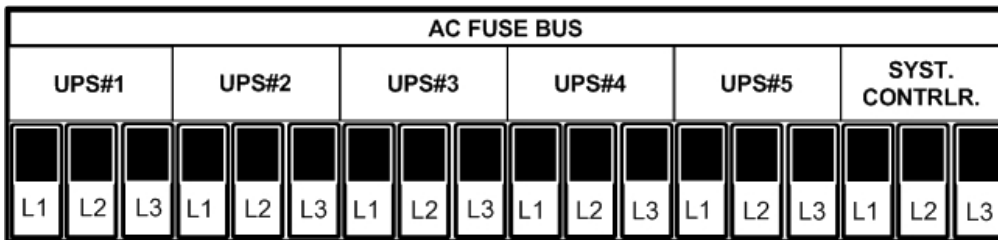


Figure 16: Ac input fuse assignments (50 kVA model)

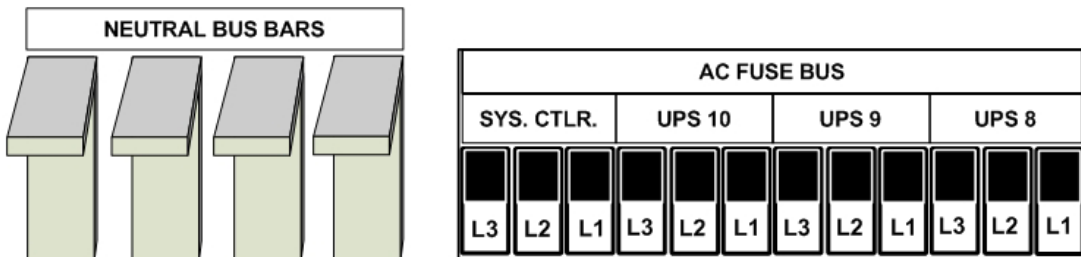
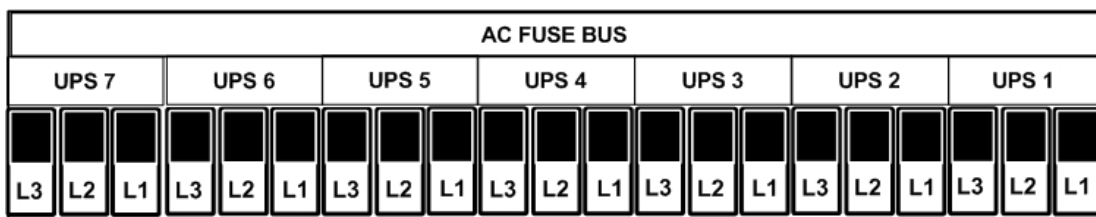


Figure 17: Ac input fuses (100 kVA model)

DC DISTRIBUTION FUSES

Verify that the appropriate dc fuses are present.

All dc fuses are located on the opposite side (the front side) of the dc distribution panel. There are two fuses for each power module and for the controller – one for the positive line and one for the negative line. Figure 18 below show the assignments for the 50 kVA model; Figure 19 for the 100 kVA module.

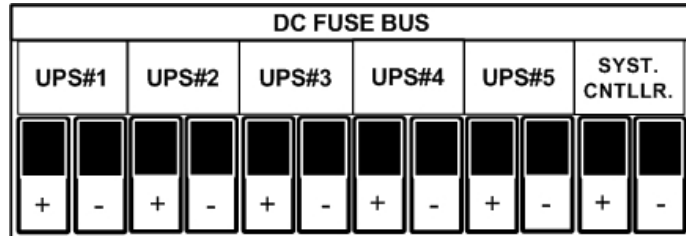


Figure 18: Dc distribution fuse assignment (50 kVA model)

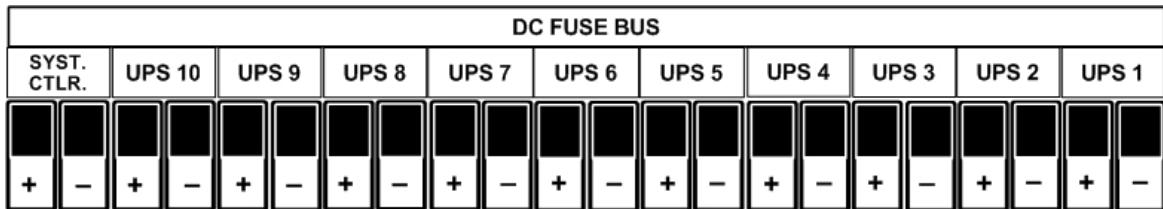


Figure 19: Dc distribution fuse assignment (100 kVA model)

5.4 Inspections to be performed prior to installation

	TYPE OF CHECK		REQUIREMENT	VALUE / VERIFICATION
1.	Ambient temperature in the immediate location of the equipment		Recommended: between +59 ° F and +77 ° F (+15 °C and +25 °C)	
			Required: between +14 °F and +104 °F (-10 °C and +40 °C)	
2.	Humidity and condensation		Verify that there is no water condensation or dampness within the installation site	
3.	Ventilation		Verify that sufficient airflow or forced ventilation is provided for battery cabinets location	
4.	Foundation and route to installation site		Verification of adequate structure, space and clearance for dimensions and weights of the UPS units and their battery cabinets	
5.	When planning the location of the UPS units, room for access to battery cabinets and electrical boards is critical.		Verify 16 in. (40 cm) clearance at rear for cable connections and 39 in. (100 cm) at front for user access and service	
6.	Circuit breakers on the electrical board supplying the system		Must be in accordance with Gamatronic system specifications and connection schematic	
7.	Diameter of input and output power cable connections, PE (Gnd) and neutral lines.		Must comply with local and international codes, and be appropriate for the circuit breakers protecting them. Refer to connections schematic.	
8.	Lightning / Voltage surge protection on electrical board supplying the system.		Voltage surge suppressors type B are recommended to be installed between each phase and the neutral line: Ratings: 150 Vac for 110-120 Vac mains.	
9.	Ac input voltage	3-3 and 3-2 configuration	Phase-to-Phase: 3x208* Vac, +15 %, -25 %	L1-L2 L2-L3 L3-L1
			Phase-to-Neutral: 120* Vac, +10 %, -15 %	L1 L2 L3
		2-2 configuration	Phase-to-Phase: 3x208* Vac Wye, +15 %, -25 %	L1-L2
			Phase-to-Neutral: 120* Vac, +10 %, -15 %	L1 L2
10.	Voltage between neutral and ground		0 – 2 Vac	
11.	System installation and start-up		Must be performed only by authorized personnel in accordance with connection schematic, Gamatronic system specifications and this User Guide	

* Or other, according to nominal voltage rating of local power mains.

5.5 Installation Procedure

OPERATION	
1.	Remove rear covers and connect ac input and output power cables to terminals according to markings as shown in this User Guide and according to connection schematic. <u>Verify correct phase sequence</u> between board and UPS
2.	Consult the appropriate connection diagram, depending on the phase configuration of the UPS: <ul style="list-style-type: none"> • For 3-3 configuration, see Figure 13 on page 27. • For 3-2 configuration, see Figure 14 on page 29. • For 2-2 configuration, see Figure 15 on page 31. Connect ground lines to busses according to markings as shown in the connection diagram. <u>Verify secure connections.</u>
3.	Connect the dc power cables of the battery cabinets to the UPS terminals according to markings as shown in the connection diagram (see step 2 above). Connect neutral and ground lines to busses as per the connection diagram. <u>Verify correct polarity of the connections (+ / N / -)</u> Between the Battery Cabinets C.B.s / Terminals and the UPS terminals. Auxiliary contacts of Battery C.B.s are connected to UPS Controller inputs "Bat CB" and "Com" as marked.
4.	If an external battery cabinet is being used, before turning on the battery cabinet circuit breaker perform the following two checks: <p>4.1) Measure the voltage between the (+) and (-) terminals on the battery cabinet. The voltage must be within the range of 384–432 Vdc. If the voltage is not within this range, determine what the problem is and resolve it before continuing with system start-up.</p> <p>4.2) On the battery cabinet, measure the voltage between the (+) terminal and the Neutral terminal, and between the (-) terminal and the Neutral terminal. Both measurements should be within the range of 196–216 Vdc. If a reading outside of that range is obtained, determine what the problem is and resolve it before continuing with system startup.</p>
5.	An external dual-pole / N.C. EPO switch may be connected according to connection schematic. EPO wiring and switch rating must be rated for at least 5A / 120 Vac.
6.	Before connecting power to each system verify again that all connections are secure and are according to instructions and schematics.
7.	Follow the instructions in section 5.6 "First-time Startup" which begins on page 39.

5.6 First-time Startup

This section describes the procedure for starting up the Power+ for the first time, after having completed the installation process described in the previous chapter.

1. Ensure that the maintenance bypass switch is set to NORMAL (OFF), and that no load devices are connected to the UPS.
2. Turn the AC input and AC bypass switch ON and wait (for about 2 minutes) for the **POWER+** to initialize.

*When applying power to the **POWER+**, the system automatically runs the startup process without a need to press the On/Off button.*

3. The start-up sequence begins and the control panel displays the following sequence. (The details may vary, depending on your application.)
4. Turn the AC input and AC bypass switch ON and wait (for about 2 minutes) for the **POWER+** to initialize.
5. The start-up sequence will begin and the control panel will show the following sequence. (The details of the display may vary from what is shown in the illustrations below, depending on your system's particulars.)

```
UPS POWER+
SC25270105
W E L C O M E ! ! !
```

Figure 20: Start-up screen 1

```
WARNING !!!
SYSTEM RUNNING IN:
S I L I C O N   M O D E   (JP2 - IN)
-----PLEASE NOTIFY SUPERVISOR-----
```

Figure 21: Start-up screen 2

```
WAIT FOR RESULTS...
STATIC RAM: PASSED   R.T   CLOCK: PASSED
EEPROM - 1: PASSED
EEPROM - 3: PASSED   DC SUPPLIES: PASSED
```

Figure 22: Start-up screen 3

```

SYSTEM      I N I T I A L I Z I N G
                SC25270105
PLEASE WAIT FOR COUNT DOWN TO FINISH
                45 SECONDS LEFT
    
```

Figure 23: Start-up screen 4

During this step, the LEDs are also checked sequentially.

6. Finally the normal default screen is displayed. Verify that the correct number of phases are displayed:
 - for 3-3 configuration, under the LOAD LEVEL heading, you should see a line for L1, L2, and L3 as in Figure 24.
 - For 3-2 or 2-2 configuration you should lines for L1 and L2 only, as in Figure 26.

```

LOAD LEVEL  GAMATRONIC  ---11:20:25---
L1:_____ 000A, 120V  BATTERY: 000V
L2:_____ 000A, 120V  UPS OK   (ON)
L3:_____ 000A, 120V  STSW OK  (INV)
    
```

Figure 24: Default screen, with no load, for 3-phase output

```

LOAD LEVEL  GAMATRONIC  ---11:20:25---
L1:_____ 000A, 120V  BATTERY: 000V
L2:_____ 000A, 120V  UPS OK   (ON)
                                STSW OK  (INV)
    
```

Figure 25: Default screen, with no load, for 2-phase output

7. Switch all battery switches "ON" on all battery cabinets.
8. You can now turn on the load devices.
9. After turning on the load devices, verify that you have a normal reading on the display screen.
 - For 3-3 configuration, the display shows readings for L1, L2, and L3 as in Figure 26 below, but of course your readings will be different.
 - For 3-2 and 2-2 configuration, the display shows readings for L1 and L2 only, as in Figure 27.

```

LOAD LEVEL  GAMATRONIC  ---11:20:25---
L1:●●●○○_____ 030A, 120V  BATTERY: 432V
L2:●●●○_____ 024A, 120V  UPS OK   (ON)
L3:●●●_____ 022A, 120V  STSW OK  (INV)
    
```

Figure 26: Normal display, system under load (3-phase output)

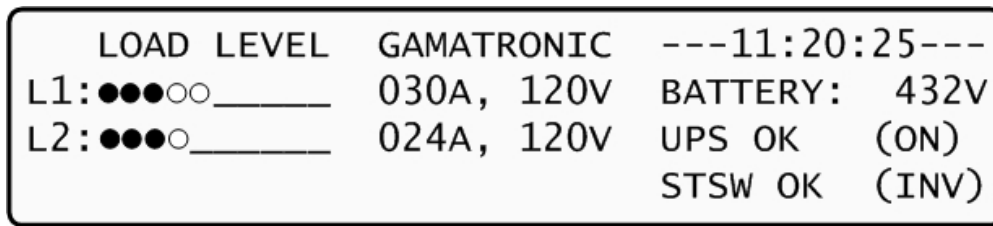


Figure 27: Normal display, system under load (2-phase output)

5.7 Checks to be performed following initial startup

	TYPE OF CHECK	REQUIREMENT	RESULT	
1.	Ac input voltage during operation under load. <u>Take measurements on the input terminals of the system</u>	Phase-to-phase: Not less than 2 % below no-load values measured in item 5 below.	3-3 and 3-2 configuration	L1-L2 L2-L3 L3-L1
			2-2 configuration	L1-L2
		Phase to Neutral: Not less than 2 % below no-load values measured in item 5 below.	3-3 and 3-2 configuration	L1 L2 L3
			2-2 configuration	L1 L2
2.	With no load on the system, measure current circulation between the units.	I _{rst} should be <30 A		
3.	With no load on the system, measure the dc voltage of the system.	Total dc voltage between + and – terminals should be between 384 V and 432 V.	(+) – (-)	
4.	Voltage between neutral and ground during operation under load <u>On the input terminals of the system</u>	0–2 Vac		
5.	System output voltage	120 V +/- 2 % or other according to system specifications		
6.	Total system load / output current	Verify that the system is not overloaded in relation to system specifications		
7.	Correct and orderly operation	Verify that the UPS is operating normally in accordance with this User Guide and that no alarms or fault indications are evident		

NOTE: It is the responsibility of the customer to notify Gamatronic Electronic Industries Ltd. and receive approval for any deviations from these requirements.


6. **POWER+ ROUTINE START-UP**

6.1 Start-up after shutdown

This section describes the start-up procedures for the operator after a **POWER+** shutdown.

LOAD LEVEL	GAMATRONIC	---22:21:18---
L1:_____	000A, 120V	BATTERY: 432V
L2:_____	000A, 120V	UPS OK (OFF)
L3:_____	000A, 120V	STSW OK (BYP)

After shutdown, the **UPS on**, **Alarm** and **Load** indicators will flash.

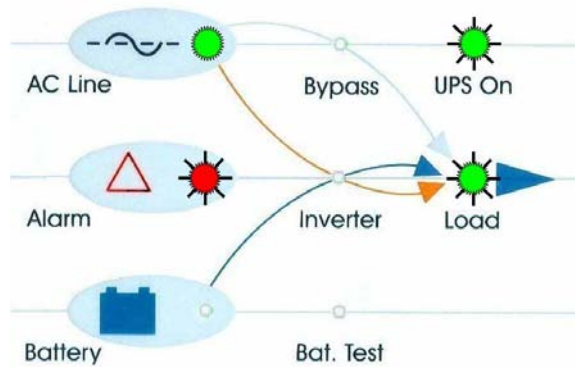

1. Press twice on the On/Off button on the upper right of the system controller panel.
2. Wait about 2 minutes for the **POWER+** to start up.

The following screen is displayed:

LOAD LEVEL	GAMATRONIC	---22:21:18---
L1:_____	000A, 120V	BATTERY: 432V
L2:_____	000A, 120V	UPS OK (ON)
L3:_____	000A, 120V	STSW OK (INV)


← Status indications

Observe that UPS OK indication is now ON and the STSW OK now indicates INV.


If the display continues to indicate BYP, check on the Static Switch panel, that the inverter is running.

If the inverter indicator on the Static Switch panel is OFF:

- Press the Inv/Byb button on the static switch panel to switch the inverter ON and wait for the indicator to light.
- Press the Inv/Byb button on the lower right of the control panel.

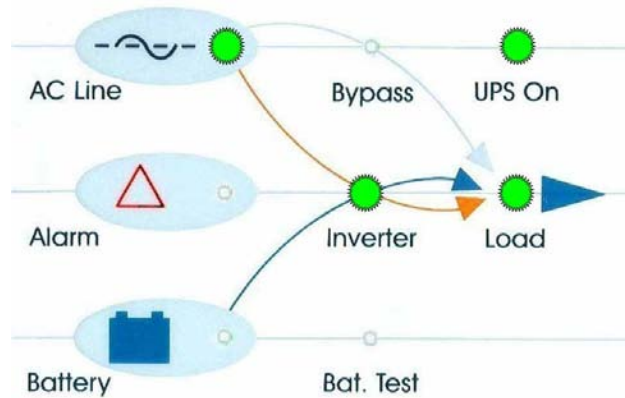

3. Connect the load and observe the results on the display.

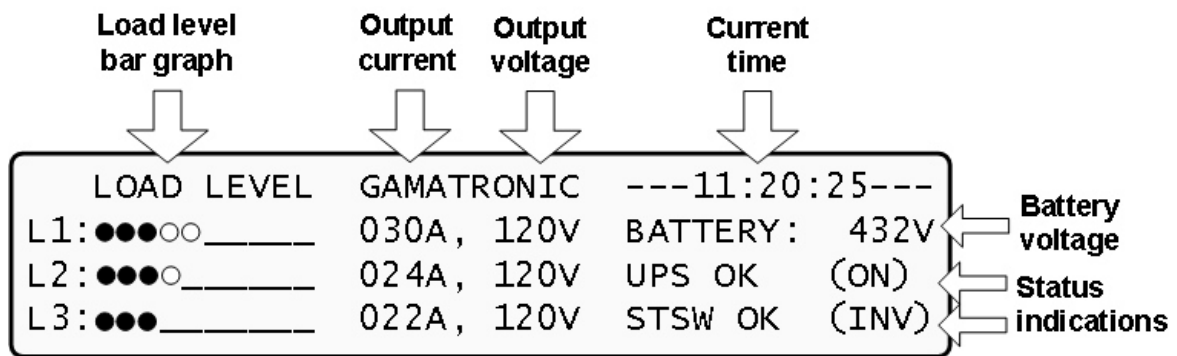

4. Observe that the “dot” bar graph now indicates the load presence and relative power consumption. Filled dots indicate kW; empty dots indicate kVA.


POWER+ start-up is now complete.

6.2 **POWER+** shutdown (switching to bypass)

1. Switch the load OFF.
2. Press twice on the On/Off button.
3. Wait 2 minutes for the **POWER+** to shut down. The control screen will indicate UPS OK (OFF).

LOAD LEVEL	GAMATRONIC	---22:21:18---
L1:_____	000A, 120V	BATTERY: 432V
L2:_____	000A, 120V	UPS OK (OFF)
L3:_____	000A, 120V	STSW OK (BYP)


Note: This does NOT switch the entire **POWER+** OFF. Power is still delivered to the load but in bypass.

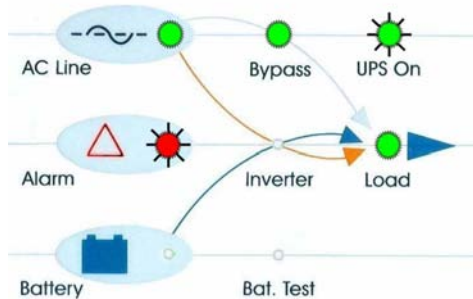

6.3 **POWER+** total shutdown (no ac output)

1. Switch the load OFF.
2. Press and hold the On/Off button for 10 seconds.
3. The control screen will indicate UPS OK (OFF).

LOAD LEVEL	GAMATRONIC	---09:10:02---
L1:_____	000A, 235V	BATTERY: 000V
L2:_____	000A, 235V	UPS OK (OFF)
L3:_____	000A, 235V	STSW warning !

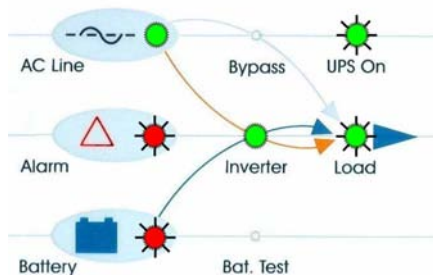

7. **POWER+** CONTROL PANEL

The user manages the **POWER+** system via a touch-pad control panel and an LCM (LCD) display on the front panel of the controller. The control panel serves as the user's primary interface with the system. Messages, warnings, and error conditions are relayed to the user through the display, LEDs and audible alarms.

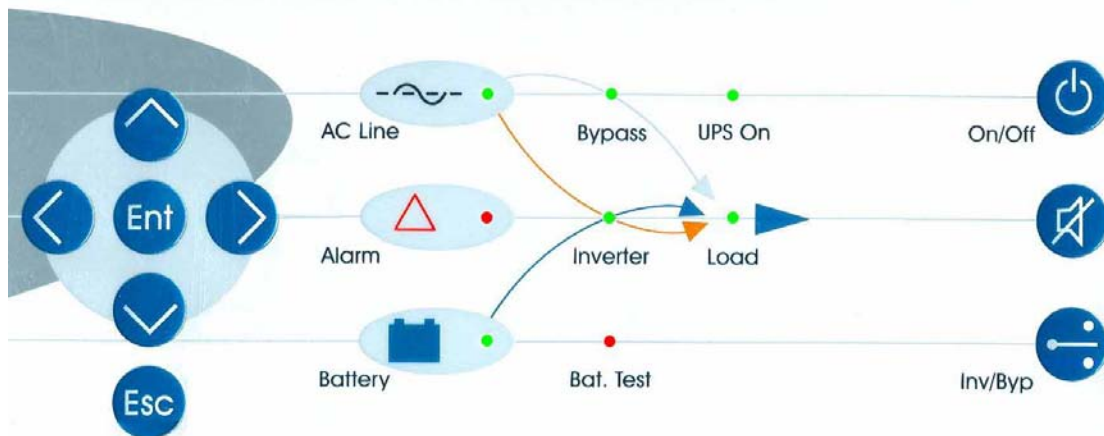



Figure 28: Control panel

The remainder of the current chapter contains a quick-reference summary of the functions available through the **POWER+** control menu.

Chapter 8 beginning on page 37 illustrates in detail the functions available through the **POWER+ control menu.**

7.1 Quick-reference summary of Power+ menu functions

To access the **POWER+** main menu, press the “ENT” key:

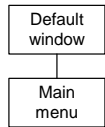

1> SYSTEM	4> HISTORY	7> SETUP
2> UPS MODULE	5> BATTERY	8> STATIC SW
3> SELFTEST	6> ALARM	9> COMM.
NAVIGATE: <UP, DOWN> 1 SELECT: <ENTER>		

MAIN MENU Option 1: SYSTEM

- View battery voltage, input/output AC power and power factor values
- View input/output measurements voltage/current
- View operating time
- View controller jumper settings
- View controller voltages
- View battery temperature
- View dry contacts state
- View PD technical bit dialog for each UPS module

MAIN MENU Option 2: UPS MODULE

- View in/out voltage/current, DC voltage, PLL info and operation bits for each UPS module (technical information)

MAIN MENU Option 3: SELFTEST

- Perform a controller self-test, without affecting system operation

MAIN MENU Option 4: HISTORY

- View the history log

MAIN MENU Option 5: BATTERY

- View battery capacity, equalizing settings, battery test progress, battery condition and current limit

MAIN MENU Option 6: ALARM

- View a short version of alarms list and their state

MAIN MENU Option 7: SETUP

- (See the “SETUP” submenu)

MAIN MENU Option 8: STATIC SW

- View the ST/SW inverter/bypass voltage and the output current

MAIN MENU Option 9: COMM.

- Select the communication type for the interface

The “SETUP” submenu, option “7” from the main menu:

SETUP submenu Option 1: ALARM SET

1> AC VOLT

- 1) **Set AC High & Low Alarm Levels**
 - *Set the AC low voltage and AC high voltage alarm levels*
- 2) **Set AC Alarms Hysteresis**
 - *Set the AC alarm response tolerance.*

2> FLOAT VOLT

- 1) **BATEND**
 - *Set the end of backup DC voltage*
- 2) **BATLOW**
 - *Set the battery low alarm voltage*
- 4) **BAT-HI**
 - *Set high DC voltage alarm*

7> TEMPERATURE

- 1) **Over Temperature**
 - *Set the over-temperature alarm value*
- 2) **Under Temperature**
 - *Set the under-temperature alarm value*

9> INTEGRAT.

- *Set the number of communication repeats until processing an alarm*

SETUP submenu Option 2: MODULE CONF.

1> NUM OF PHASE

- *Set the single/triple phase indication on the controller*

2> MODULE/S FREQUENCY

- *Set the actual frequency for all modules – 50Hz/60Hz or dip switch hardware setting*

3> MODULE/S VOLTAGE

- *Set the actual module output voltage: 110v,115v,120v etc...*

4> UPDATE VOLT/FREQ

- *Send the selected voltage and frequency values to UPS modules*

5> OUTPUT ADJUST

- *Set the exact output voltage on each phase for each module*

6> FREQUENCY LIMITS

- *Set the acceptable bypass frequency tolerance: 0.5Hz to 4Hz*

SETUP submenu Option 3: BATTERY

1> TEST-VOLTAGE

- Set the battery test DC voltage (lowest)

2> TEST ALARM

- Set the low battery DC voltage for alarm

3> CURRENT-LIMIT

1) Current Limit Value Setup

1> Set C. Limit Of Battery #1 (Value)

- *Set the current limit for battery cabinet number one*

2> Set C. Limit Of Battery #2 (Value)

- *Set the current limit for battery cabinet number two*

3> Set C. Limit Of Battery #3 (Value)

- *Set the current limit for battery cabinet number three*

2) Enable/Disable Current Limit (State)

- *Enable or disable the battery current limit function*

4> TEMP COMPENSAT..

1) Temperature Compensation Value Setup

- *Set the temperature compensation value: 2.0 to 4.0 mV/C⁰ per battery cell*

2) Enable/Disable Temp. Compensation (State)

- *Enable or disable the battery charging temperature compensation feature*

3) Set ABSOLUTE Max & Min Voltages

1> Set ABSOLUTE MINimum Output Voltage

- *Set the minimal DC voltage under compensation*

2> Set ABSOLUTE MAXimum Output Voltage

- *Set the maximal DC voltage under compensation*

5) BATTERY TEST...

1> Activate Battery Test...

- *Perform a manual battery test*

2> Set Auto Battery Test Period

- *Set a period between automatic battery tests in weeks*

3> Set Auto Battery Test Top Time

- *Set the longest time for the automatic battery test*

6) CAPACITY (Value)

1> Set Capacity Of Battery #1 (Value)

- *Set the capacity (AH) rating of the first battery bank*

2> Set Capacity Of Battery #2 (Value)

- *Set the capacity (AH) rating of the second battery bank*

3> Set Capacity Of Battery #3 (Value)

- *Set the capacity (AH) rating of the second battery bank*

7) 'AUTO' TEST

- *Perform a manual activation of the automatic battery test*

8) ENABLE/DIS OPTIONS

- 1> ENABLE/DISABLE SHUTDOWN by long AC FAIL (On/Off)
 - *Enable or disable automatic shutdown after 3 hours of power failure*
- 2> ENABLE/DISABLE Current Sensors (On/Off)
 - *Enable or disable the usage of battery current sensors*
- 3> ENABLE/DISABLE BATT Temperature sensor (On/Off)
 - *Enable or disable the usage of battery temperature compensation sensor*

SETUP submenu Option 4: CHARGE

2> Floating Parameters Setup.

- Set the actual DC voltage of the system (ups charging voltage)

SETUP submenu Option 5: TIME

- Set the date and the time of the RTC (real time clock) of the controller

SETUP submenu Option 6: SITE

- Set the 6 digit site number for identification through the management software

SETUP submenu Option 7: PASSWORD #1

- Set the 8 character password for entering the SETUP submenu

SETUP submenu Option 8: SERVICE

2> UPSs

- Turn selected UPS modules on or off

4> DRYOUT TEST

- Test the output dry contacts of the controller

5> CONFIGURE

1) # OF UPSs (redundancy)

- *Set the number of modules used for redundancy only, which will not be counted in the global power of the system*

2) # OF UPSs (total)

- *Set the number of UPS modules in the system*

3) # OF BATT

- *Set the number of battery cabinets for the system – 1, 2 or 3*

4) Static Switch Setup

- *Special function, not for customer use!*

5) DRY, Alarms

1> Dry1 Association

- *Set the alarms that will trigger dry contact number 1*

2> Dry2 Association

- *Set the alarms that will trigger dry contact number 2*

3> Dry3 Association

- *Set the alarms that will trigger dry contact number 3*

- 4> Dry4 Association
 - *Set the alarms that will trigger dry contact number 4*
- 5> Dry5 Association
 - *Set the alarms that will trigger dry contact number 5*
- 6> Dry6 Association
 - *Set the alarms that will trigger dry contact number 6*
- 7> Enable / Disable Alarms
 - *Enable or disable specific alarms from the list of 32*

6) CALIBRATION

- 2> DC-I Offset removal
 - *Set the battery DC current to zero if not calibrated properly, must be done before the DC-I calibration with disconnected batteries*
- 3> DC-I Calibration
 - 1> Calibrate Battery #1 Current
 - *Set the measurement current for the first battery cabinet (mA)*
 - 2> Calibrate Battery #2 Current
 - *Set the measurement current for the second battery cabinet (mA)*
 - 3> Calibrate Battery #3 Current
 - *Set the measurement current for the third battery cabinet (mA)*

7) PARALLEL/STANDALONE

- *Set the system operation – stand alone or parallel for more than one UPS system*

9> SC2012

1) Restart Controller

- *Restart the system controller – will not affect the output voltage*

2) Factory Settings

- *Resets system settings to the default values and restarts the controller – hard reset, for use on manufacturing stage usually*

3) Network...

1> Set IP ADDRESS

- *Set the IP address for the system communications*

2> Set GATEWAY

- *Set the default gateway for the system communications*

3> Set MASK

- *Set the subnet mask for the system communications*

4> Store

- *Store the communication information after changing it*

5> SNMP Factor

- *Set the SNMP no communication factor*

4) Reset MBX

- *Reset the communication card*

SETUP submenu Option 9: SILICON

2> RESET LOG

- Reset (clear) the controller's history log

3> DEFAULTS

1) Restore Factory Defaults...

- *Restore the controller values to the factory preset and restart the controller – soft reset, reapplies the factory settings*

2) Restore User Defaults...

- *Restore the controllers user saved preset*

3) Save User Defaults...

- *Save the current controller settings (user preset)*

5> RESET TOTAL TIME

- Reset the total system up-time

6> LAST MAINT, SET

- Reset the last maintenance date to the current date

The Information menu, accessed with the “ESC” key (press and hold).

1> UPSs Stat

- Displays the status of each UPS module in the system – good or bad.

2> UPSs On/Off

- Displays whether the state is on or off for each UPS module

3> SoftWare Rev

- Displays the firmware revision for system controller and the communication card

4> Network...

- Displays the communication card IP settings and the network faults information

5> Dry In/Out Stat

- Displays the dry contact closed/open information for all of the input output dry contacts

6> Alarms Status

- Displays the list of all alarms and the active ones, including each alarm's long name

7> Language

- System controller's LCD panel language selection – English or Spanish

8> General

- *Displays global system information:*
- *Software revision*
- *Battery current limit on or off*
- *Battery temperature compensation on or off*
- *Last maintenance date*
- *Site 6 digit number*
- *Total battery capacity*
- *DC voltage setting*

This page left blank deliberately.

9. POWER+ MENU FUNCTIONS IN DETAIL

This chapter describes the functions available through the **POWER+** Main Menu and its submenus.

9.1 Main Menu

Press the Enter button to display the main menu.

Note: To return to the main menu at any time, press the Escape button and then the Enter button.

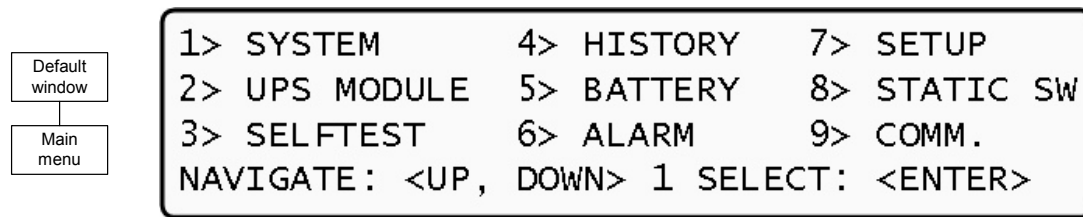


Figure 16: Main menu

Table 2: Main Menu Options

1 >	SYSTEM	General information such as voltages, currents etc.
2 >	UPS MODULE	Information for a specific UPS module
3 >	SELFTEST	Self checking of the Controller's components (supply, RTC, memory)
4 >	HISTORY	History log events (last 255 events, dated and timed)
5 >	BATTERY	Charging / discharging voltages and currents, battery test etc.
6 >	ALARM	Detailed alarm status
7 >	SETUP	Configuring the system (number of modules, alarm, time etc.)
8 >	STATIC SW	Static Switch data
9 >	COMM	Determining the type of communications(TCP/IP, RS232 or WING)

9.1.1 System

From the main menu select option 1 (System) to show the DC voltages (positive, negative and summary):

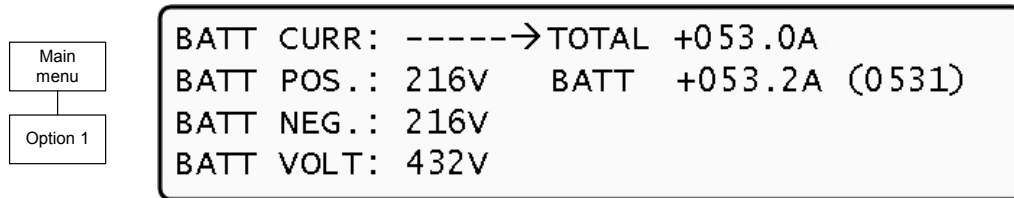


Figure 17: System DC voltages

Note: The example shown in Figure 17 illustrates only 1 battery installed.

Press the ► key to view the results of power factor 0.²

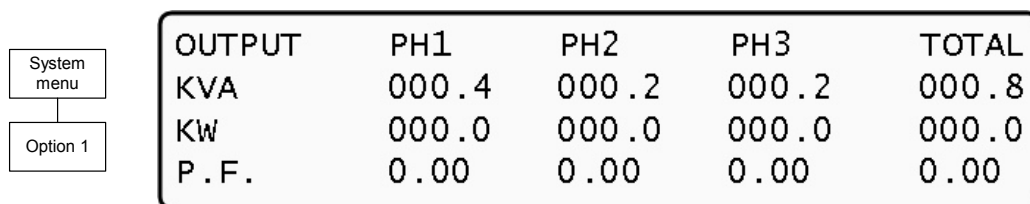


Figure 18: Power factor 0

Press the ► key again to view the results of power factor 0.5

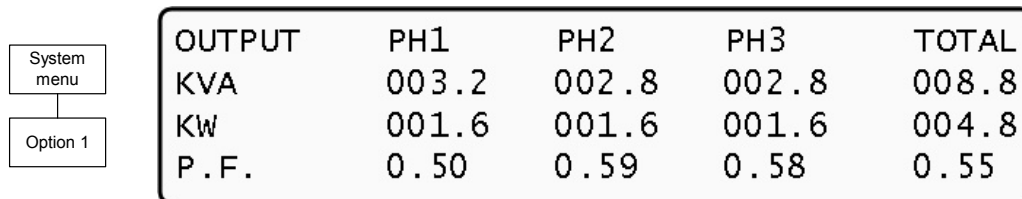


Figure 19: Power factor 0.5

Press the ► key again to view the results of power factor 1.0

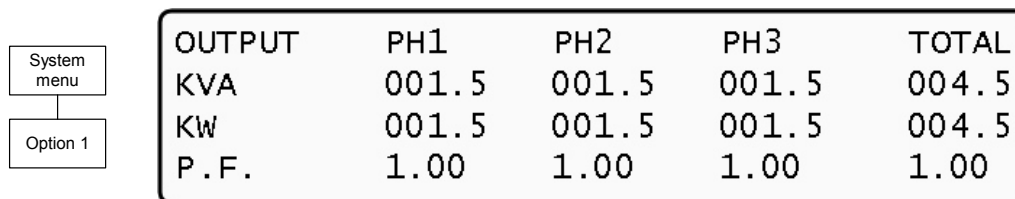


Figure 20: Power factor 1

Click Esc and then the Enter button again to return to the main menu (Figure).

Select System (1).

Press the ▼ key to view the next windows, shown in Figure 21 through Figure 29.

² 1KVA is 1000 VA. Apparent power is measured in VA which is a reactive (i.e. a mix of both capacitive and inductive) load's RMS voltage multiplied the RMS current. True power is VA multiplied by the power factor, and the power factor is the cosine of the phase angle between voltage and current. A reactive load that draws an apparent power of 1000VA and has a 0.5 power factor is consuming 500 watts of power. If a device were purely inductive, it would have a power factor 0. See also footnote 1, on page 6.


```

System menu
Option 1

phase:  --r--      --s--      --t--
in:    235v/044.0a 234v/044.0a 234v/042.0a
out:   231v/043.0a 231v/042.0a 232v/042.0a
----- total ups in/out measurements -----
    
```

Figure 21: Overall phase voltages/currents

```

System menu
Option 1

total    time: 00004 hours
current sess.: 00004 hours
boots    so far: 00001 times
    
```

Figure 22: Elapsed time

```

System menu
Option 1

jMP:      jmp1, Jmp2, jmp3, jMP6 and jmp9
●=IN      1. not hard silicon
○●●●●    2. silicon mode 6. no rmt pan.
12369    3. jp3:      oN 9. jp9:      on
    
```

Figure 23: Jumper settings WITHOUT remote panel

```

System menu
Option 1

jMP:      jmp1, Jmp2, jmp3, jMP6 and jmp9
●=IN      1. not hard silicon
○●●○●    2. silicon mode 6. remote pan.
12369    3. jp3:      oN 9. jp9:      on
    
```

Figure 24: Jumper settings WITH remote panel

Note: In Figure 25 and Figure 26, “Silicon Mode” indicates that the configuration jumper is installed, thus allowing for modifications. “Hard Silicon” indicates that the factory defaults hard reset jumper is installed. This is required only at the factory or whenever software reset fails.

```

System menu
Option 1

5vdc : 5.19V          controller internal
12vdc: 09.41V          voltages
5vP  : good
5v2  : good          -12vdc: good
    
```

Figure 25: Controller – internal voltages

```

System menu
Option 1

battery charge level: 010ah 050%
while, total capacity: 020aH
remaining backup: 0010 minutes
battery temperature: 04`C
    
```

Figure 26: Battery temperature

Note: The data displayed in Figure 26 depend on the options installed and configured. See Figure 67 on page 66 and Figure 84 on page 69.

```

System menu
Option 1
batt fuse:   bad      emergency:  open
2:          open     6:         open
3:          open     7:         open
4:          off      8:         open
    
```

Figure 27: Fuse status

```

System menu
Option 1
pd dialog:  ups      #01
t>c0 42 00 00 d8 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 aa
    
```

Figure 28: Communication with inverter – transmit

```

System menu
Option 1
r<e0e0 0900 0003 0003 0003 e874 1074
1074 2f37 5362 0000 0200 0100 0310
f077 0000 0000 0000 0000 0000 0000
0000 0000 0000 0000 52 52
    
```

Figure 29: Communication with inverter – receive

9.1.2 UPS module

1. From the main menu, select option 2 (UPS MODULE) and press the Enter button to display the instructions window shown in Figure 30.
2. Press the ▼ key to view information about the UPS modules of the system.
3. Scroll ► and ◀ keys to view additional information for the specific module chosen.

Figure 31 and Figure 32 below show parameters of the first module of 4 modules (UPS: #01/04).

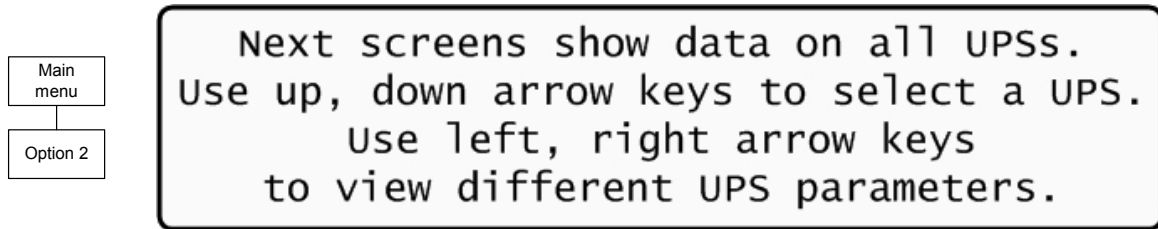


Figure 30: Instructions

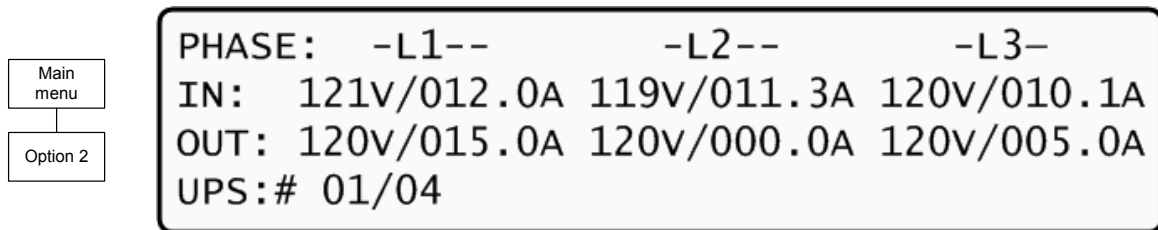


Figure 31: Module phase voltages/currents for module 1 of 4

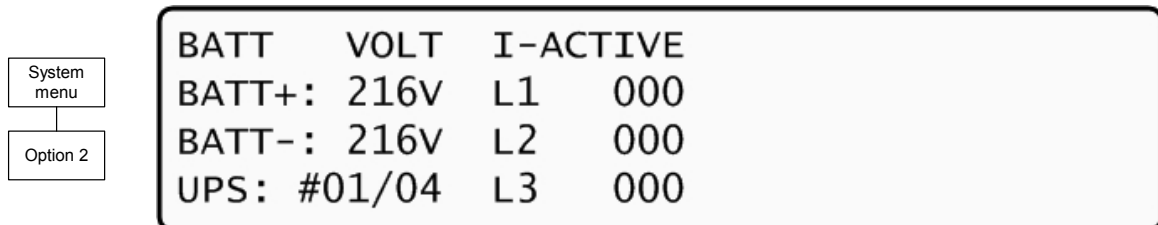


Figure 32: Battery voltages for module 1 of 4

Click Esc and then the Enter button again to return to the main menu (Figure).

9.1.3 Self-test

From the main menu select option 3 (SELF TEST) to run a self-test of the **POWER+**. The self-test displays the window shown in Figure 33. You can run a self-test at any time without interfering in the normal operation of the **POWER+**. A self-test is also initiated by the **POWER+** itself each day at midnight.

The failure of a self-test sets on the self-test alarm. The self-test alarm can only be cleared by a subsequent successful self test, or it can be cleared manually by a maintenance technician. Powering the **POWER+** down and up, for example, does not clear the self-test alarm. This is because the failure of a self-test is considered a serious event that should not be “forgotten”. A self-test failure is also recorded in the alarm log.

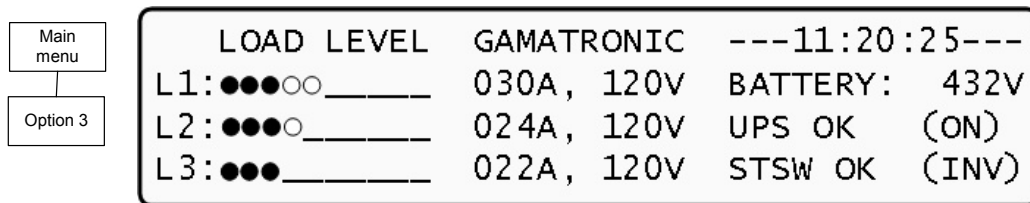


Figure 33: Result screen from self-test

9.1.4 History (logs)

From the main menu select option 4 (HISTORY) to display the window shown in Figure 34. The last 255 events reserved in the LOG are displayed, as shown in Figure 35.

Navigate the LOG by scrolling using the ▲ and ▼ keys.

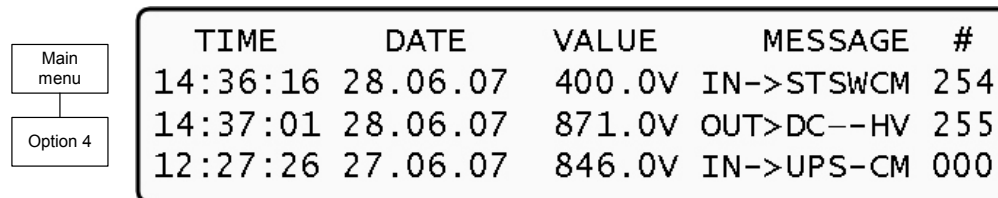


Figure 34: History logs

Navigate the LOG by scrolling using the ◀ and ▶ keys.

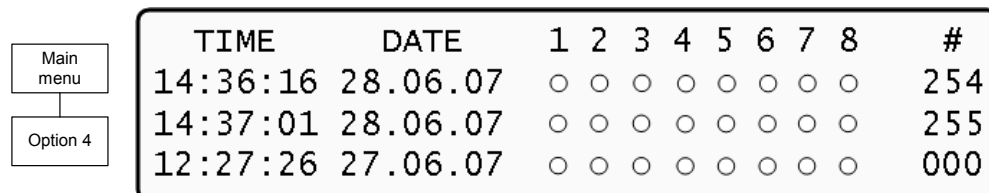


Figure 35: History log scroll

Table 3 below itemizes the log messages that appear on the controller panel.

Table 3: Log Messages

#	Message	Explanation
01	UPSMAJ	More than 1 UPS Module is sending an alarm or fault warning
02	UPSMIN	Single UPS Module is sending an alarm or fault warning
03	-----	N.A.
04	-----	N.A.
05	LOADBP	Load is now running on bypass ³
06	VIBRA_	Alarm(s) vibrating. Alarm is frequently raised and lowered. Ignore to avoid loading the log filling up.
07	OVTEMP	Excess temperature
08	OUTFLT	No AC output to load
09	BAT-HI	Excessive battery voltage
10	-----	N.A.
11	BATEND	End of battery backup. Battery is discharged to shutdown limit
12	BATLOW	Low battery voltage
13	STSWRN	Static Switch Warning or alarm
14	E.P.O.	Emergency Power Off is active
15	EQ-HST	Battery is currently charging in equalizing mode, dc voltage is temporarily increased
16	BATFLT	Batteries failed last test
17	USER-1	User 1 input open
18	USER-2	User 2 input open

³ Given as a decimal, this is the sum of 8 components each with its own weight:

- Detection of inverter voltage blackout for >3mS – 0 if not detected, 1 if detected
- Detection of inverter peak voltage <185V (brownout) - 0 if not detected, 2 if detected
- Detection of inverter peak voltage high <185V (brownout) - 0 if not detected, 4 if detected
- Detection of frequency beyond limits (45-65Hz) - 0 if not detected, 8 if detected
- Detection of inverter average voltage low - 0 if not detected, 16 if detected
- Detection of inverter average voltage high - 0 if not detected, 32 if detected
- 64 if instruction for load transfer is received from the controller
- 128 if instruction for load transfer is received from the Static Switch

Example:

If LOADBP data is 67, (64 + 2 + 1) this means that 3 components are active:

- Instruction to transfer the load was issued by the controller (64)
- Low peak voltage detected (2)
- Voltage blackout encountered (1)

#	Message	Explanation
19	USER-3	User 3 input open
20	AC-BRN	Input AC supply Brown Out
21	ACIN_H	AC input excessive
22	ACFAIL	AC input failure
23	STSWCM	Static Switch does not respond
24	SLFFLT	Last controller self-test failed
25	BAT-CB	Battery Circuit Breaker Open
26	CURSHR	Current Sharing fault, load current is not equally divided between modules
27	UPSOUT	Fault (no current) in 1 or more output stage
28	UPSHDN	UPS shutdown by EPO, Battery Discharge, ON/OFF pressed
29	OVLOAD	Load current is high
30	UPS-CM	One or more UPS's not responding
31	STRTUP	Startup time-stamp
32	-----	N.A.

Each message is formatted as follows:

Time – HH:MM:SS

Date – YY:MM:DD

Data – DC voltage between + and – terminals for all events except LOADBP and STSW status for LOADBP events. (See below.)

Even start (IN) and end (OUT)

Description – (See Table 3 above)

Event number – 0 through 255, 255 being the most recent

Example:

11:23:56 05.01.28 865 IN -> E.P.O. 254

This message means that at 11:23:56 on January 28th 2005, Emergency Power Off alarm was registered as event 254; dc voltage at the time was 865 V being a sum of (V+ -N) and (V- -N).

9.1.5 Battery

From the main menu select option 5 (Battery) to display the window shown in Figure 36.

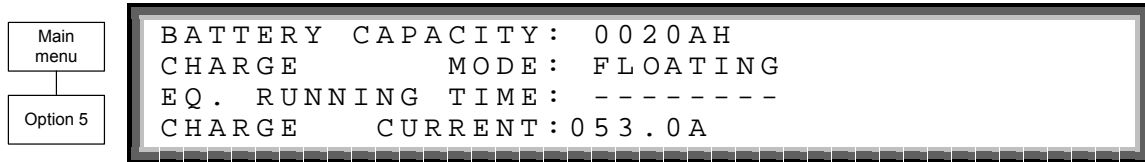


Figure 36: Battery status

Press the ▼ key to view the next window.

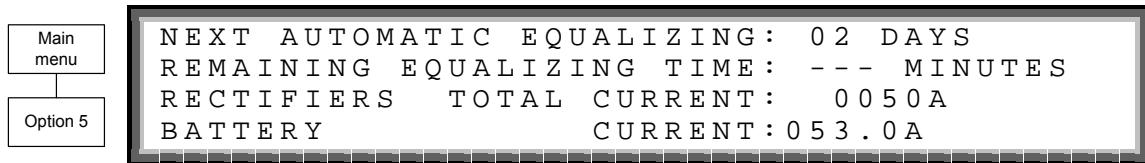


Figure 37: Battery equalizing

Press the ▼ key to view the next window.

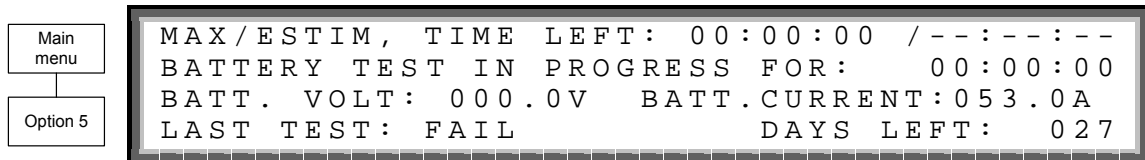


Figure 38: Time left

Note: Figure 39 through Figure 41 show the individual batteries on the left and the overall total on the right. In the examples shown, only one battery is installed.

Press the ▼ key to view the next window.



Figure 39: Last test

Press the ▼ key to view the next window.

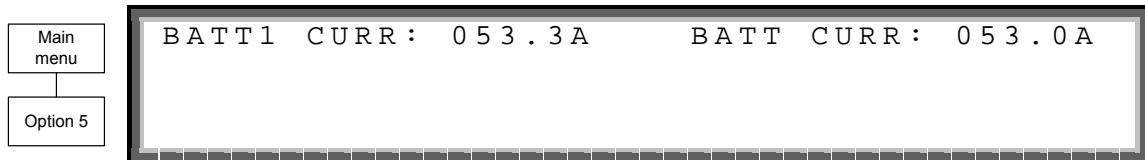


Figure 40: Battery current

Press the ▼ key to view the next window.

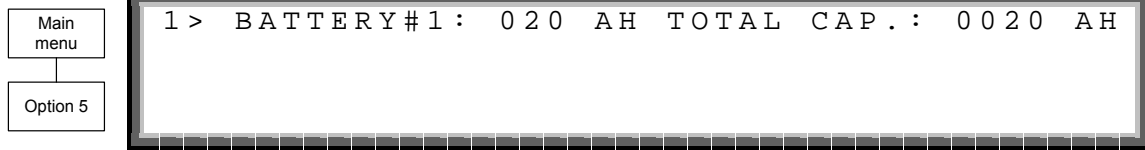


Figure 41: Battery capacity

Press the ▼ key to view the next window.

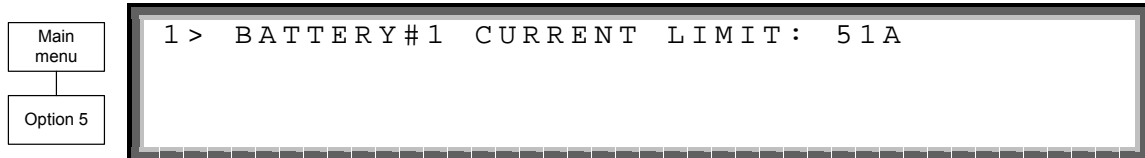


Figure 42: Battery current limit

9.1.6 Alarm

From the main menu select option 6 (Alarm) to display the window shown in Figure 43.

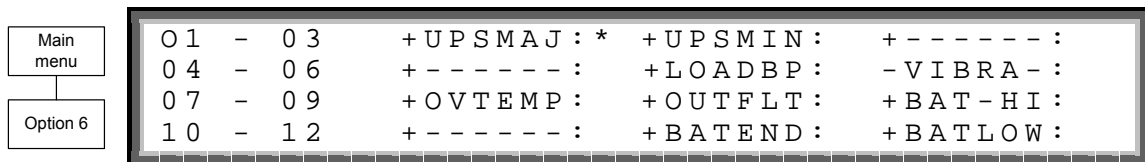


Figure 43: Alarms 01-12

Press the ▼ key to view the next window.

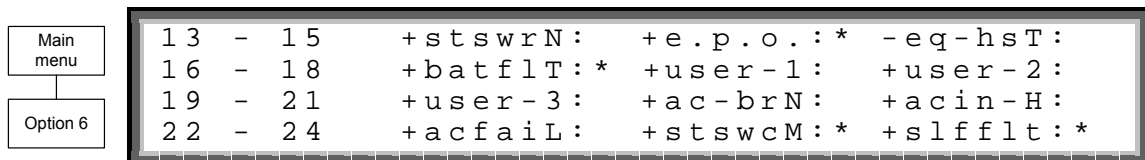


Figure 44: Alarms 13-24

Press the ▼ key to view the next window.

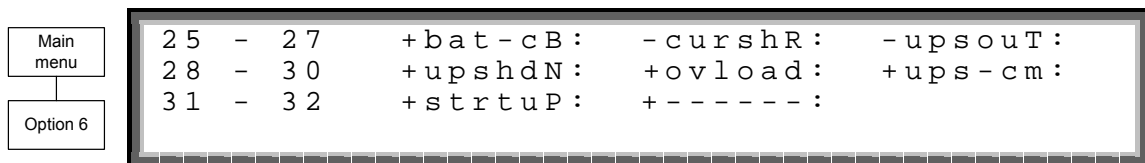


Figure 45: Alarms 25-32

9.1.7 Setup menu

From the main menu select option 7 (Setup) to display the window shown in Figure 46.

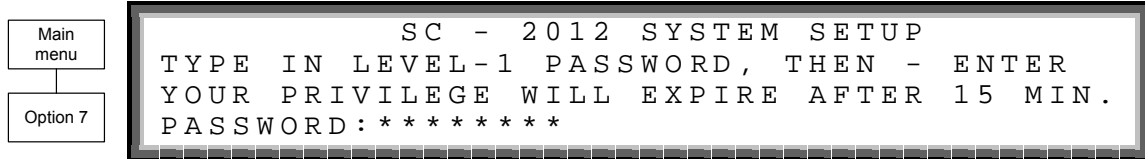


Figure 46: Level 1 password access

Using the keypad, type the password and press the Ent button. The setup main menu will show up on the panel as shown in Figure 47.

Press the ▼ key to view the next window.

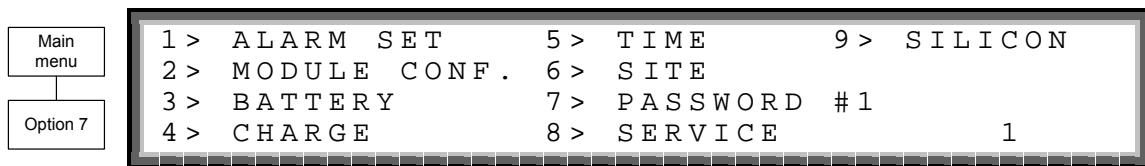


Figure 47: Setup menu

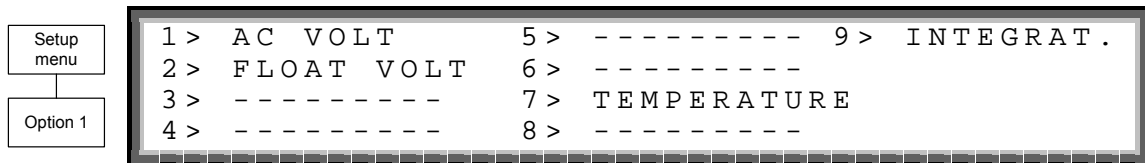


Figure 48: Setting AC voltage alarm thresholds

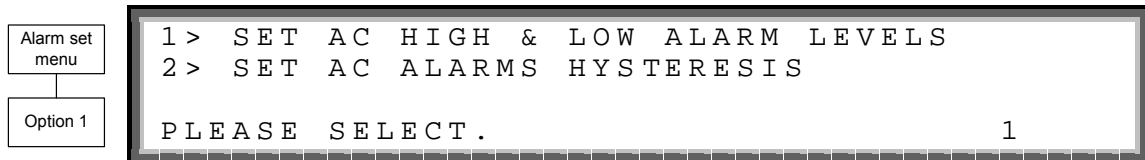


Figure 49: Setting AC voltage levels

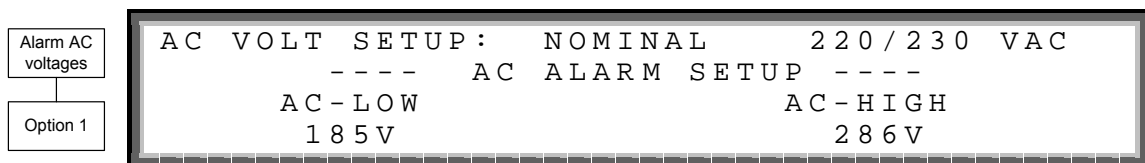


Figure 50: AC voltage alarm setup

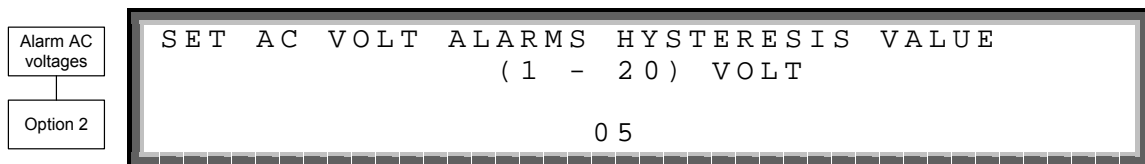


Figure 51: AC voltage hysteresis



Figure 52: Battery parameters for alarm

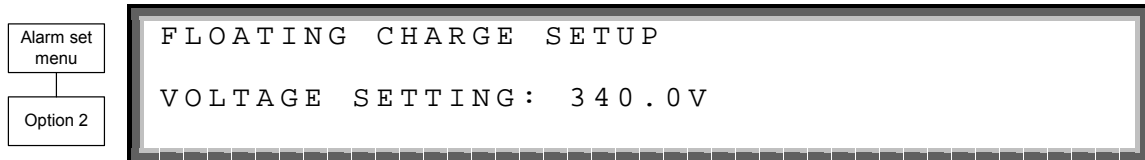


Figure 53: Battery floating charge setup for alarm



Figure 54: Alarm battery temperature menu

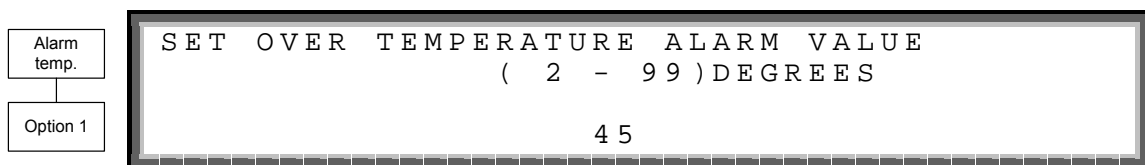


Figure 55: Alarm battery maximum temperature setting

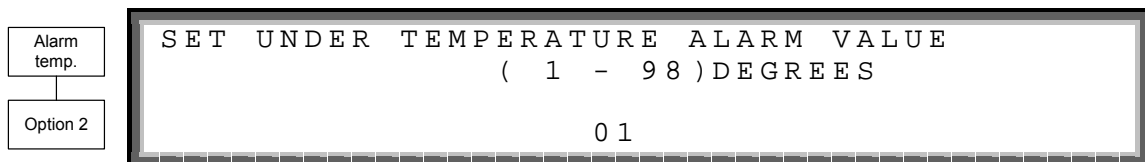


Figure 56: Alarm battery minimum temperature setting

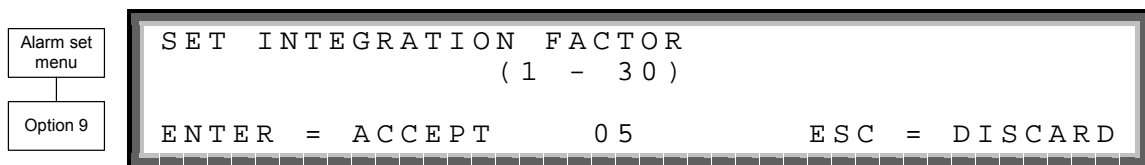


Figure 57: Alarm integration factor setting

The Alarm Integration Factor determines the number of times that the controller polls and retries to determine the USP status before deciding on an error status. Setting the alarm integration factor too low will cause spurious alarms to be generated; conversely, setting the alarm integration factor too high may result in an alarm only being raised when it is already too late to take corrective action.

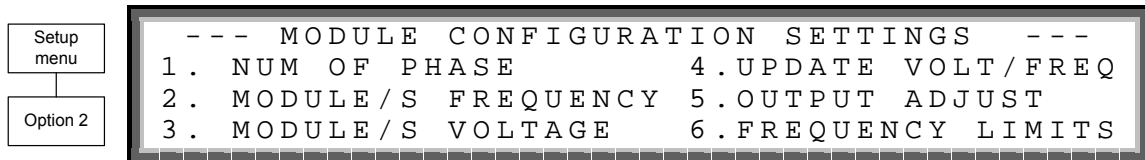


Figure 58: Line configuration menu

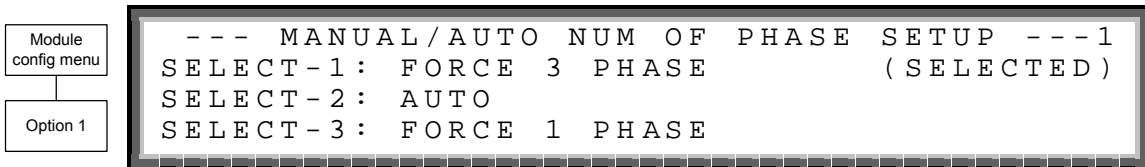


Figure 59: Setting number of phases

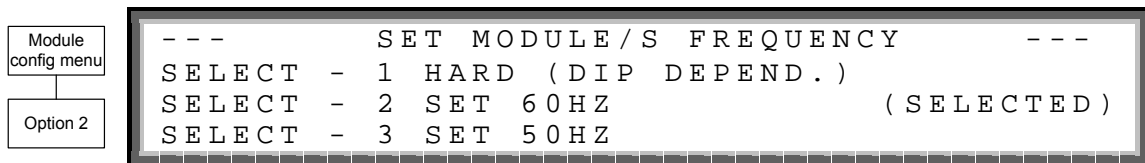


Figure 60: Setting the sine wave frequency



Figure 61: Setting the module voltage

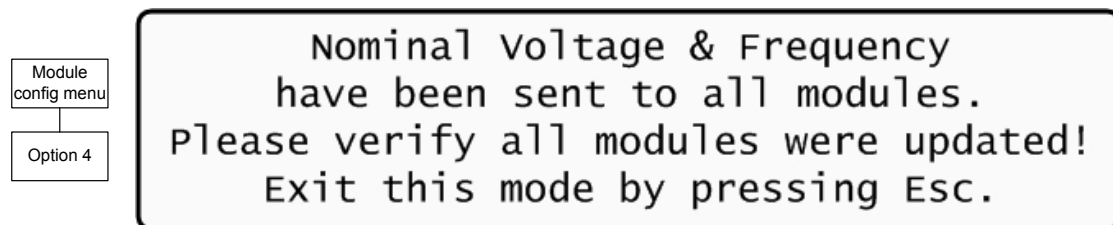


Figure 62: Setting confirmation

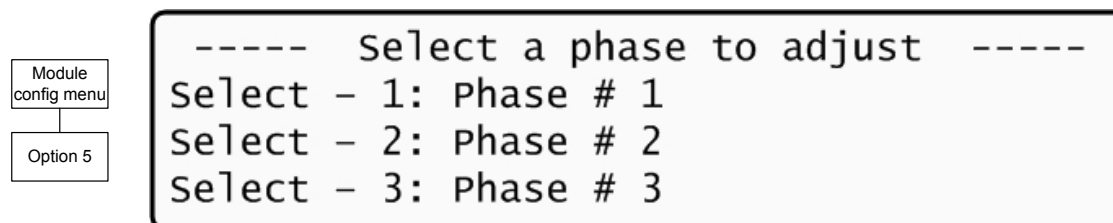


Figure 63: Output fine-tuning adjustment – select phase

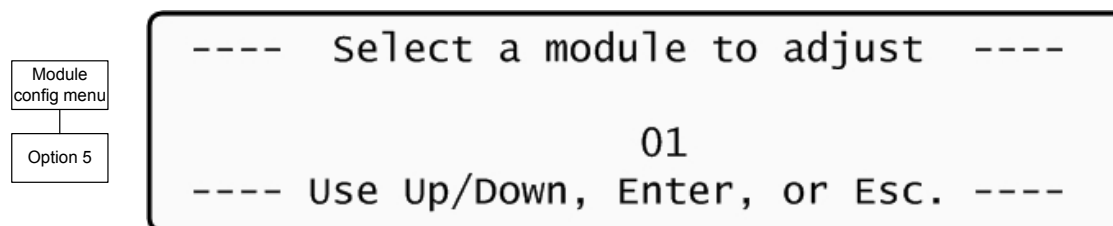


Figure 64: Output fine-tuning – select module

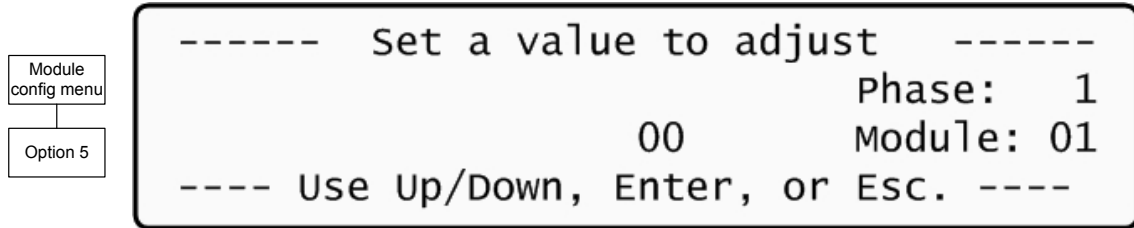


Figure 65: Output fine-tuning – select value

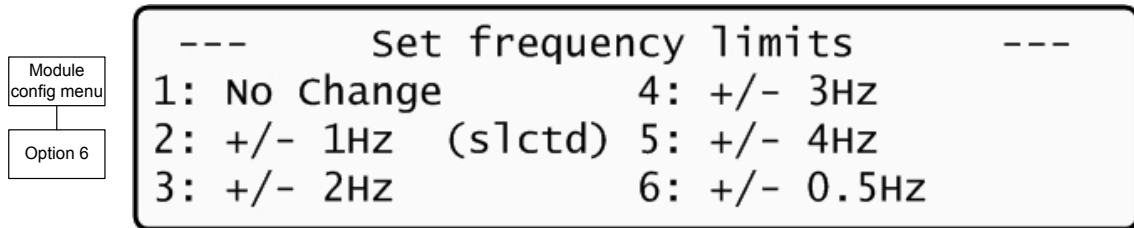


Figure 66: Output fine-tuning – set frequency limits

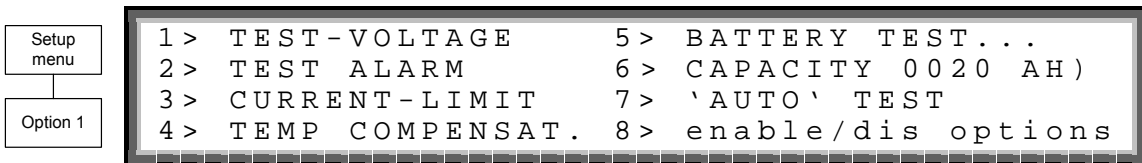


Figure 67: Battery settings menu

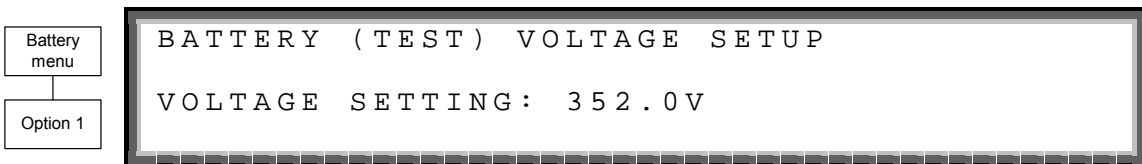


Figure 68: Battery Test Voltage Setup

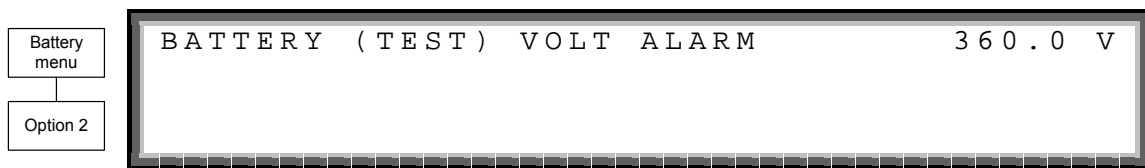


Figure 69: Battery test voltage alarm setup

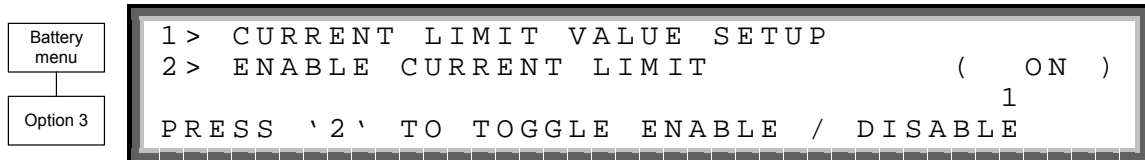


Figure 70: Current limit setup menu

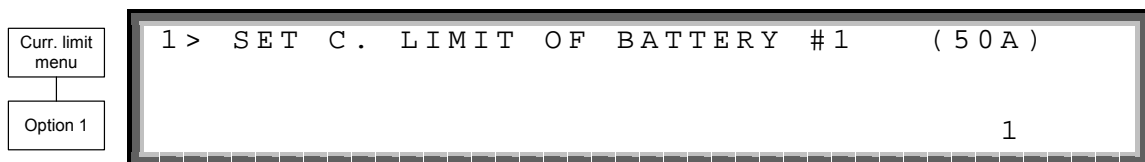


Figure 71: Battery current limit setup

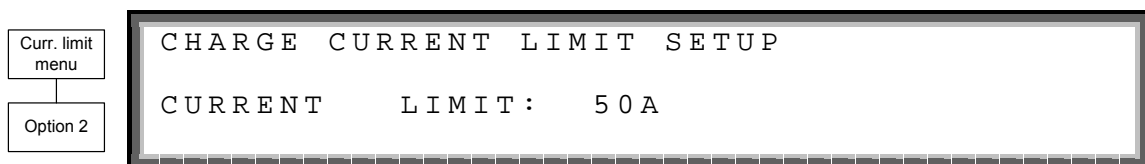


Figure 72: Charge current limit setup

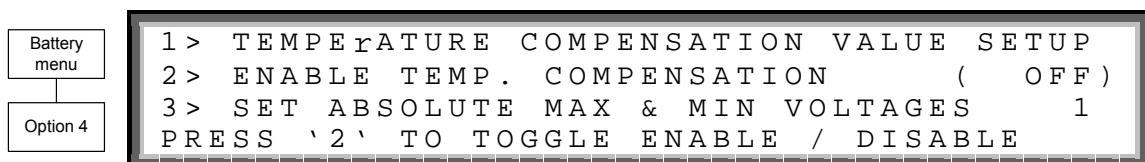


Figure 73: Temperature compensation menu (disabled)

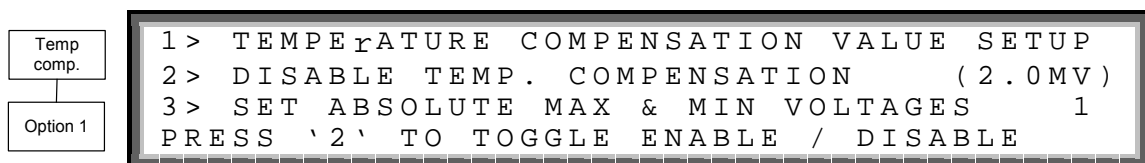


Figure 74: Temperature compensation menu (enabled)

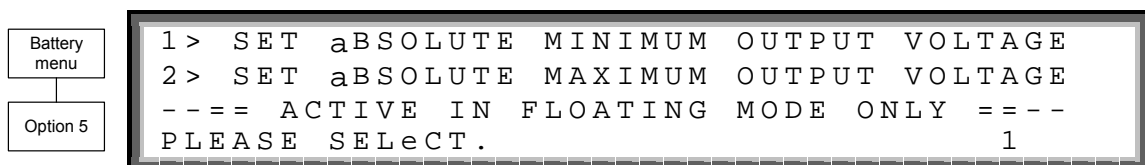


Figure 75: Battery Test – Setting floating mode voltages

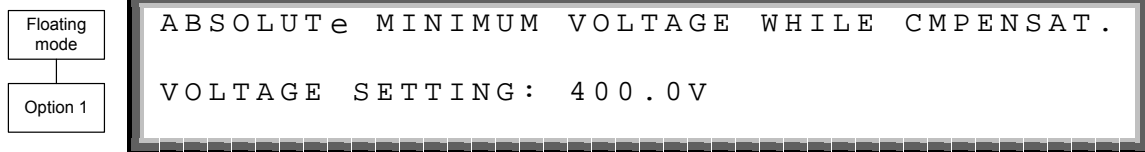


Figure 76: Battery Test – Set min. compensation voltage

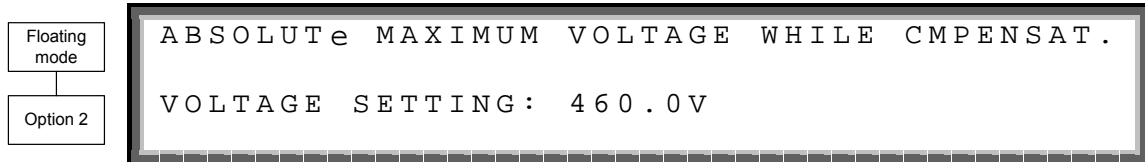


Figure 77: Battery Test – Set max. compensation voltage

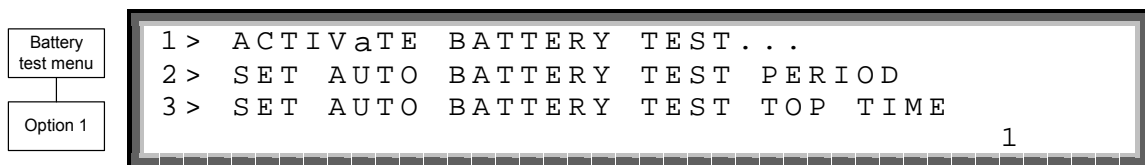


Figure 78: Battery test – settings

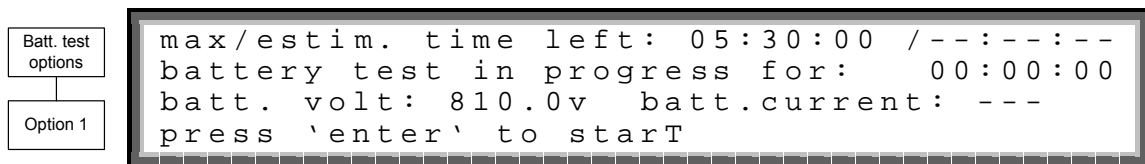


Figure 79: Battery testing

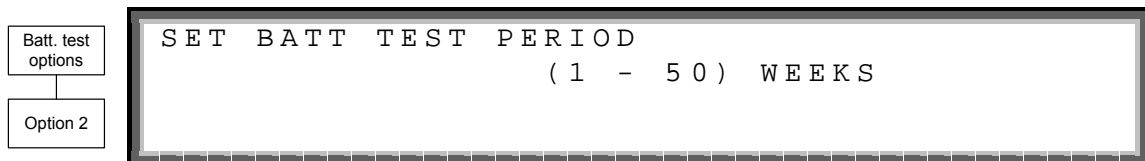


Figure 80: Battery test – setting test period

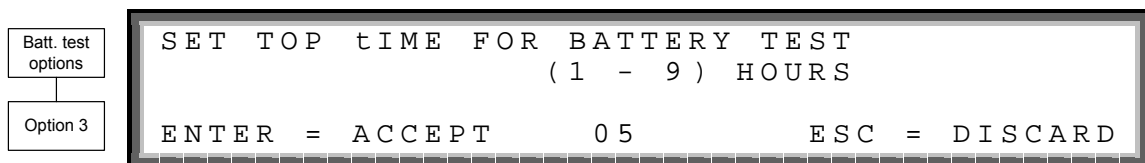


Figure 81: Battery test – setting maximum time



Figure 82: Setup – setting equalizing/floating parameters

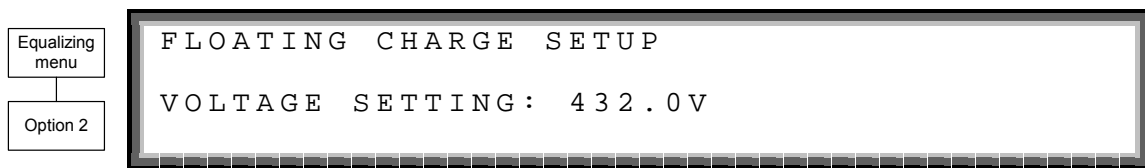


Figure 83: Setup – setting floating voltage

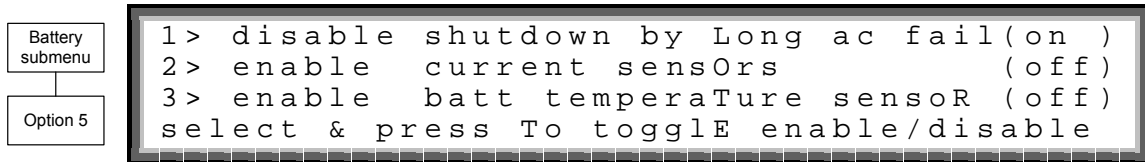


Figure 84: Battery menu, enable/disable options

Option 1 allows the user to enforce shutdown after a given length of input AC failure, even when the batteries are still fully charged.

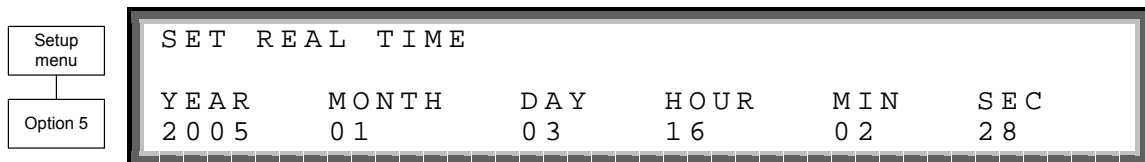


Figure 85: Setup - setting real Time

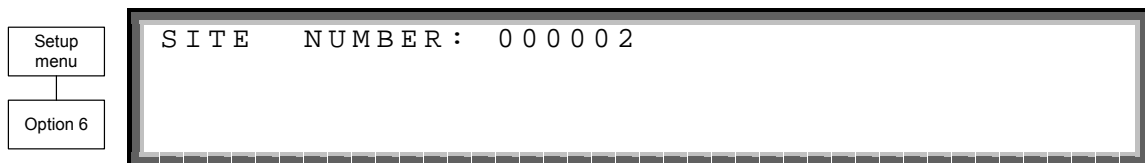


Figure 86: Setup - configuring the site number

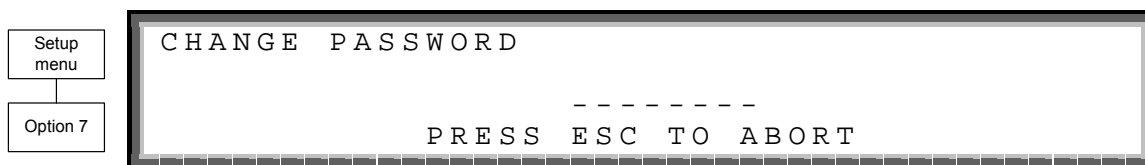


Figure 87: Setup - changing the password

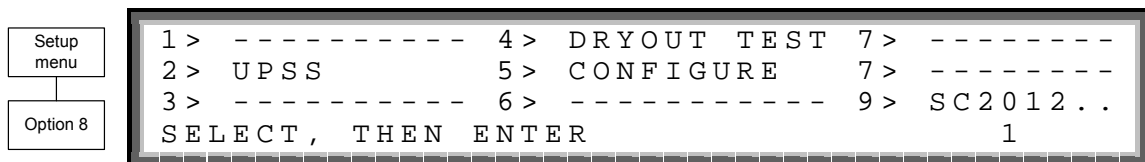


Figure 88: Setup - service menu

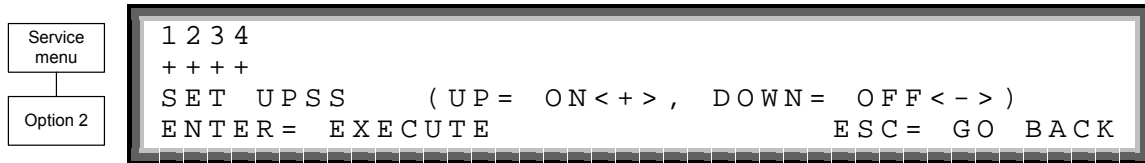


Figure 89: Service – selecting the UPS



Figure 90: Service – setting alarm contacts

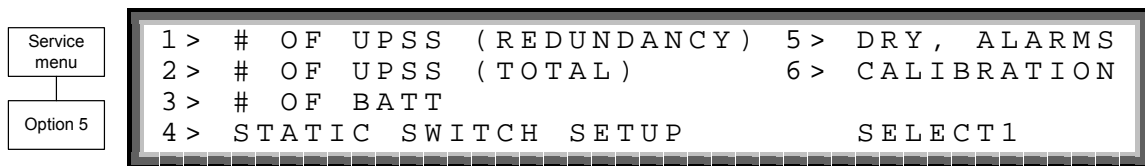


Figure 91: Service – configuration menu

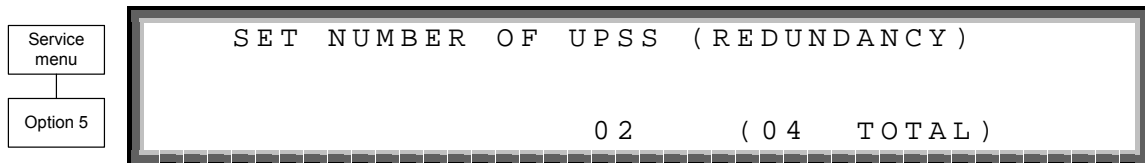


Figure 92: Service – setting redundancy

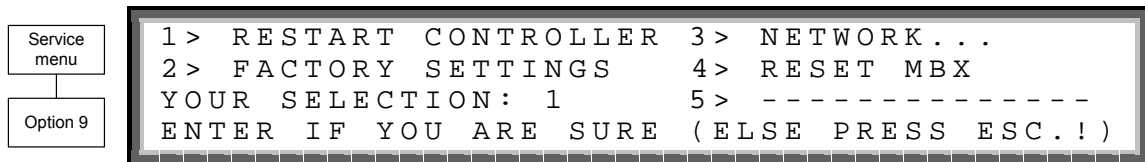


Figure 93: Service – SC2012 controller reset menu

Option 1 resets the controller.

Option resets to the configuration to factory default settings.

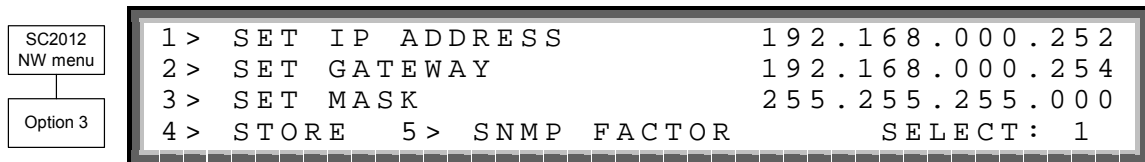


Figure 94: Service – SC2012 network setup menu

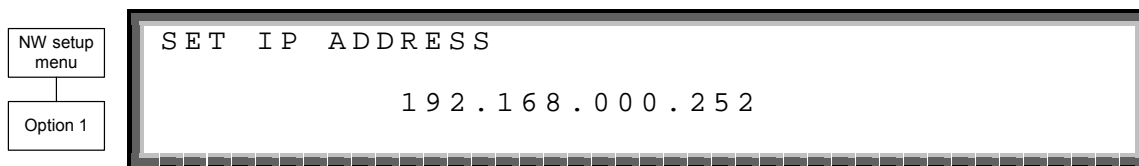


Figure 95: Service – setting IP address

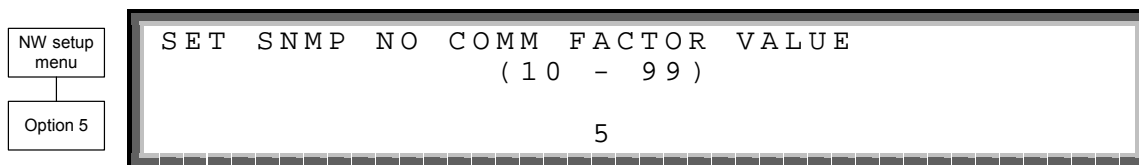


Figure 96: Service – configuring SNMP

9.1.8 Static Switch

From the main menu select option 8 (Static Switch) to display the window shown in Figure 97.

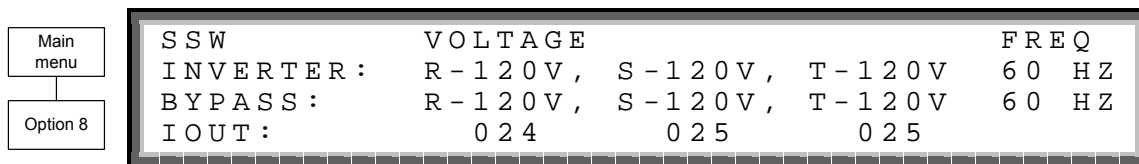


Figure 97: Static Switch voltage and frequency

View the current messaging status by using the ◀ and ▶ keys.

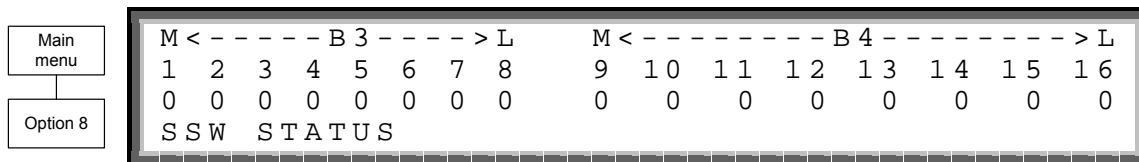


Figure 98: Static Switch status

9.1.9 Alarm dry contacts

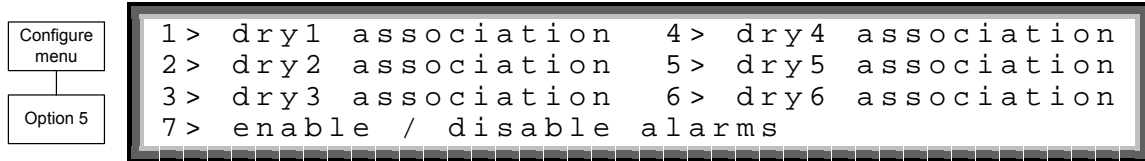


Figure 99: Dry Contacts/alarms association

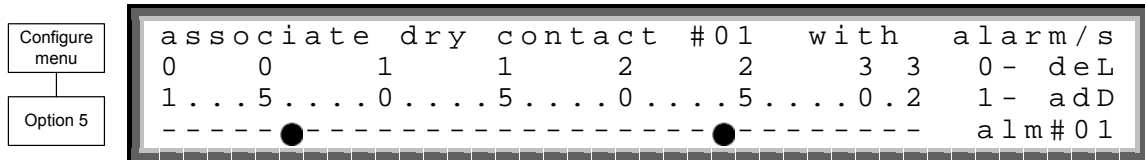


Figure 100: Dry Contacts/alarms association – example

9.1.10 Calibration



Figure 101: Calibration

9.1.11 Communications

1. From the main menu (Figure 16: Main menu on page 53), select item 9, COMM.
2. Select the appropriate mode using the ► and ◀ keys.

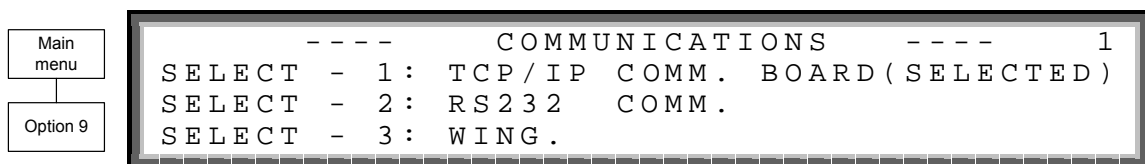


Figure 102: Communications

9.2 System controller setup verification

The process described in this section lets you check the controller settings. This verification procedure is available for software versions beginning from 050106.

9.2.1 ACCESS

Press ESCAPE key and hold it for 3S. Using ARROW UP/DOWN key, select GENERAL (8) and press ENTER. **Screen 1** is presented.

9.2.1.1 SCREEN 1

```
ACV:220...ALM:242/185    TEMP. ALARM:45C
MODULES:07/02    C.LIM= off , T.C= 2.0mV
DCV:432...ALM:475/360/340
BATT...TEST:04/05/360/352...CAP: 0010 AH
```

- a) ACV: nominal value of the input/output AC voltage (220 for 2x32 batteries ; 110 for 2x16 batteries).
- b) ALM: input AC voltage alarm HIGH/LOW
- c) TEMP.ALARM: high temperature limit for external thermosensor
- d) MODULES: QUANTITY/REDUNDANCY – 07/02 in the screen means that 7 modules are presented in the system, 2 modules are reserve (full load is $10\text{KVA} \times (7-2) = 50\text{KVA}/40\text{KW}$)
- e) C.LIM.=off (VALUE)- battery current limit function is de-activated (off) or max. battery current value in Amps. In C.LIM is activated, the system must be equipped with optional battery current sensor.
- f) T.C.=2.0mV – negative temperature coefficient of the battery DC voltage in mV per °C per battery cell. Nominal temperature is 25°C. For DC nominal voltage 432V , temperature 35°C, 32 batteries of 6 cells, T.C.=2mV, the voltage is $432 - 2 \times 6 \times 32 \times (35-25) \approx 428\text{V}$.
NOTE. For most applications T.C. must be 0 (off).
- g) DCV: DC nominal voltage for both positive and negative battery sets. For 32 batteries in the set DCV=432V, for 16 batteries 216V.
- h) DCV ...ALM: DC voltage alarms HIGH/LOW/SHUTDOWN. SHUTDOWN alarm is DC voltage value when the unit is stopped due to battery discharge.
- i) BATT....TEST: PERIOD IN WEEKS/MAX.DURATION IN HOURS/ALARM VOLTAGE/CHARGER DERATED VOLTAGE. In the screen: the test is performed automatically once per 4 weeks, max. test duration is 5 Hours, if battery voltage drops below 360V alarm Battery Low is given, the chargers of the modules continue to supply voltage 352V to prevent shutdown if battery is faulty.
- j) CAP: CAPACITY in Amp-Hours. Used to calculate estimated back-up time of the system and battery test duration.

9.2.1.2 SCREEN 2

To access **SCREEN 2** press the key ARROW RIGHT when SCREEN 1 is selected.

	#OF PHASE: AUTO
REV : SC25191205	LVD BY AC FAIL: DIS
MAINT: 2006.05.28	TEMP. SENSOR: DIS
SITE : 000001	CURR. SENSOR: DIS

- a) #OF PHASE: FORCE 3 for 3 phase output, FORCE 1 for single phase output or AUTO when the mode is defined by DIP SWITCH of the modules.
- b) REV: revision of system controller's (SC) software
- c) LVD BY AC FAIL: DIS (disabled) or EN (enabled). This function, if enabled, performs system shutdown after 3 Hours of AC failure to prevent deep battery discharge by low current. In most application the function must be DIS.
- d) MAINT: YEAR.MONTH.DAY: date of last maintenance
- e) TEMP. SENSOR: DIS or EN . External thermosensor is disabled/ enabled. In most applications must be DIS.
- f) SITE: the site identification number. Is used in network applications.
- g) CURR.SENSOR: DIS or EN. Optional battery current sensor is disabled/ enabled. In most applications must be DIS.

9.2.1.3 SCREEN 3

To access **SCREEN 3** press the key ARROW RIGHT when SCREEN 2 is selected. The screen presents status of controller board's jumpers.

BOARD JUMPERS SETTING:	
1. Not HARD Silicon	
2. Silicon Mode	6. No Rmt Pan.
3. CAPACITY HI	9. AC: 220V

- a) Not HARD Silicon. Must be HARD only initially, during first activation of non-configured controller. After production should be Not HARD Silicon.
- b) Silicon Mode. Regular mode allowing setups change. The setups are saved in EEPROM chip.
- c) CAPACITY HI (LO). High/low battery capacity mode when battery capacity is more/less than 100AH to achieve optimal resolution of battery current displayed value.
- d) No/Yes Rmt Pan. Outputs of SC are not configured/ configured for optional remote panel connection.
- e) AC: 220V. Nominal AC input voltage: 220V for 2x32 batteries, 110V for 2x16 batteries in series.

10. SNMP AGENT (OPTIONAL)


The SNMP agent is an optional, internal card which lets you monitor and control the **POWER+** system from a PC. The SNMP agent supports standard UPS RFC1628 MIB.

The SNMP agent enables monitoring, management, control, and orderly shutdown of the UPS via the Internet protocol SNMP. The SNMP agent is a dedicated adapter that provides connectivity between the UPS and a management platform, such as Gamatronic's **POWER+ PSM-AC**. During normal operation, the SNMP agent transmits information about current operating conditions, such as input and output voltage, current, and frequency. In the event of a power outage, the SNMP agent can automatically shut down protected computer systems before battery run-down. The SNMP agent can provide real-time notification of UPS events in several modalities; for example, via email or SMS.

Use of an SNMP agent disables the RS232 interface of the UPS.

POWER+ PSM-AC software, available from Gamatronic, enables you to monitor and control the **POWER+** UPS system.

POWER+ PSM-AC is part of GeMSi (Gamatronic Element Management Software, Innovated, Gamatronic's sophisticated suite of software for managing multiple power supply and UPS systems. The systems can be controlled both locally and from a remote location.

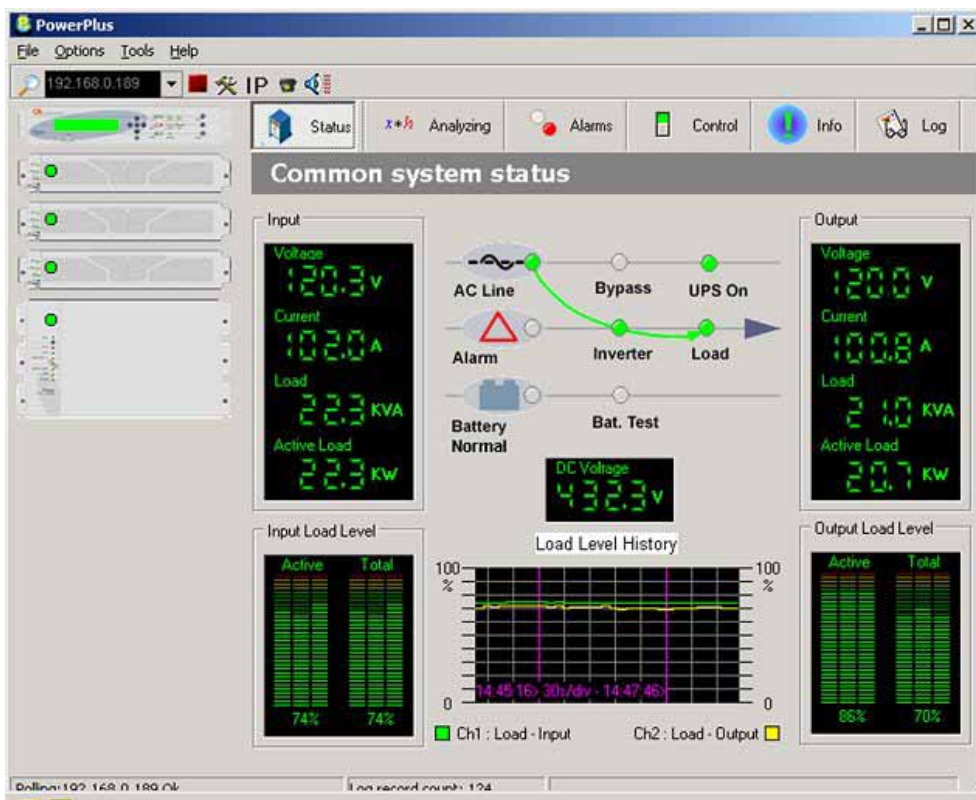

POWER+ PSM-AC lets you monitor and control your **POWER+** UPS

11. WIRELESS CONTROL (OPTIONAL)

The **POWER+** system includes an option for wireless control and management, using the Gamatronic WING (Catalog reference 199WING).

The **WING** (Wireless New Generation) is a wireless communications board that enables you to manage and control your UPS and other power systems from a remote location via cellular network (GSM/GPRS/CDMA).

It allows real-time detection of power system faults and immediately notifies selected recipients (control center, technician, etc.) detailing the faults.

WING can operate through a variety of parallel connections, protocols and applications at the same time. It is compatible with all Gamatronic products, as well as with the products of many other manufacturers.

The **WING** comprises:

- WING board
- A SIM board
- Application management software dedicated to wireless communications.

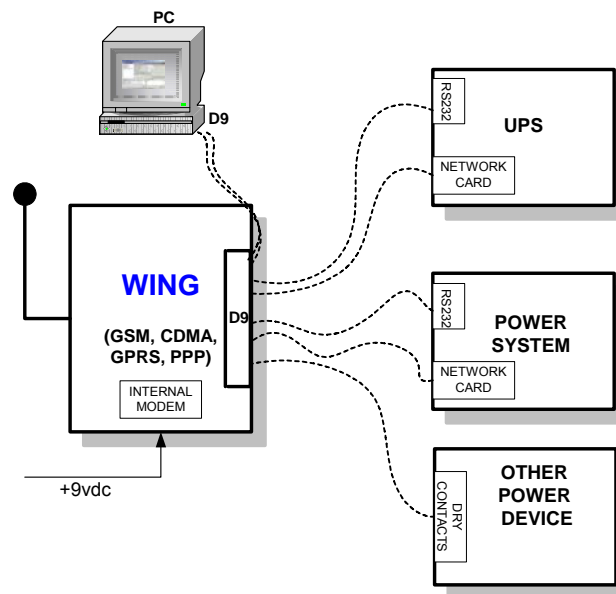


Figure 103: WING general block diagram

The **WING** board contains an internal GSM/GPRS Modem plus antenna and a microprocessor that enables it to manage the power systems, monitor and control their values and status, and get real-time alarm notifications – all via any standard mobile cellular phone.

The user may communicate with the **WING** by either using a mobile cellular phone or the dedicated GeMSi application provided by Gamatronic.

Gamatronic Electronic Industries Ltd.

A service technician can perform the following activities using his mobile phone:

- Specify the code or command appropriate to the specific needs
- Send a message via SMS to the system ID

The system replies, informing the sender whether the command was performed. The board can filter the received messages by authorizations (complete management/monitoring only/none).


The **WING** scans the remote power system every three seconds and alerts all the predefined recipients. (up to 10 recipients) whenever a malfunction occurs.

The **WING** enables you to protect your system by 2 levels of passwords (administrator, technician) and broadcast a message in the case of an alarm.

11.1 WING configurations

The **WING** may be used in three types of configurations:

- PC & WING at the local end, and WING and power system at the remote location.
- PC & cellular modem at the local end, and WING and power system at the remote location.
- Cellular at the local end, and WING and power system at the remote location.

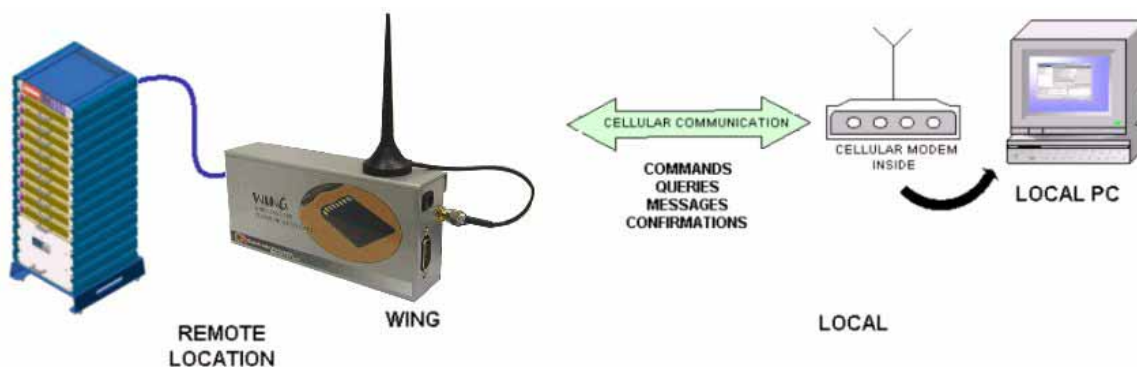

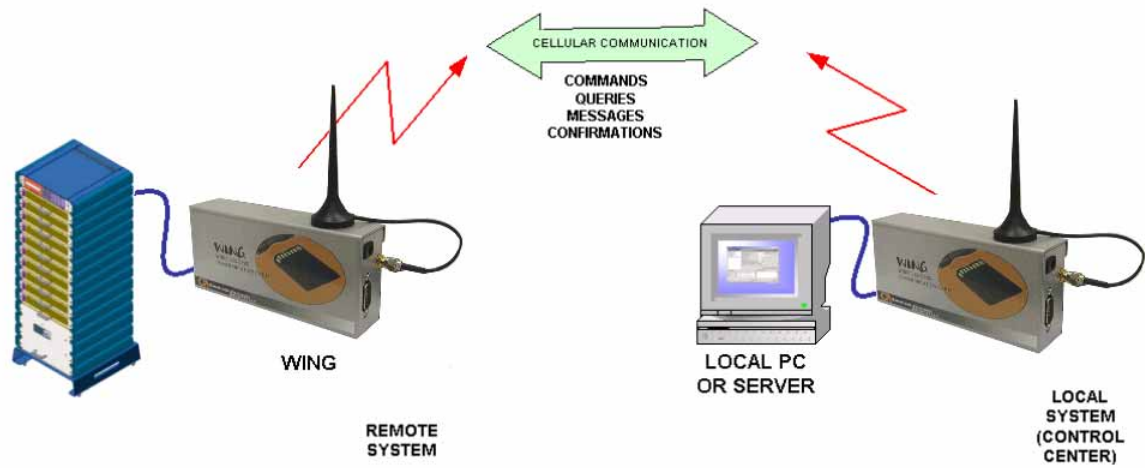


Figure 104: WING optional configurations

12. THE POWER+ BUILT-IN WEB INTERFACE

If your Power+ has the remote management software card installed (PC575), you can use the Power+ Web interface and control your Power+ unit from a distance over an Ethernet network.

Note: The built-in Web interface is compatible with **Microsoft's Windows** operating systems only. For Web access using other computer operating systems, inquire about the *PSM-AC for Power+* software product (see section 10 on page 75).

12.1 Preliminaries to use of the Web interface

To enable the Power+ Web interface:

- 1 Consult with your Network Administrator to obtain an IP address for your Power+, and the appropriate mask and gateway address.
- 2 Configure the Power+ with the IP address. This is done from the Power+ main menu as follows:
 - 2.1 **Setup** > (enter your password, then press Ent; default password is 8 left arrows) > **Service** > **SC2012** > **Network**.
 - 2.2 From the Network menu, choose **IP Address** and enter the assigned IP address.
 - 2.3 From the Network menu, choose **Gateway** and enter the assigned Gateway address.
 - 2.4 From the Network menu, choose **Mask** and set the assigned subnet mask.
 - 2.5 From the Network menu choose **Store** to save the information just entered.
- 3 Connect the Power+ to the local Ethernet network using the Ethernet (RJ45) port on the rear panel of the Power+ controller. This is the port labeled "TCP/IP Port" on the left side of the controller rear panel in Figure 105 below.



Figure 105: Power+ controller rear panel

- 4 On a computer terminal that has connectivity to the Power+ IP address, open a Web browser and enter the Power+ IP address in the URL bar. For example: "///192.102.2.130" (without quotation marks), and press Enter. You should see the Web interface main screen (see Figure 106 below).

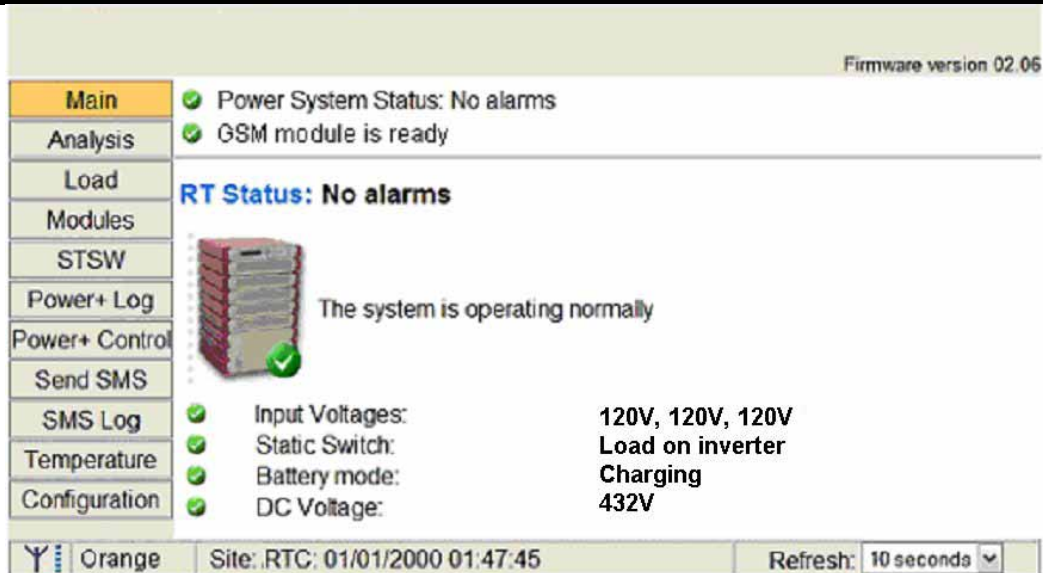


Figure 106: Main Screen of the Power+ Web interface





12.2 Main Screen

The Main Screen (see Figure 106 above) is the first screen you see when connecting to the GMaCi software.

The column on the left side of the screen is the Main Menu. The Main The first option in the Main Menu brings you to the Main Screen when you are not already there.

The items in the rest of the Main Screen to the right of the menu column are described in Table 4.

Table 4: Main Screen features

ITEM	DESCRIPTION		
Power System status	Alarm status ( No alarms present /  Alarms present)		
GSM module status	Cellular (GSM) communication is Available / Not available. A signal-strength indicator is displayed along with the service provider name. Cellular communication requires the WING module.		
RT Status:	Alarm status (No alarms / Alarms)		
ITEM	DESCRIPTION		
UPS image	-	No active alarms at this time.	One or more alarms are active.
Input voltages	The voltage of each input phase is listed.	All input voltages are within range.	One or more of the input phases has a voltage outside of the permitted range.
Static Switch	Load on: Inverter (checkmark) / Bypass ("x")	Load on inverter.	Load on bypass.
Battery mode:	Charging (checkmark) / Discharging ("x")	Battery charged or charging.	Battery discharging or discharged.
Dc voltage	Current battery / charging voltage (Vdc).	Battery voltage in range.	Battery voltage out of range.

12.3 The Main Menu and its options

The Main Menu of Power+'s built-in remote management software consists of a column of option buttons on the left side of the Main Screen (see Figure 106 on page 80).

Table 5 below lists the options in the Main Menu column on the Main Screen, and describes each option briefly. Each option is described in greater detail in the subsequent sections.

Table 5: Main Menu options

MENU OPTION	DESCRIPTION
Main	Displays a condensed system status: Alarm status and basic readings.
Analysis	Shows real-time readings for each input and output phase: voltage, current, kVA, kW, power factor.
Load	Shows current load level (0 ~ 110 %) for each input and output phase.
Modules	Displays status of an individual UPS module, shows input and output ac voltages and current, dc voltage, active alarms if any.
STSW	Displays status of Static Switch, including inverter output voltages and frequency, bypass voltages and frequency, active alarms if any.
Power+ Log	Displays system log, data can be printed or exported to an Excel file.
Power+ Control	From this screen, the following system commands can be executed: Move load to bypass, move load to inverter, start battery test, abort battery test, LEDs test, shutdown, startup, restart, simulate load on battery condition, simulate battery status is low. Use of this option is disabled by factory default. To enable (or disable), from the Power+ console main menu choose the following: (7) Setup > (8) Service > (5) Config > (8) Rem Command
Send SMS	Send SMS messages from this screen (WING module must be present).
SMS Log	View SMS message log (WING module must be present).
Temperature	Displays reading from optional temperature sensor (connected to the two temperature sensor terminals on the rear of the controller module).
Configuration	Configure the settings of the remote management software.

The Main Menu options are described in more detail below.

12.3.1 “Analysis” main menu option


The main menu’s “Analysis” option lists current values for voltage, current, apparent power (kVA), active power (kW), and power factor, for each input and output phase.

Firmware version 02.06						
Main	<ul style="list-style-type: none"> Power System Status: No alarms GSM module is ready 					
Analysis						
Load	Analysis					
Modules						
STSW	Input					
Power+ Log		Voltage	Current	Apparent Power	Active Power	Pf
Power+ Control	Line 1	120V	8A	1.1KVA	1.1KW	1.00
Send SMS	Line 2	120V	8A	1.1KVA	1.1KW	1.00
SMS Log	Line 3	120V	8A	1.1KVA	1.1KW	1.00
Temperature	Summary			3.3KVA	3.3KW	
Configuration	Output					
		Voltage	Current	Apparent Power	Active Power	Pf
	Line 1	120V	8A	0.9KVA	0.0KW	0.00
	Line 2	120V	10A	1.1KVA	0.2KW	0.21
	Line 3	120V	10A	1.1KVA	0.2KW	0.21
	Summary			3.1KVA	0.4KW	
Orange 2000 01:48:19 Site: / / / / SW Rev. 26.09.06 Refresh: 10 seconds						

Figure 107: Analysis of system input and output voltages and power

12.3.2 “Load” main menu option

The “Load” main menu option provides a graphic display of the load on each output phase. The display shows the apparent and active load on each output phase as a percent (between 0 and 110 %) of the Power+’s rated capacity for the phase.

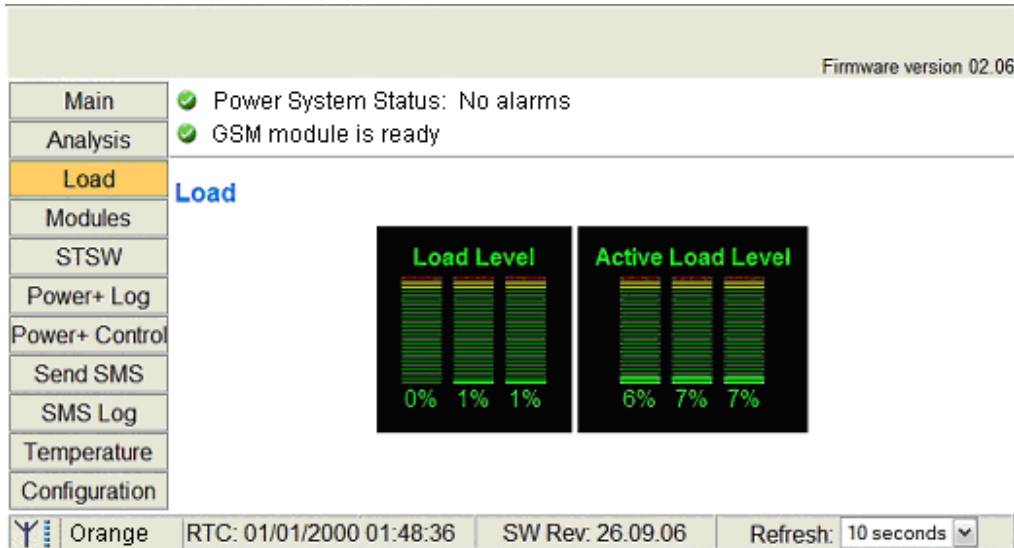

12.3.3 “Modules” main menu option

The “Modules” main menu option enables you to see readings for an individual UPS module. To see the readings for a particular module, click on the correspondingly numbered image of the UPS module.

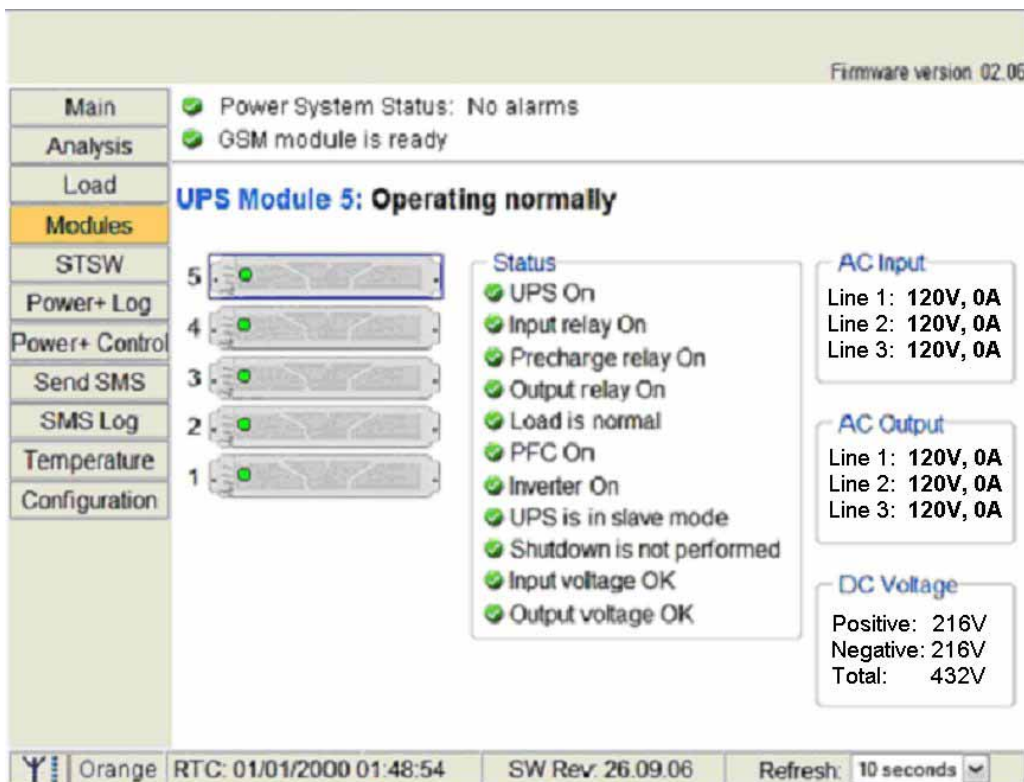


Figure 108: Modules measurements and status display

12.3.4 “STSW” (Static Switch) main menu option

The “STSW” (Static Switch) option on the main menu displays the real-time voltage and frequency measurements for the inverter output voltage and the bypass voltage. This screen also displays a wealth of additional information about the status of the Static Switch, as can be seen in Figure 109 below.

The screenshot displays the STSW (Static Switch) main menu option. The interface includes a navigation menu on the left, a main content area, and a status bar at the bottom.

Navigation Menu:

- Main
- Analysis
- Load
- Modules
- STSW**
- Power+ Log
- Power+ Control
- Send SMS
- SMS Log
- Temperature
- Configuration

System Status:

- Power System Status: No alarms
- GSM module is ready

Static Switch: Operating normally

Status:

- Load on inverter
- Inverter is synchronized with bypass
- Load is connected
- Load is normal
- Inverter OK
- Inverter frequency is normal
- Bypass frequency is normal
- Load transferring is possible
- Bypass OK

Inverter:

- Line 1 Voltage: 120V
- Line 2 Voltage: 120V
- Line 3 Voltage: 120V
- Frequency: 60.22Hz

Bypass:

- Line 1 Voltage: 120V
- Line 2 Voltage: 120V
- Line 3 Voltage: 120V
- Frequency: 60.22Hz

Status Bar:

- Orange
- RTC: 01/01/2000 01:52:37
- SW Rev. 26.09.06
- Refresh: 10 seconds

Figure 109: Static Switch data and status display

12.3.5 “Power+ Log” main menu option

Firmware version 02.06

Main	✔ Power System Status: No alarms																																								
Analysis	✔ GSM Module is ready																																								
Load	Event log <table border="1"> <thead> <tr> <th>Id</th> <th>In/Out</th> <th>Entry</th> <th>Alarm</th> </tr> </thead> <tbody> <tr><td>1</td><td>Out</td><td>01/01/2000 01:50:46</td><td>Input Browdout</td></tr> <tr><td>2</td><td>Out</td><td>01/01/2000 01:50:44</td><td>UPS modules Warning!</td></tr> <tr><td>3</td><td>Out</td><td>01/01/2000 01:50:40</td><td>AC Input Faliure</td></tr> <tr><td>4</td><td>Out</td><td>01/01/2000 01:50:34</td><td>Static Switch Warning</td></tr> <tr><td>5</td><td>In</td><td>01/01/2000 01:50:34</td><td>Input Browdout</td></tr> <tr><td>6</td><td>Out</td><td>01/01/2000 01:50:10</td><td>Low Battery voltage</td></tr> <tr><td>7</td><td>In</td><td>01/01/2000 01:50:06</td><td>UPS modules Warning!</td></tr> <tr><td>8</td><td>In</td><td>01/01/2000 01:50:04</td><td>Low Battery voltage</td></tr> <tr><td>9</td><td>In</td><td>01/01/2000 01:49:58</td><td>AC Input Faliure</td></tr> </tbody> </table>	Id	In/Out	Entry	Alarm	1	Out	01/01/2000 01:50:46	Input Browdout	2	Out	01/01/2000 01:50:44	UPS modules Warning!	3	Out	01/01/2000 01:50:40	AC Input Faliure	4	Out	01/01/2000 01:50:34	Static Switch Warning	5	In	01/01/2000 01:50:34	Input Browdout	6	Out	01/01/2000 01:50:10	Low Battery voltage	7	In	01/01/2000 01:50:06	UPS modules Warning!	8	In	01/01/2000 01:50:04	Low Battery voltage	9	In	01/01/2000 01:49:58	AC Input Faliure
Id		In/Out	Entry	Alarm																																					
1		Out	01/01/2000 01:50:46	Input Browdout																																					
2		Out	01/01/2000 01:50:44	UPS modules Warning!																																					
3		Out	01/01/2000 01:50:40	AC Input Faliure																																					
4		Out	01/01/2000 01:50:34	Static Switch Warning																																					
5		In	01/01/2000 01:50:34	Input Browdout																																					
6		Out	01/01/2000 01:50:10	Low Battery voltage																																					
7		In	01/01/2000 01:50:06	UPS modules Warning!																																					
8		In	01/01/2000 01:50:04	Low Battery voltage																																					
9	In	01/01/2000 01:49:58	AC Input Faliure																																						
Modules																																									
STSW																																									
Power+ Log																																									
Power+ Control																																									
Send SMS																																									
SMS Log																																									
Temperature																																									
Configuration																																									

Total items in log: 154
[Printable version](#)
[Export to Excel](#)

RTC: 01/01/2000 01:53:00 Site: // // // // SW Rev: 26.09.06

Figure 110: Listing the log entries

Table 6: Data items on the event log screen

MENU OPTION	DESCRIPTION
ID	This is simply a line number.
In / Out	“In” indicates the start of an alarm condition. “Out” indicates the end of an alarm condition.
Entry	Timestamp in the format dd/mm/yyyy hh/mm/ss
Alarm	Alarm message. See Table 7.

Table 7: Alarm message text in Web interface log display

(Use the alarm number in this table to reference "Table 3: Log Messages" on page 59 for a fuller explanation of the alarm condition.)

LOG MESSAGES, IN ALPHABETICAL ORDER	ALARM NO.
"AC Input Failure"	22
"AC Input high"	21
"An alarm/s is vibrating"	6
"Battery Circuit Breaker is open"	25
"Communication lost"	0
"Communication lost"	32
"Emergency Power Off Activated"	14
"End of Backup"	11
"Equalizing mode"	15
"HIGH Battery voltage"	9
"Input Brownout"	20
"Last battery test"	16
"Last self test fail"	24
"Load current high"	29
"Load on BYPASS"	5
"Low Battery voltage"	12
"N.A."	3
"N.A."	4
"N.A."	10
"No AC output to load"	8
"One UPS module Warning!"	2
"Over temperature"	7
"Startup time-stamp"	31
"Static Switch Warning"	13
"STSW Not responding"	23
"Suspect a fault output stage"	27
"Suspect fault current sharing"	26
"UPS modules Warning!"	1
"UPS or more not responding"	30
"UPS Shut Down"	28
"User 1 input open"	17
"User 2 input open"	18
"User 3 input open"	19

12.3.6 “Power+ Control” main menu option

The “Power+ Control” main menu option enables the user to initiate any of a number of UPS processes. The commands available are described in Table 8 below.

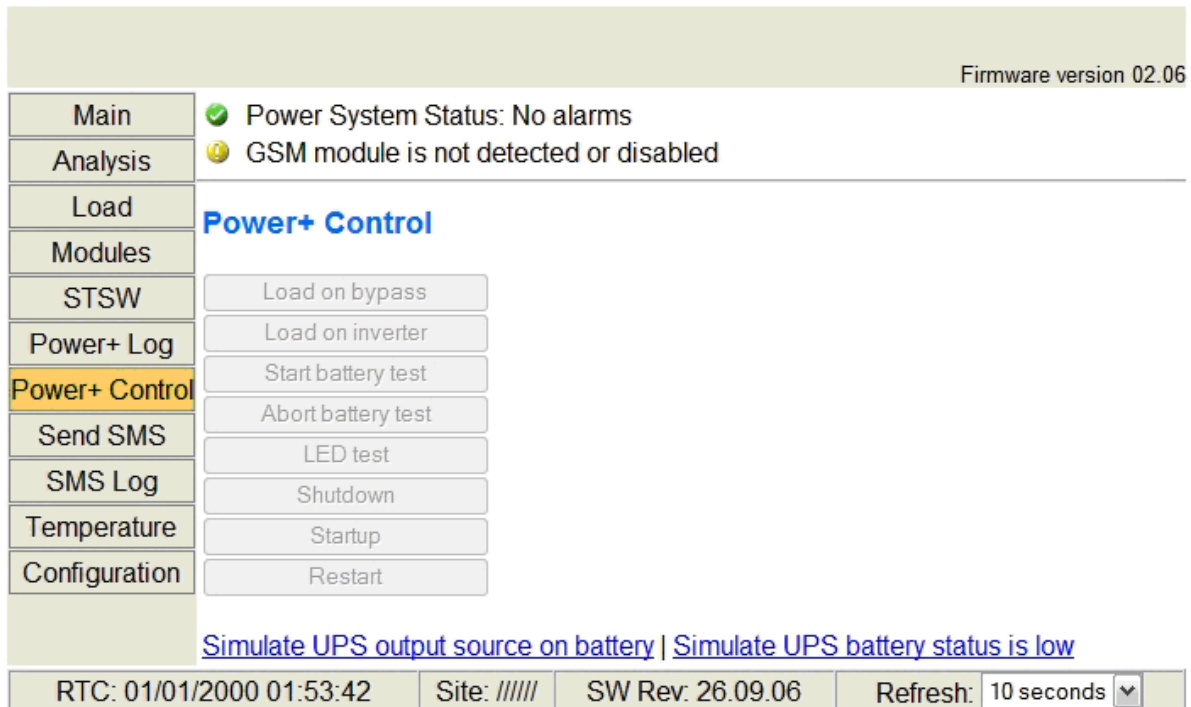


Figure 111: The "Control" main menu option screen

Table 8: Commands available on the “Power+ Control” screen

MENU OPTION	DESCRIPTION
Load on bypass	Transfers the load to the bypass voltage.
Load on inverter	Transfers the load to the inverter.
Start battery test	Initiates a battery test. Note: it is recommended that a battery test not be initiated when the when the UPS is operating near 100 % capacity and at the same time the battery is known to be not fully charged or not connected or otherwise faulty.
Abort battery test	Stop a battery test immediately.
LED test	The UPS beeps briefly and all of the LEDs on the control panel light up, to reveal any faulty LEDs.
Shutdown	Shuts down the Power+. Power will continue to be available to the loads from the bypass voltage.
Startup	Starts up the Power+ when it is in an “OFF” condition.
Restart	When the Power+ is “ON”, this command initiates a shutdown of the Power+ followed by a startup.

At the bottom of the “Power+ Control” screen are two links:

Simulate UPS output source on battery: clicking on this link simulates the conditions in effect during an ac power failure –a signal is sent via SNMP to any connected computers informing them of an ac power failure. (In actuality, the load continues to be supplied from the inverter). If the computers are configured for automatic shutdown on ac power failure, they begin their shutdown countdown. This option is useful for testing the auto-shutdown configuration on a computer. The simulation can be ended by the user at will. If the countdown continues to completion, the designated shutdown targets (see section 12.3.10.4 on page 95) **will be shut down!**

Simulate UPS battery status is low: clicking on this link simulates the conditions in effect after an extended ac power failure –a signal is sent via SNMP to any connected computers informing them of a “low battery condition” (actually non-existent). If the computers are configured for automatic shutdown on low battery, they begin their shutdown countdown. This option useful for testing the auto-shutdown configuration on a computer. The simulation can be ended by the user at will.

Warning: The low-battery countdown is configured in seconds, so computer shutdown will occur relatively quickly.

12.3.7 “Send SMS” main menu option

On Power+ units equipped with the optional GSM cellular communications module, the “Send SMS” main menu option enables the user to send an SMS message to any cellular telephone.

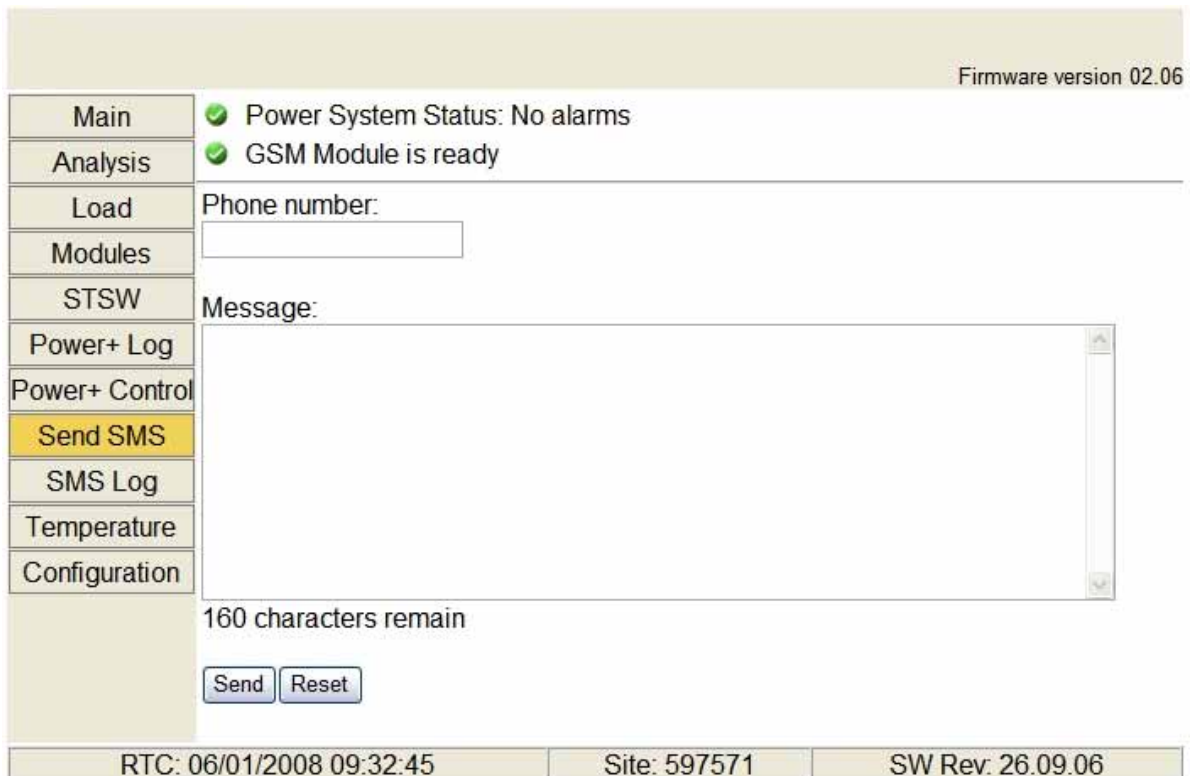


Figure 112: “Send SMS” screen

12.3.8 “SMS Log” main menu option

On Power+ units equipped with the optional GSM cellular communications module, the “SMS Log” main menu option enables the user to display latest 256 SMS

The screenshot displays a web-based interface for monitoring a power system. At the top right, it indicates 'Firmware version 02.06'. A left-hand navigation menu includes options like 'Main', 'Analysis', 'Load', 'Modules', 'STSW', 'Power+ Log', 'Power+ Control', 'Send SMS', 'SMS Log' (highlighted), 'Temperature', and 'Configuration'. The main content area shows system status: 'Power System Status: No alarms' and 'GSM Module is ready'. Below this, there are two sections for SMS logs. The 'Received SMS' section contains one entry from +565554695658 with the message '*066'. The 'Sent SMS' section contains one entry to +565554695658 with a detailed message: 'GMaCi Power+ Site: 5975710 DC: 0V AC: I:0,0,0 O:0,0,0 CUR:0,0,0 Temp:0C'. At the bottom, a status bar shows 'RTC: 06/01/2008 09:34:06', 'Site: 597571', 'SW Rev: 26.09.06', and a 'Refresh' button set to '1 minute'.

Entry	Phone	Message
06/01/2008 09:26:20	+565554695658	*066

Entry	Phone	Message
06/01/2008 09:28:06	+565554695658	GMaCi Power+ Site: 5975710 DC: 0V AC: I:0,0,0 O:0,0,0 CUR:0,0,0 Temp:0C

RTC: 06/01/2008 09:34:06 Site: 597571 SW Rev: 26.09.06 Refresh: 1 minute


12.3.9 “Temperature” main menu option

A temperature sensor can be attached to the rear panel of the Power+ controller. The temperature sensor itself can be placed wherever the user wants. Because of the importance of avoiding elevated battery temperature, many users place the sensor near the batteries. In addition, if the temperature sensor measures the battery temperature, the battery temperature compensation feature can be enabled.

When a temperature sensor is connected to the UPS, the “Temperature” main menu option provides a graphic, real-time display of the current sensor reading in degrees C.

Firmware version 02.06

Main	✔ Power System Status: No alarms
Analysis	✔ GSM Module is ready
Load	
Modules	
STSW	
Power+ Log	
Power+ Control	
Send SMS	
SMS Log	
Temperature	
Configuration	

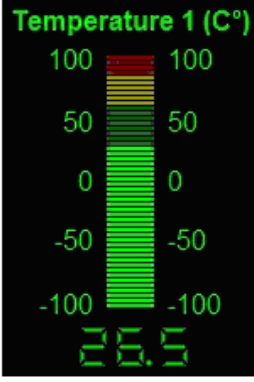

RTC: 01/01/2000 02:00:23	Site: /////	SW Rev: 26.09.06	Refresh: 10 seconds ▼
--------------------------	-------------	------------------	-----------------------

12.3.10 “Configuration” main menu option

Choosing the “Configuration” option on the Web interface’s main menu displays the Configuration (sub)menu is displayed. Though this menu various important UPS settings can be modified. The options in the Configuration menu are described below.

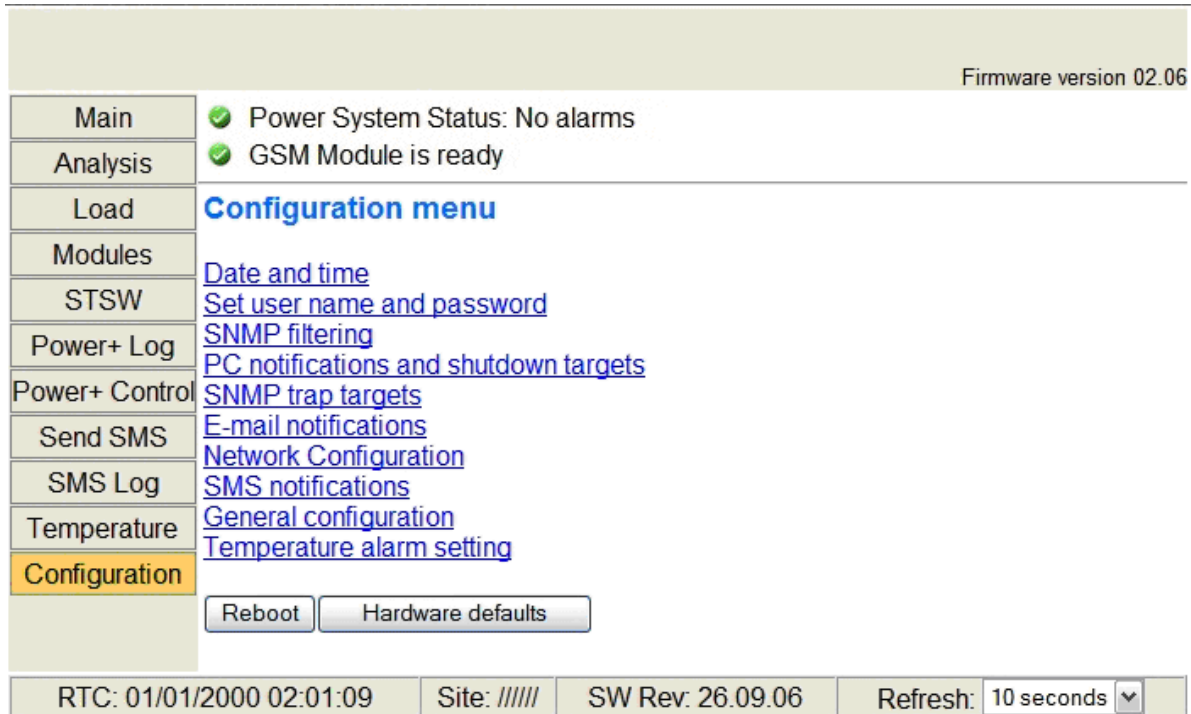


Figure 113: Configuration menu

Selecting any of the options in the Configuration menu causes the Web interface to prompt for a user-ID and password. The factory default user-ID is **admin**, and the factory-default password is also **admin**. These default values for the user-ID and password can be changed, as is explained below in section 11.3.10.2 on page 93.

After entering the correct user-ID and password and pressing Enter, the requested screen is displayed.

The user-ID and password are only requested once per session, on the first entry into any of the Configuration menu options.

Warning: When an IP address or addresses are specified for a given community, only the specified addresses have access to the community. All other users will be shut out from the defined community.

12.3.10.1 “Date and time” – setting the calendar and clock

The “Date and time” option on the Configuration submenu is used to set the date and time of the Power+ internal calendar and clock. The date and time settings are important, for they are used to timestamp entries in the Power+ log.

The date and time are kept current by the Power+, including when the system is in the “off” state.

Click the Back button to return to the Configuration menu.

Firmware version 02.06

Main	Date and time
Analysis	
Load	Date: <input style="width: 30px;" type="text" value="01"/> <input style="width: 30px;" type="text" value="01"/> <input style="width: 30px;" type="text" value="00"/> (dd:mm:yy)
Modules	Time: <input style="width: 30px;" type="text" value="02"/> <input style="width: 30px;" type="text" value="01"/> <input style="width: 30px;" type="text" value="28"/> (hh:mm:ss)
STSW	Time Zone: <input style="width: 150px;" type="text"/> ▼
Power+ Log	<input type="button" value="Apply"/> <input type="button" value="Reset"/> <input type="button" value="Back"/>
Power+ Control	
Send SMS	
SMS Log	
Temperature	
Configuration	

Note: When GMaCi Power+ is connected to a Power+, the internal clock of GMaCi Power+ is constantly updated from the Power+ clock. As a result, if you want to change the date or time on the GMaCi Power+, and you have a connection with a Power+, instead of using this screen you must go to the Power+ control panel and make the change there. The GMaCi Power+ will automatically reflect any changes made to the Power+ clock.

RTC: 01/01/2000 02:01:32	Site: /////	SW Rev. 26.09.06
--------------------------	-------------	------------------

Figure 114: Setting the Power+ internal date and time

12.3.10.2 Set user name and password

The “Set user name and password” on the Configuration submenu enables you to change the user-ID and password used for entry into the options on the Web interface’s Configuration submenu..

The factory default user-ID and password are **admin** and **admin**. The new user-ID and password must each have a minimum of four characters and up to a maximum of nine characters. If entered, the new user-ID and password are effective immediately.

Click the Back button to return to the Configuration submenu.

Firmware version 02.06

Main **Set user name and password**

Analysis

Load New user name:

Modules New password:

STSW Confirm new password:

Power+ Log

Power+ Control

Send SMS

SMS Log

Temperature

Configuration

⚠ User name and password must be at least 4 and up to 9 characters.

RTC: 01/01/2000 02:01:58 Site: // // // // // SW Rev: 26.09.06

Figure 115: Changing username and password of the Web interface

12.3.10.3 SNMP filtering

The SNMP filtering screen is where you define the SNMP communities that will have access to the Power+, and whether that access will be “read only” (requests for data – a “Get”) or “read-write” (includes the ability to modify G4 settings – a “Set”).

You also have the capability of limiting the IP addresses from which the G4 will accept SNMP packets. If the IP address has 4 segments of zero, this means that all users in the community will have the designated access.

Firmware version 02.06

Main	SNMP filtering		
Analysis			
Load	IP address	Get Community	Set Community
Modules	0.0.0.0	public	private
STSW	0.0.0.0		
Power+ Log	0.0.0.0		
Power+ Control	0.0.0.0		
Send SMS	0.0.0.0		
SMS Log	0.0.0.0		
Temperature	0.0.0.0		
Configuration	0.0.0.0		
	0.0.0.0		
	0.0.0.0		

RTC: 01/01/2000 02:02:26	Site: /////	SW Rev: 26.09.06
--------------------------	-------------	------------------

Figure 116: Define SNMP permissions

12.3.10.4 PC notification and shutdown targets

The “PC notification and shutdown targets” option of the Configuration menu is where you record the IP address of the computers which you want to have perform an orderly shutdown in the event of an ac mains power outage.

To use this option, the computer in question must have a Shutdown Agent installed on it. The Shutdown Agent is available as a self-installing “setup.exe” file intended to be run on the target computer. The install file can be downloaded from Gamatronic’s website by clicking on the “Shutdown Agent” link in the bottom right of the “PC notifications and shutdown targets” screen.

Note: The built-in Web interface supports a maximum of 15 shutdown targets. Customers requiring a larger number of shutdown targets should inquire about the *PSM-AC for Power+* software product (see section 10 on page 75).

Firmware version 02.06

IP address	UDP Port	AC Fail delay (min.)	Low Battery delay (sec.)
0.0.0.0	262	5	30
0.0.0.0	262	5	30
0.0.0.0	262	5	30
0.0.0.0	262	5	30
0.0.0.0	262	5	30
0.0.0.0	262	5	30
0.0.0.0	262	5	30
0.0.0.0	262	5	30
0.0.0.0	262	5	30
0.0.0.0	262	5	30

Apply Reset Clear all Back

⚠ You need to run [Shutdown Agent](#) on destination machine.

RTC: 01/01/2000 02:06:12 Site: / / / / / SW Rev: 26.09.06

Figure 117: Define computers for auto-shutdown

FIELD	DESCRIPTION
IP address	IP address of the computer to be automatically shut down in the event of a power failure.
UDP port	Preferred UPD port, if any.
Ac fail delay (minutes)	Delay in minutes between ac failure and initiation of the automatic shutdown.
Low battery delay (seconds)	Delay in seconds between low-battery alarm and initiation of the automatic shutdown.

12.3.10.4.1 *How auto-shutdown works:*

In the event of an ac power mains failure, the Power+ sends a notification to the IP addresses defined in the PC notification and shutdown screen. This generates a pop-up message on the computer screen advising of the ac fail condition, and starts a countdown. The countdown for each computer lasts for the number of minutes specified in the “Ac fail delay” field. If this countdown is exhausted before ac power returns, the Shutdown Agent saves and closes any open datasets on the computer and then shuts the computer down.

If during the countdown, the Power+ battery falls below a preset voltage (the low-battery voltage threshold, defined via the Power+ controller), the Power+ notifies the defined computers of the low-battery condition. This starts another countdown, that lasts for the number of seconds defined in the “Low battery delay” field and also cancels any other active shutdown countdown. When this latest countdown is exhausted, the Shutdown Agent saves and closes any open datasets on the computer and then shuts the computer down. This takes place even if the “Ac fail delay” countdown was not yet finished.

12.3.10.5 SNMP trap targets

An SNMP trap is a destination to which the G4 will send alarm notifications using the SNMP protocol. For each destination, an IP address and a port must be specified.

Firmware version 02.06

Main	SNMP trap targets
Analysis	
Load	
Modules	
STSW	
Power+ Log	
Power+ Control	
Send SMS	
SMS Log	
Temperature	
Configuration	

Targets IP address

IP address	Port
	162
	162
	162
	162
	162
	162
	162
	162
	162
	162
	162
	162

Send Trap SNMP v1

Apply Reset Clear all Back

RTC: 01/01/2000 02:06:31 Site: 594487 SW Rev: 26.09.06

Figure 118: Defining SNMP trap targets

12.3.10.6 Defining email notification targets

The Web interface enables you to have notifications of system alarm conditions sent by email. To use this feature, the outgoing email server must be defined in the “E-mail notifications screen”, accessible from the Configuration menu..

Figure 119: Defining email notification targets

Table 9: Fields in the email notifications screen

FIELD	DESCRIPTION
SMTP server address	DNS name or IP address of the outgoing email server. The Power+ must be defined to the email server as NOT requiring a login.
SMTP port	Predefined SMTP port for the notification messages
Send as:	The “from” address in the outgoing email. Note: some email servers have an anti-spam feature that requires the “from” address to be a valid, existing address.
Recipients	In each line under the “Recipients” header a single email address can be entered in standard format. For example: “PeterSmyth@networx.com” (without the quotes). A single email address representing a list of addresses can also be entered.

12.3.10.7 Network configuration

The “Network configuration” option on the Configuration menu is equivalent to navigating to **Setup > Service > SC2012 > Network** on the Power+ physical control panel. Here you define the parameters needed to communicate with the Power+ over an intranet or over the Internet. Consult your local network administrator for the proper IP address, subnet mask, and Gateway address.


Firmware version 02.06				
Main	Network Configuration			
Analysis				
Load	Default IP address			
Modules	IP address: <input type="text" value="192.168.0.253"/>			
STSW	Subnet mask: <input type="text" value="255.255.255.0"/>			
Power+ Log	Gateway de default: <input type="text" value="192.168.0.251"/>			
Power+ Control	<input type="button" value="Apply"/> <input type="button" value="Reset"/> <input type="button" value="Back"/>			
Send SMS				
SMS Log				
Temperature				
Configuration	 <p>Changing any of the above parameters will result in loss of connection to the GMaCi Web Server. After submitting your changes, wait for a few seconds and then reconnect to the card using the newly configured parameters.</p>			
<table border="1" style="width: 100%;"> <tr> <td style="width: 33%;">RTC: 09/12/2007 12:36:58</td> <td style="width: 33%;">Site: 594487</td> <td style="width: 33%;">SW Rev: 26.09.06</td> </tr> </table>		RTC: 09/12/2007 12:36:58	Site: 594487	SW Rev: 26.09.06
RTC: 09/12/2007 12:36:58	Site: 594487	SW Rev: 26.09.06		

Figure 120: Configuring network communication parameters

12.3.10.8 Defining SMS notification targets

The “SMS notifications” option of the configuration menu enables you to define telephone numbers that are to receive notification via SMS in the event of specific alarm conditions on the Power+.

Firmware version 02.06

Main	SMS notifications													
Analysis														
Load	Recipients phones													
Modules	Type					Dry inputs								
STSW	Phone number	Power	Dry outputs	Temperature	IT control	Dial-up	1	2	3	4	5	6	7	8
Power+ Log	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Power+ Control	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Send SMS	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
SMS Log	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Temperature	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Configuration	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

RTC: 09/12/2007 12:38:35 Site: 594487 SW Rev: 26.09.06

Figure 121: Defining SMS notification targets

Table 10: Fields in the SMS notification target definition screen

FIELD	DESCRIPTION
Phone number	Specify the phone number to which the SMS notification will be sent. The notification includes an indication of the type of alarm.

The remaining fields (the checkboxes) in the screen currently have no effect and are ignored by the system

12.3.10.9 Temperature alarm settings

A single temperature sensor can be connected to the Power+. The “Temperature” option in the menu column enables you to set the normal temperature range, outside of which an alarm will be generated.

The temperature alarm setting screen is shown in Figure 122 below. Only the “Temperature Sensor 1” settings are read by the Power+; the data fields for sensors 2 – 5 are ignored. It is recommended to set the low and high temperature limits close to the Power+ recommended operating temperature range, as listed in the POWER+ Freestyle specifications on page 102.

Firmware version 02.06	
Main	Temperature alarm setting
Analysis	
Load	Temperature Sensor 1
Modules	Low limit: <input type="text" value="-20"/> <input checked="" type="checkbox"/> Enabled
STSW	High limit: <input type="text" value="60"/>
Power+ Log	Temperature Sensor 2
Power+ Control	Low limit: <input type="text" value="-20"/> <input checked="" type="checkbox"/> Enabled
Send SMS	High limit: <input type="text" value="60"/>
SMS Log	Temperature Sensor 3
Temperature	Low limit: <input type="text" value="-20"/> <input checked="" type="checkbox"/> Enabled
Configuration	High limit: <input type="text" value="60"/>
	Temperature Sensor 4
	Low limit: <input type="text" value="-20"/> <input checked="" type="checkbox"/> Enabled
	High limit: <input type="text" value="60"/>
	Temperature Sensor 5
	Low limit: <input type="text" value="-20"/> <input checked="" type="checkbox"/> Enabled
	High limit: <input type="text" value="60"/>
	<input type="button" value="Apply"/> <input type="button" value="Reset"/> <input type="button" value="Back"/>
RTC: 09/12/2007 12:39:23 Site: 594487 SW Rev: 26.09.06	

Figure 122: Set temperature alarm threshold

13. POWER+ FREESTYLE SPECIFICATIONS

Table 11: Specifications

POWER+ TECHNICAL DATA	
Topology	True On-line Battery, Double Conversion, VFI
Construction	Modular parallel hot-plugged modules
Operation	Continuous
Input	
Voltage (V)	3 × 208+ N (3x120 V)
Voltage range (%)	+15 and -25
Current (A)	28 A per module – no inrush current at startup
Frequency (Hz)	47–63
Power walk-in (sec)	> 60
Power Factor	0.99
THDI (%)	5
Output	
Rated power for 3-3 configuration:	10 kVA / 8 kW to 100 kVA / 80 kW
for 3-2 configuration:	10 kVA / 8 kW to 40 kVA / 32 kW
for 2-2 configuration:	10 kVA / 8 kW to 37.5 kVA / 30 kW
Frequency tracking range (Hz)	±2
Slew rate	1 Hz / sec
Voltage (V)	3 × 208+ N (3x120 V)
Static Regulation (%)	±1
Regulation for unbalanced load (%)	±1 for 100% unbalanced load
Dynamic resp. to 100% load step (%)	±2
Overload	110 % for 10 min., 125 % for 60 sec. 1000 % for 1 cycle
Waveform	Sinusoidal
THD (%)	Less than 2 for linear load
Load CF	4:1
Ac-Ac efficiency (nominal) %	Up to 94 at full load
Dc-Ac efficiency (nominal) %	Up to 97 at full load
Batteries	
Dc-Link Voltage (V)	±160 to ±216
Quantity	32 × 12 V
Type	Sealed, lead acid, rechargeable
General	
Maximum power dissipation (Po=8KW)	N*510W (N*998 BTU)
Ambient temperature operation: °F (°C) storage: °F (°C)	+14 to +104 (-10 to +40) -4 to +140 (-20 to +60)
Relative humidity (%)	95 max., non-condensing
Altitude (m)	1500 without derating
Enclosure	IP20
Cooling system	Multi-Fan with speed control (forced)
Standards	
EMC emissions	IEC 62040-2; FCC part 15/B
Safety	UL1778; IEC 62040-1-1
Design	IEC 62040-3
Low magnetic field radiation	EMF as per ICNIRP

All specifications are subject to change without notice.

Gamatronic Electronic Industries Ltd.

Dimensions (U.S. measurements)										
UPS type	10 kVA	20 kVA	30 kVA	40 kVA	50 kVA	60 kVA	70 kVA	80 kVA	90 kVA	100 kVA
Height (in)	38 1/4					55 3/4				
Width (in)	23.6									
Depth (in)	27.2					39.0				
Weight (lbs)	137	157	176	196	216	289	309	328	348	368
Dimensions (metric measurements)										
UPS type	10 kVA	20 kVA	30 kVA	40 kVA	50 kVA	60 kVA	70 kVA	80 kVA	90 kVA	100 kVA
Height (cm)	97.2					141.6				
Width (cm)	60									
Depth (cm)	69					99				
Weight (kg)	62	71	80	89	98	131	140	149	158	167
Acoustic Noise										
Noise (dBA) with half load	48	52	53	54	55	55.8	56.4	57	57.5	58
Noise (dBA) with full load	51	54	55	57	58	58.8	59.4	60	60.5	61

SYSTEM CONTROLLER – TECHNICAL DATA	
Micro Controller core	16 bit
Display	4 × 40 characters LCD with backlight
Other indicators	8 LEDs, buzzer
Analog input channels	4
Digital input channels	8
Real Time Clock (RTC)	Yes, with backup
Power meter	kVA, kW, PF
Volt-free outputs (dry contacts)	6 outputs, rated 50V/1A
RS232 user port	Yes, isolated
Optional communication	TCP/IP, GPRS/SMS Wireless communications(Optional)
Communications with system modules	Serial, isolated
Events log	255 events
System operation without controller	Unchanged
On-screen parameters	Load bar-graph 3-phase voltages 3-phase currents Battery voltage Status of each UPS module Static-switch parameters and status Battery sensor temperature
Alarms	AC failure DC failure UPS module(s) failure Load on bypass Battery test failure Over/under temperature Overload (Contacts rated max. 48V 1A)
RTC operation without power	2 weeks
Power requirements	3 × 208 Vac / ±216 Vdc, 15W



Gamatronic Building, Jerusalem, Israel

Gamatronic's product range:

- ▶ UPS Systems
- ▶ Power systems for Telecom
- ▶ DC-to-AC Inverters
- ▶ DC-to-DC Converters
- ▶ Frequency Changers
- ▶ Battery Chargers
- ▶ Power Management Solutions

Headquarters and Factory 14 Hartom Street, Har Hotzvim Industries Park, POB 45029, Jerusalem 91450, Israel Tel: +972-2-588-8222 Fax: +972-2-582-8875

Tel-Aviv Sales Office 34 Habarzel Street, Ramat Hachayal, Tel-Aviv 69710
Tel: +972-3-6499940 Fax +972-3-6449791

Gamatronic Singapore Sales Office email: singapore@gamatronic.co.il

Gamatronic (UK) Ltd. 15 Chester Road, Eaton Socon, St. Neots, Cambridgeshire PE19 8YT, United Kingdom Tel: +44 (0)1480.479.889 Fax: +44 (0)1480.407.865 email: info@gamatronic.net