

Features and Benefits

- ▶ Provides isolated dry contact Form-C relay outputs for "utility failure," "low battery," UPS alarm/OK, or "on bypass"
- ▶ User-selectable "normally open" (N/O) or "normally closed" (N/C) contacts
- ▶ Shutdown function to remotely shutdown UPS
- ▶ Hot-swappable
- ▶ DB-15 output connection; terminal block outputs on X-slot card
- ▶ Cables available for AS/400 applications
- ▶ Works with any Powerware UPS equipped with an X-slot, in addition to the Powerware 9120 and Powerware 9170+
- ▶ Increases reliability and system availability

X-slot Relay Interface

Card supports:


- Powerware 9340
- Powerware 9330
- Powerware 9125
- Powerware 5125

BestDock Relay Interface

Card supports:

- Powerware 9120
- Powerware 9170+

Relay Interface Card

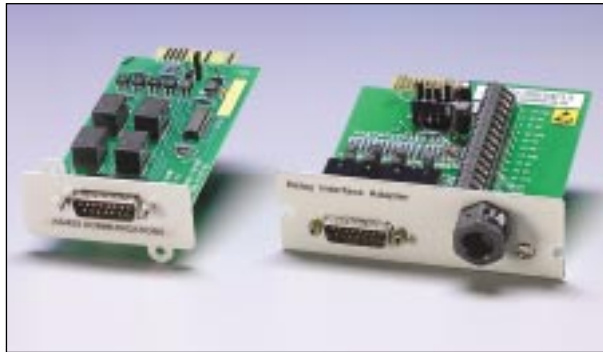

Communications and control are at the heart of any reliable UPS solution. Powerware relay interface cards provide shutdown and monitoring of UPS status through a connected computer.


The relay interface cards come in two models, the X-slot version and BestDock version. Both are dedicated adapters that provide the essential dry-contact interface between your Powerware UPS and any relay-connected computer, including the AS/400, as well as a variety of industrial applications.

The X-slot relay interface card is designed to function with all Powerware UPS products equipped for X-slot communications, which include the Powerware 5125, Powerware 9125,

Powerware 9330 and Powerware 9340. The BestDock relay interface card is designed to work specifically with the Powerware 9120 and Powerware 9170+.

These relay interface cards include a remote shutdown feature, using which the UPS shutdown is performed by connecting the relay interface card shutdown pin (15) to +12VDC (Pin 13) for a minimum of 5 seconds.

The BestDock Relay Interface Card shutdown feature functionality depends on the jumper (JP1, JP2 & JP3) selected on the board and on the UPS mode (normal or on-battery).

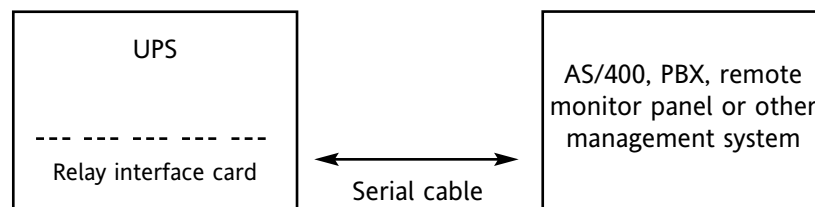

UPS to supported contacts matrix

PW UPS	Line Fail	Low Batt	UPS Alarm/OK	Bypass
PW 5125	X	X		
PW 9120	X	X	X	X
PW 9125	X	X		
PW 9170+	X	X	X	X
PW 9330	X	X		X
PW 9340	X	X	X	X

Note: UPS alarm/OK and bypass relay information are not available for PW 5125 and PW 9125 UPSs.

Relay interface card contact information

The relay contacts must not be galvanically connected to any mains-connected circuits. Do not use +12VDC (Pin13) of the relay interface card for any power supply purposes for external devices. Reinforced insulation to the mains is required for equipment and cables attached to these connections. Relay contacts are rated for maximum 1A/30VAC or 200mA/60VDC. All relay outputs are galvanically isolated from the other circuits of the UPS.

Description of relay interface card pins and relay information

Relay # on board	System State	DB-15 pin#	NC/N0*
K1: AC Line	AC line OK	1-2	NC
K2: Battery	AC line failure	1-3	NO
	Battery normal	4-5	NC
K3: UPS Alarm	Battery low	4-6	NO
	UPS alarm	7-8	NC
	UPS ON/OK	7-9	NO
K4: Bypass	UPS on bypass	10-12	NC
	UPS normal/on inverter	10-11	NO
	UPS shutdown**	13-15	

Normally-closed (NC)/-open (NO) connection state when the relay interface card is not powered. **The shutdown pin (15) needs minimum of 5 seconds high level signal (connection to +12VDC) to perform the UPS shutdown. Shutdown function is not available for 9125, 9330, and 9340.

BestDock Relay Interface Card shutdown function

		JP1 (factory default)	JP2	JP3
PW 9120	UPS normal	---	Immediate output off, online when shutdown pins are opened	Immediate output off
	On battery	Shutdown as in RS-232 port; Output off after 120 sec., back online when power returns	Immediate output off, online when shutdown pins are opened	Immediate output off
PW 9170+	UPS normal	---	---	Immediate output off
	On battery	---	Immediate output off	Immediate output off

Invensys Powerware
8609 Six Forks Road
Raleigh, NC 27615 U.S.A.
Toll Free: 1.800.356.5794
or 919.872.3020
Fax: 1.800.753.9433
www.powerware.com

Europe
Finland: 358 94 52 661
France: 33 1 6012 7400
Germany: 49 721 961790
Italy: 39 02 6600661 2
UK: 44 (0) 1753 608700

Southeast Asia
Singapore: 65 6861 0377

China and North Asia
Hong Kong: 852 2745 6682

Japan
Shinagawa, Tokyo: 81 3 3447 4441

Australia and South Pacific
Sydney, Australia: 61 29878 5000

Canada
Toronto, Ontario: 416.798.0112

Brazil
Sao Paulo, Brazil: 55 11 3845
4369/ 55 11 3704 3632

Mexico
Col. Napoles, Mexico:
525.488.3333

